



# Assembly Diagram: 882 - 2 Drawer Flat bobbin Storage

Always dry fit first then use a suitable wood adhesive

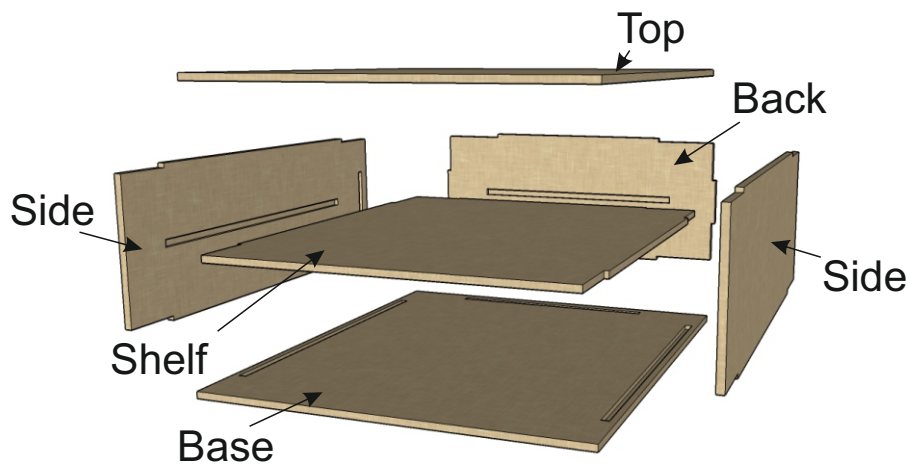

## Drawer

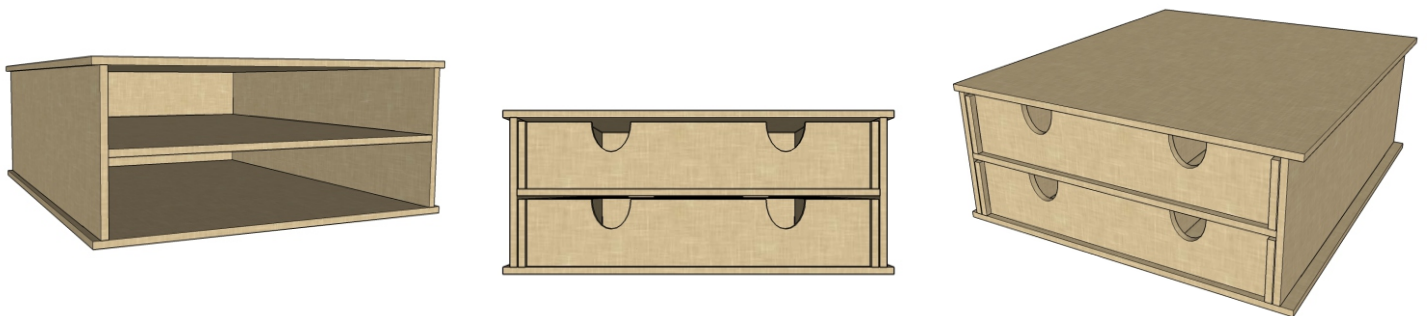