


Under Sink Installation

- Insert 1-3/4" Plastic Adapters into Filtered & Instant Hot Water Silicone Tubes. Secure with Pinch-Clamps.
- Push hoses/tubes into Cross Quick-Connect Manifold using colors as your guide.
- Install pull-down weight on black hose where labeled.
- Connect shut-off valve to cold water supply line.
- Connect faucet supply hoses to the cold/hot water supply lines.
- Mount filter on cabinet side.
Note: Mounting-Bracket shipped attached to head of filter. Remove to install.
- Push one end of filter tubing (A) into cold water supply shut-off valve.
- Push other end of filter tubing (A) into inlet on top of leak detector.
- Push one end of filter tubing (A) into outlet on side of leak detector.
- Push other end of filter tubing (A) into inlet of filter.
- Push one end of filter tubing (A) into outlet of filter.
- Push other end of filter tubing (A) into Green inlet on top of dispenser.
- Connect Filtered Water Silicone Tube to **Blue** Outlet on top of dispenser. Secure with Pinch-Clamp.
- Connect Instant Hot Water Silicone Tube to **Red** Outlet on top of dispenser. Secure with Pinch-Clamp.
- Connect Data Lines from faucet and dispenser.

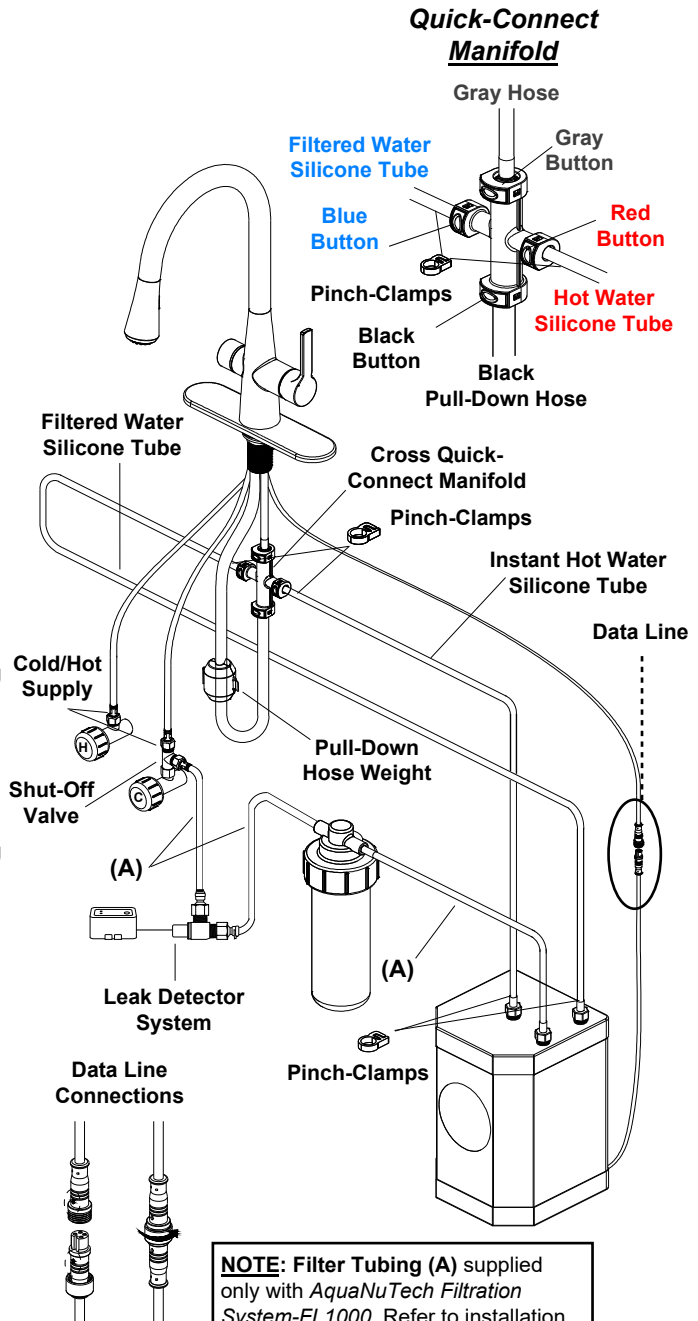

NOTE: Filter Tubing (A) supplied only with AquaNuTech Filtration System-FL1000. Refer to installation materials provided if using other brand of filtration system.