

BLK BOX


FREESTANDING RIG

ASSEMBLY




M10 HARDWARE

1.

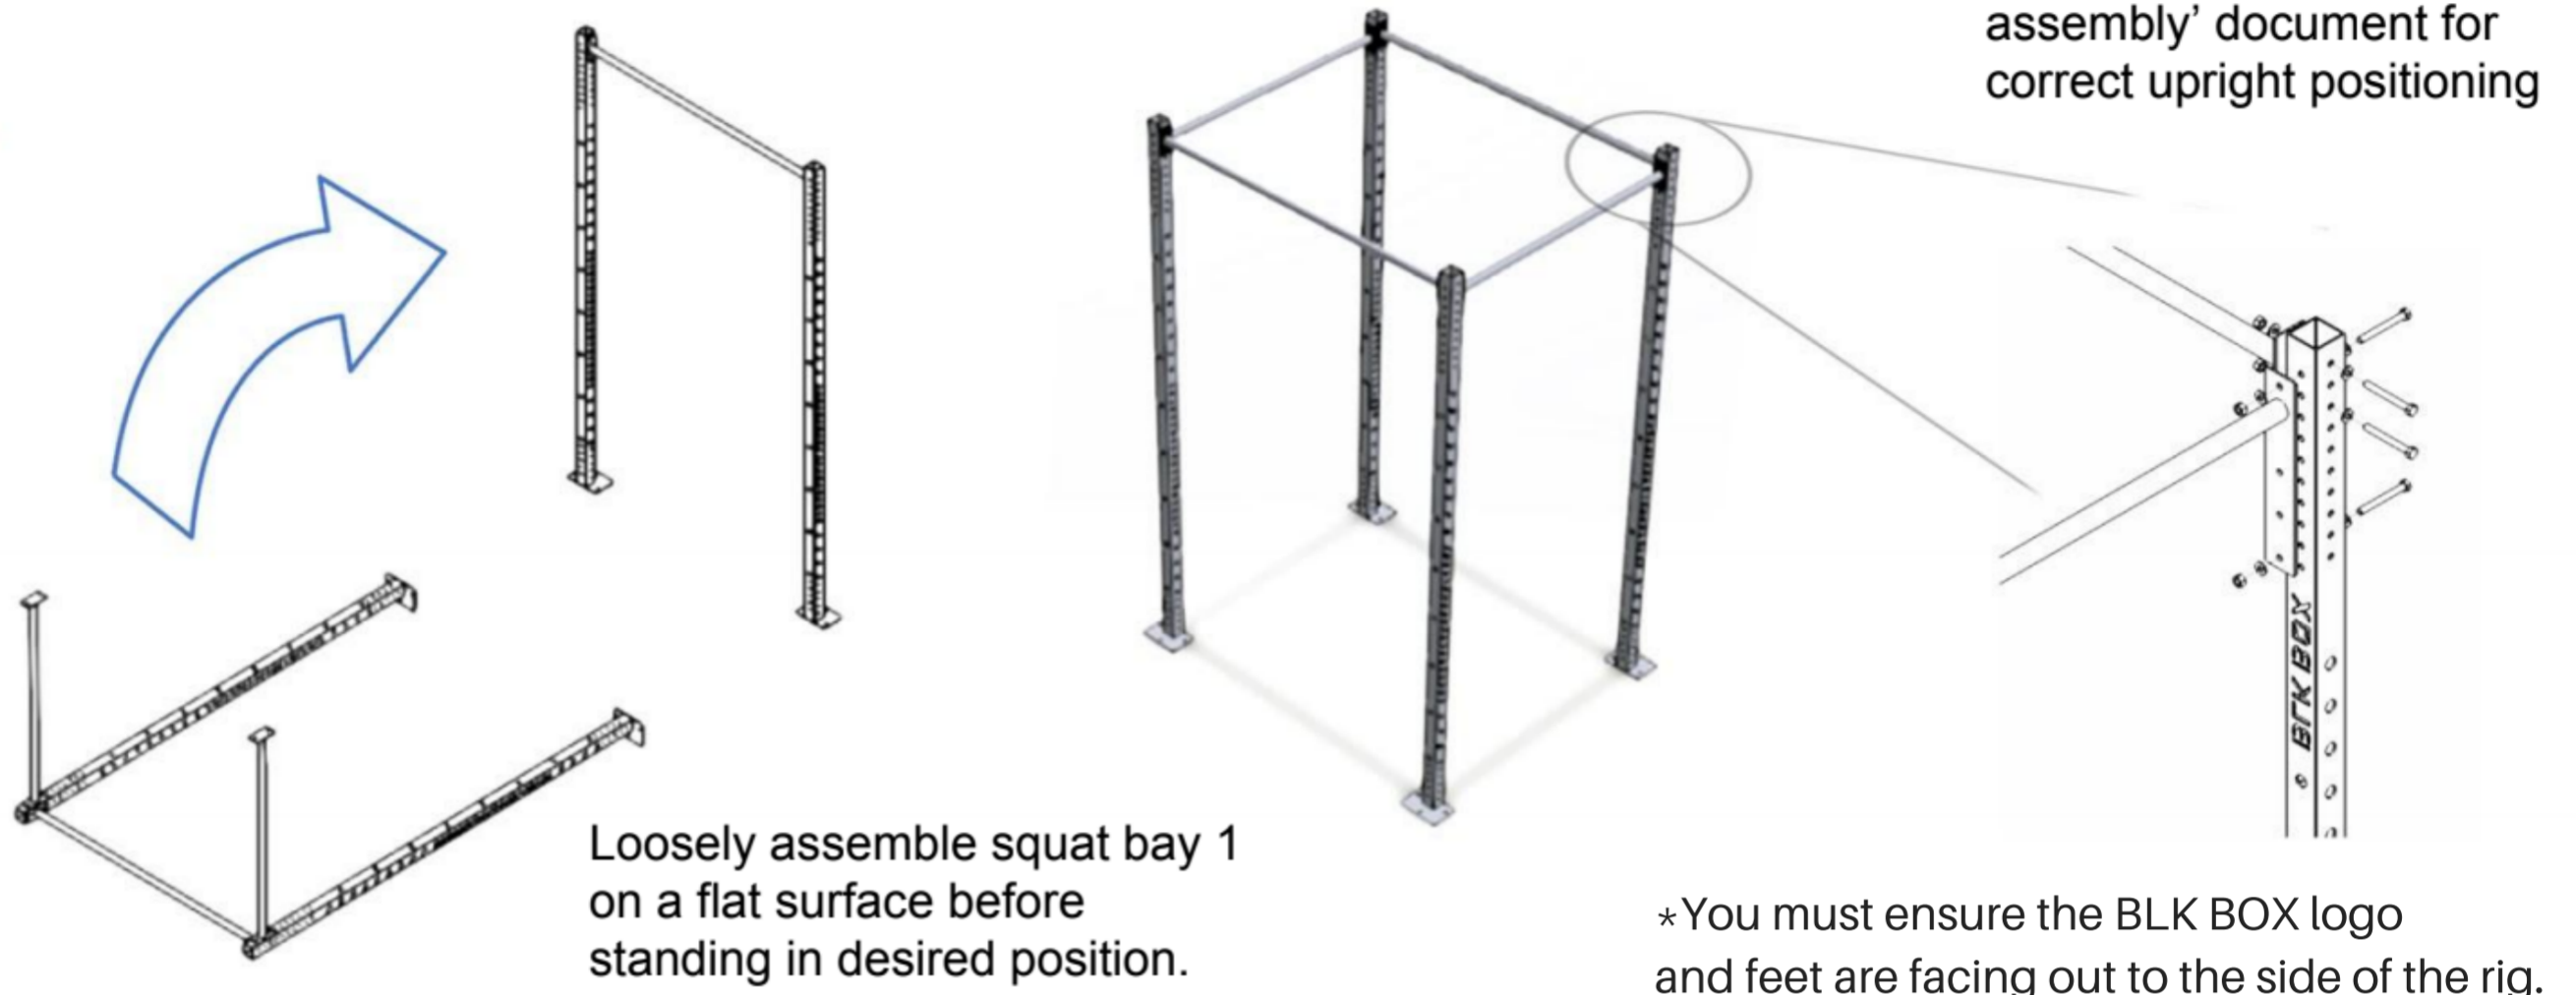

2.

In the same fashion assemble 1 side of the mid section including the connecting bar then stand up and align alongside squat bays 1 & 2

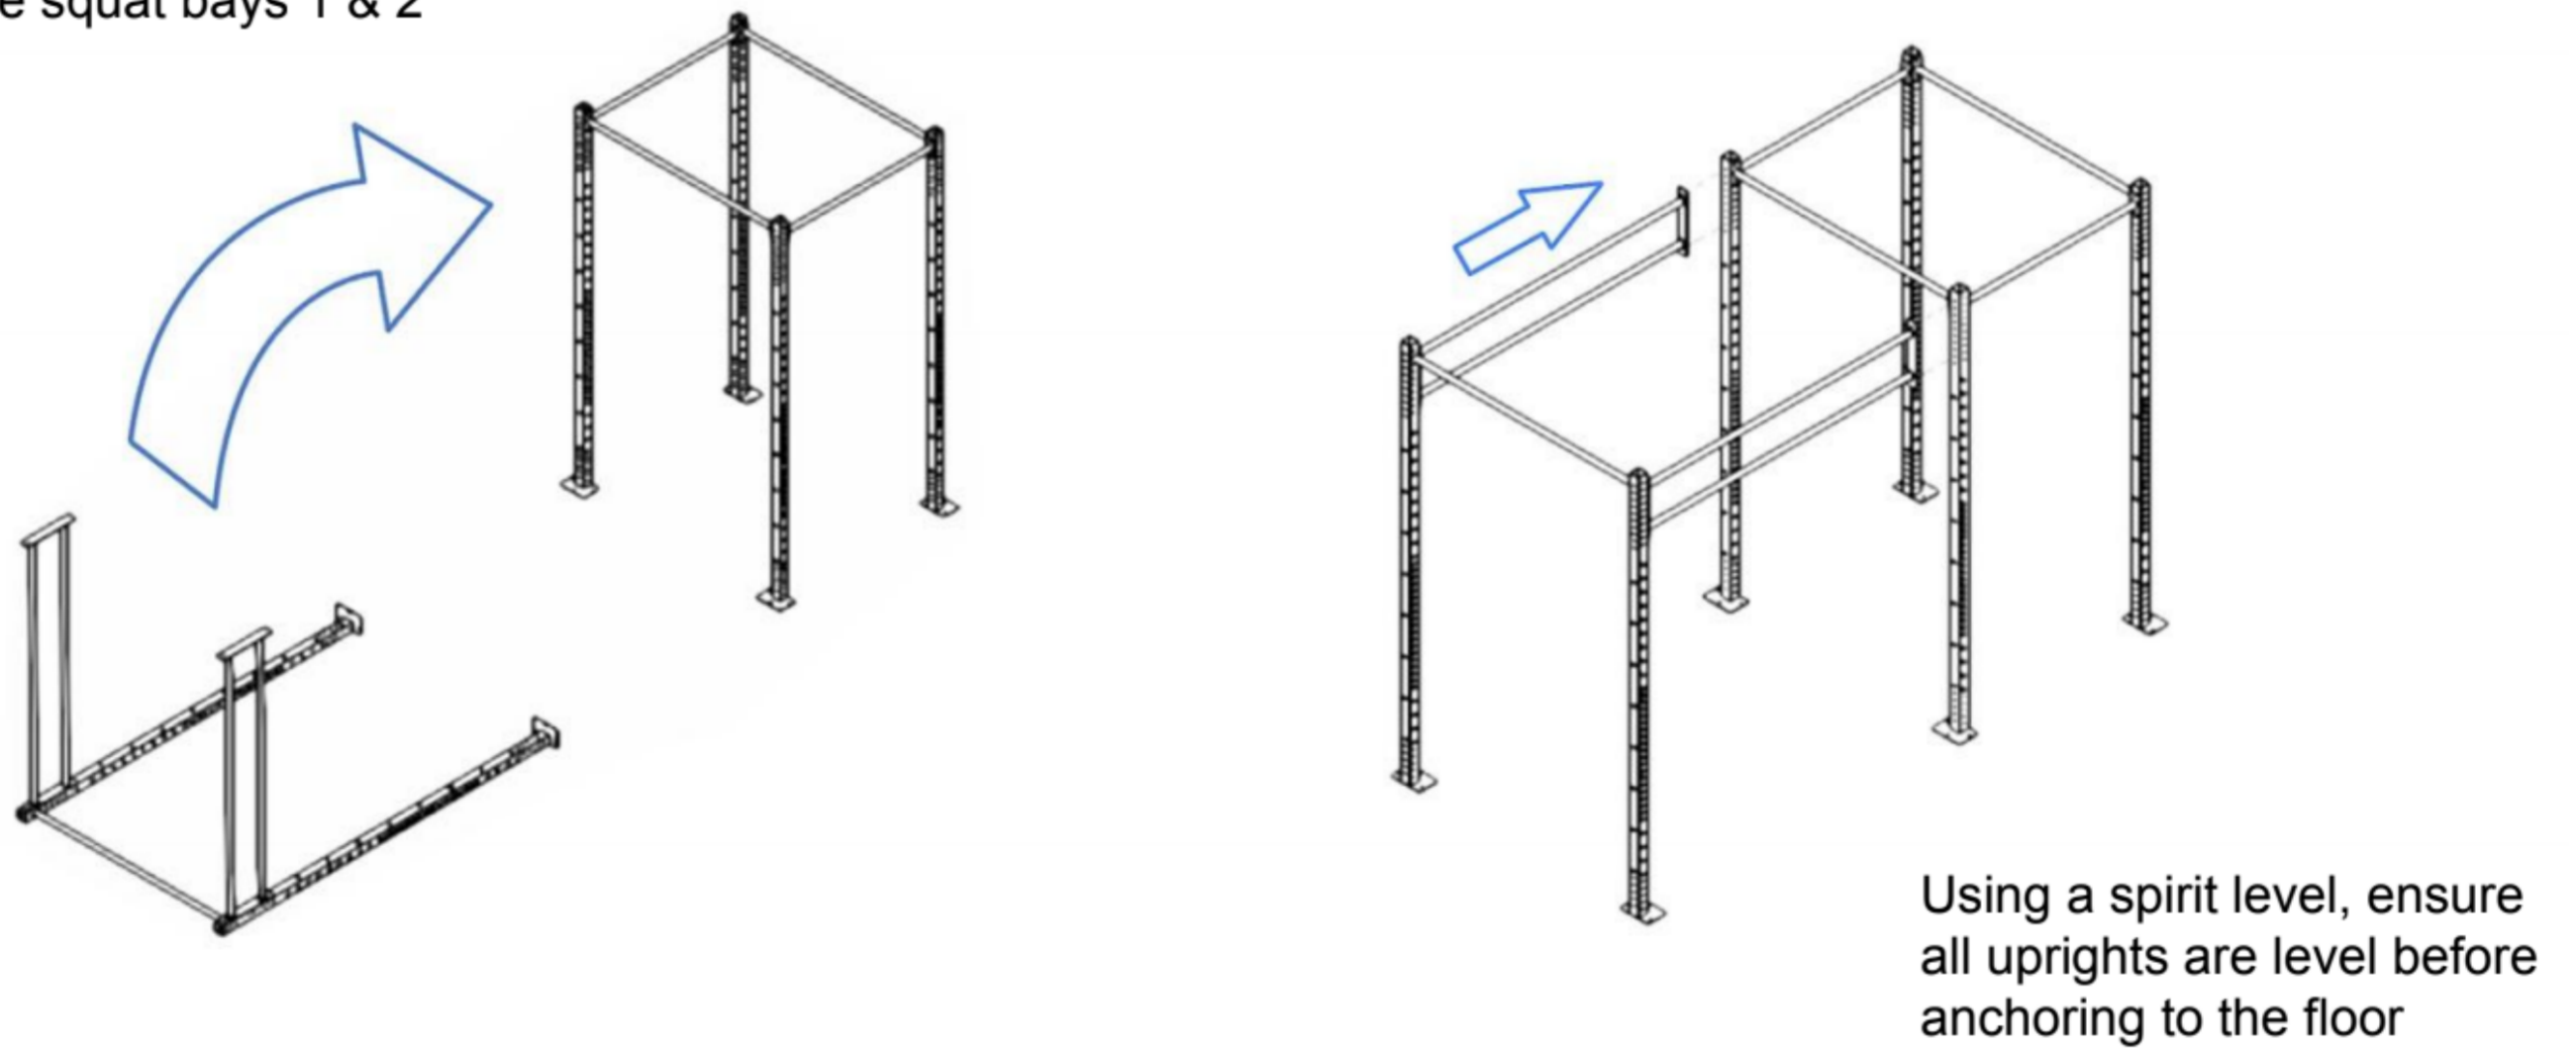

3.

Continue in this fashion until your desired number of bays have been assembled.

