


INSTALLATION INSTRUCTIONS: WALL SCONCES WITHOUT TOP CAPS (LIDS) – APPROPRIATE FOR DAMP (NOT WET) LOCATIONS

These instructions apply to Idaho Wood Lamps 258, 268 and 282, without top caps (lids).

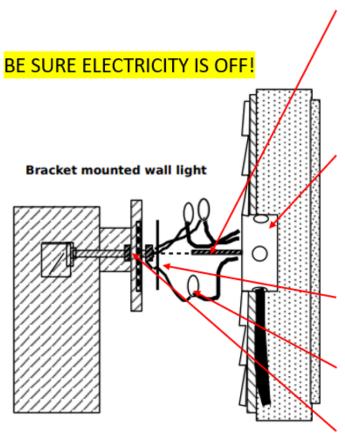

- Screw the headless, threaded, studs (included) into a standard electrical box with cover plate mounting holes 2-3/4" apart and level on the horizontal axis.
- If the box has not been mounted so that the threaded stud holes are level, a universal plate (not included) will be required to allow leveling of the fixtures.
- Place the rubber gasket (included) against the fixture back plate.
- Make standard wire connections; the fixture should be grounded.
- Slide the fixture over the threaded studs and secure the brass nuts.

NOTE: Damp locations are those which <u>are covered</u> by eaves. Damp locations may include those interior locations protected from weather but subject to moisture, such as some basements, some barns, some cold storage rooms. Partially protected areas under canopies, marquees and roofed open porches are also considered "damp" locations. This light is intended for installation more than three (3) feet above ground level. Max wattage is 25W (LED or incandescent).

Your Lamp has been hand crafted to exacting standards of craftsmanship. It is made of top quality, sustainably sourced western red cedar. We hope you enjoy its light and beauty—the entire IW team is grateful for your business!