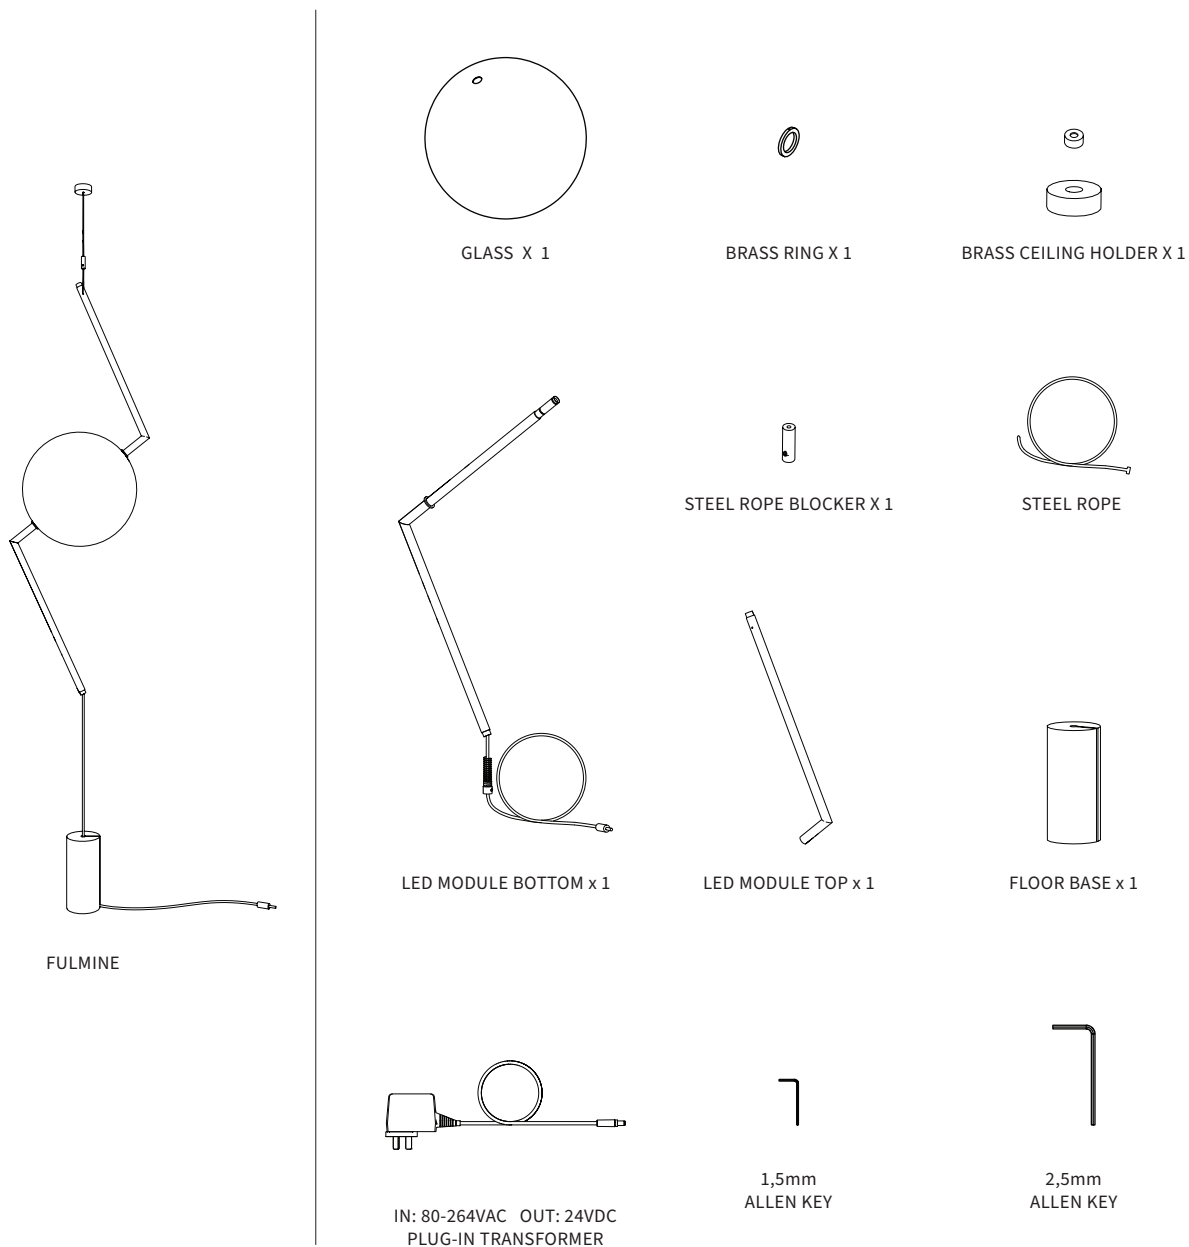


# SilvioMondinoStudio

Fulmine Light  
Installation Guide - Rev. 01/20

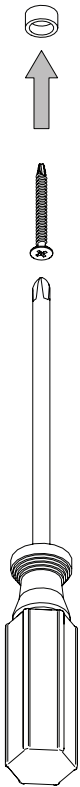
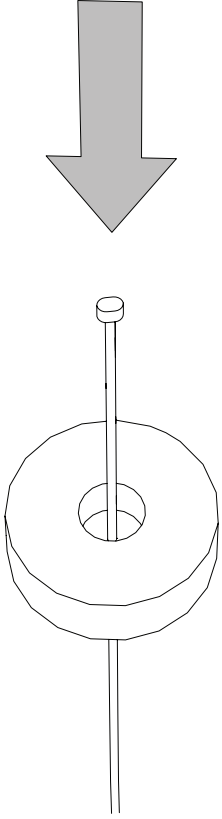
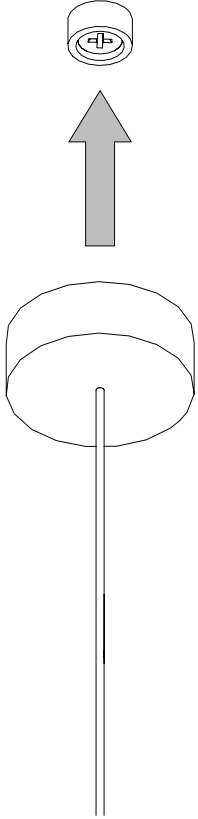
## COMPONENTS



## SAFETY INFORMATION

THE CLIENT IS RESPONSIBLE TO ENSURE THAT THE CEILING HAS ADEQUATE STRUCTURAL SUPPORT FOR THE LAMP.  
 SUITABLE FOR DRY, INDOOR USE ONLY.  
 MAXIMUM AMBIENT TEMPERATURE: 30°C

CEILING HOLDER ASSEMBLY

		
<p>1 - INSTALL THE HANGSTRAIGHT NUT ON THE CEILING USING SELF-TAPPING SCREW</p>	<p>2 - INSERT THE STEEL ROPE INTO THE BRASS CANOPY</p>	<p>3 - SCREW THE CANOPY ONTO THE HANGSTRAIGHT NUT ON THE CEILING</p>

NOTE

PLEASE CONTACT A LICENSED ELECTRICIAN.

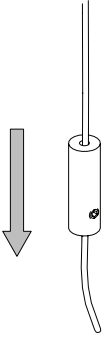
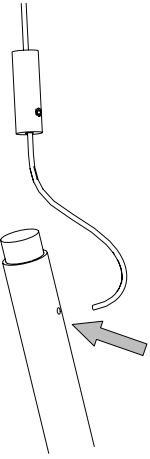
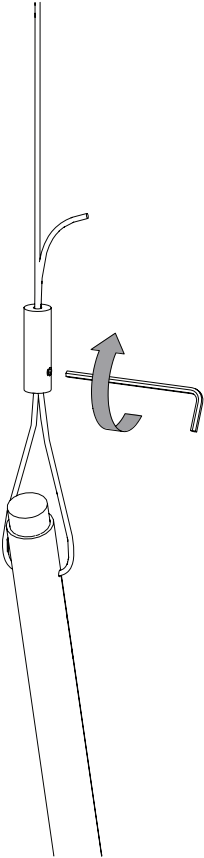
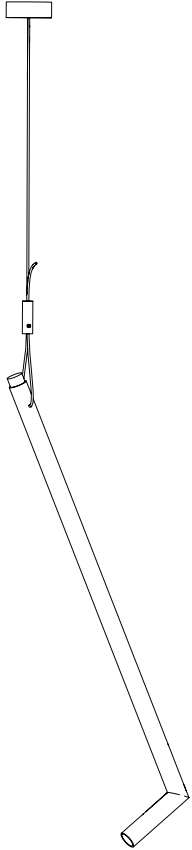
**USE NITRILE GLOVES TO HANDLE THE COMPONENTS TO AVOID FINGERPRINTS.**

ALL BRASS FINISHES ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX.

THE FINISH IS LIVE AND IS INTENDED TO PATINA OVER TIME.

WE TRY OUR BEST FOR ALL GOODS TO LEAVE OUR PREMISES IN PRISTINE CONDITION, BUT SOMETIMES PRODUCTS MAY ARRIVE WITH MINOR OXIDISATION MARKS, REVEALING THE HIGH CRAFTSMANSHIP PROCESS.

LAMP ASSEMBLY

 <p>1</p>		
 <p>2</p>		
<p>4/1 - INSERT THE STEEL ROPE INTO THE BLOCKER</p> <p>4/2 - INSERT THE STEEL ROPE INTO THE STEM</p>	<p>5 - INSERT THE STEEL ROPE AGAIN INTO THE BLOCKER</p> <p>SECURE IN PLACE WITH SET SCREW USING THE PROVIDED 1,5 MM ALLEN-KEY</p>	<p>6 - LEAVE THE STEM FREE TO FLOAT WHILE PROCEEDING WITH THE OTHER STEPS</p>

NOTE

PLEASE CONTACT A LICENSED ELECTRICIAN.

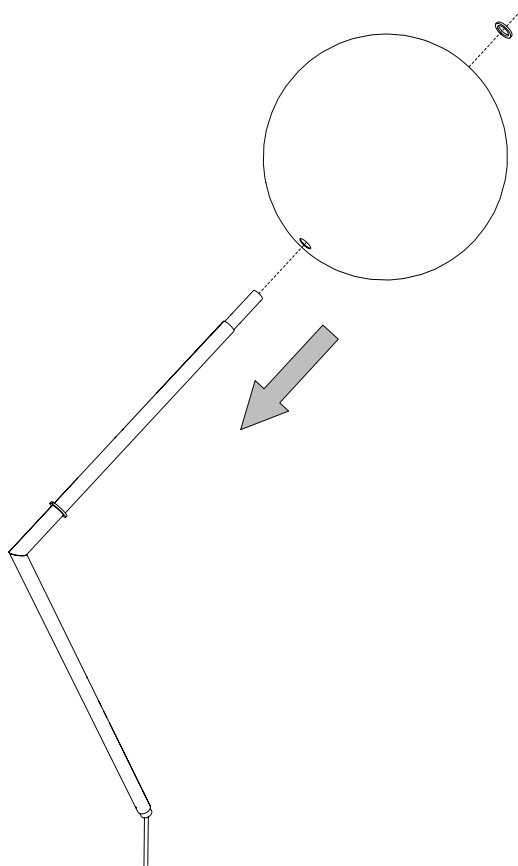
**USE NITRILE GLOVES TO HANDLE THE COMPONENTS TO AVOID FINGERPRINTS.**

ALL BRASS FINISHES ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX.

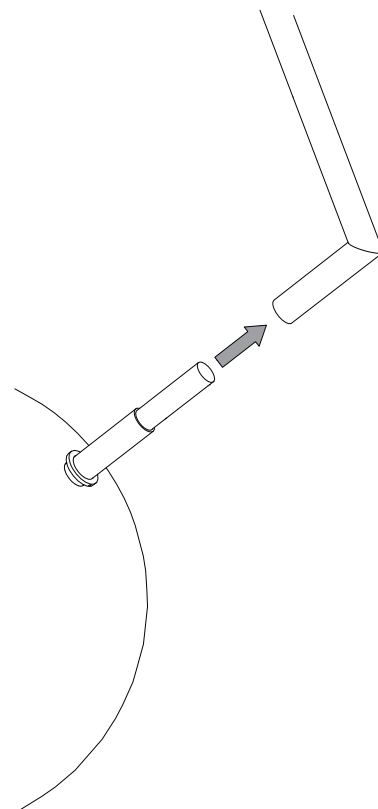
THE FINISH IS LIVE AND IS INTENDED TO PATINA OVER TIME.

WE TRY OUR BEST FOR ALL GOODS TO LEAVE OUR PREMISES IN PRISTINE CONDITION, BUT SOMETIMES PRODUCTS MAY ARRIVE WITH MINOR OXIDISATION MARKS, REVEALING THE HIGH CRAFTSMANSHIP PROCESS.

LAMP ASSEMBLY



7 - SLIDE THE GLASS SPHERE AND THEN THE BRASS RING ONTO THE LED MODULE



6 - CONNECT THE LED MODULE WITH THE UPPER ROD.

NOTE

PLEASE CONTACT A LICENSED ELECTRICIAN.

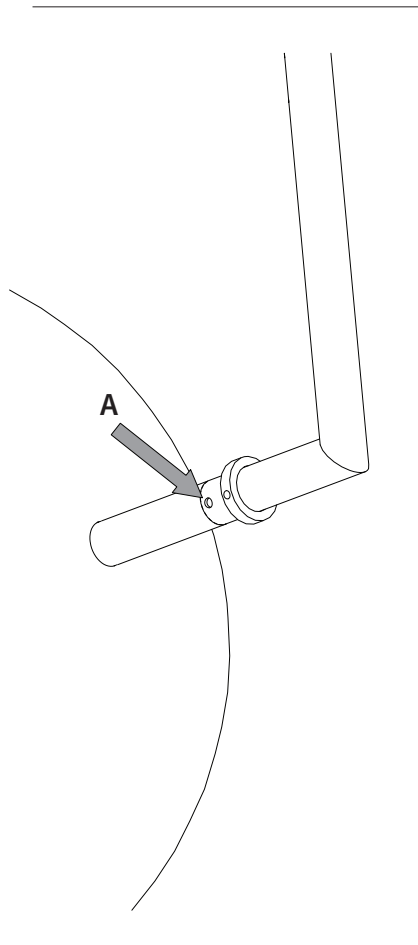
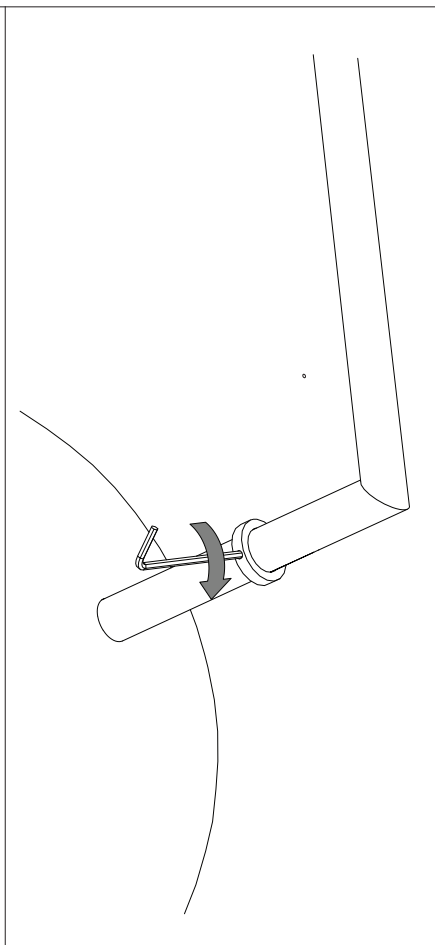
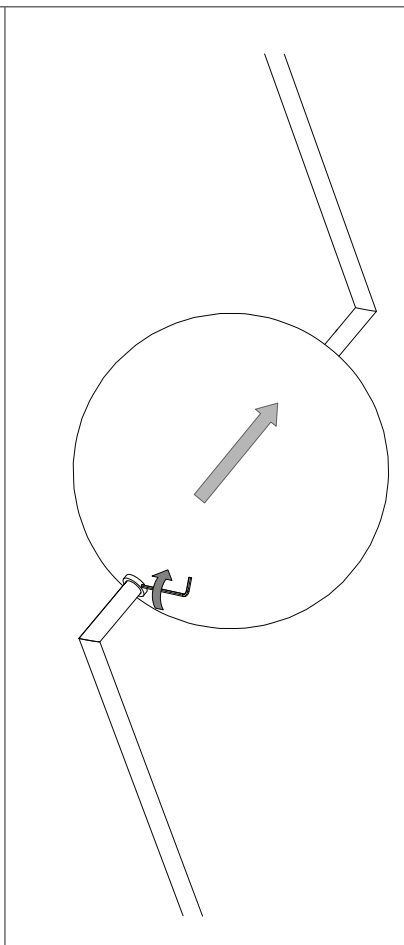
**USE NITRILE GLOVES TO HANDLE THE COMPONENTS TO AVOID FINGERPRINTS.**

ALL BRASS FINISHES ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX.

THE FINISH IS LIVE AND IS INTENDED TO PATINA OVER TIME.

WE TRY OUR BEST FOR ALL GOODS TO LEAVE OUR PREMISES IN PRISTINE CONDITION, BUT SOMETIMES PRODUCTS MAY ARRIVE WITH MINOR OXIDISATION MARKS, REVEALING THE HIGH CRAFTSMANSHIP PROCESS.

LAMP ASSEMBLY

		
<p>7 - LOCATE THE HOUSING HOLE (A)</p>	<p>8 - LOCK IN PLACE THE RING PAYING ATTENTION TO SCREW THE RING INTO THE HOUSING HOLE.</p> <p><b>THE SET SCREW MUST BE LOCKED INTO THE HOUSING HOLE TIGHTENING THE LED MODULE PIN.</b></p> <p>USE THE 1,5MM ALLEN KEY</p>	<p>9 - RISE UP THE GLASS AND LOCK THE GLASS IN POSITION USING SCREWING THE RING WITH THE 1,5MM ALLEN KEY.</p>

NOTE

PLEASE CONTACT A LICENSED ELECTRICIAN.

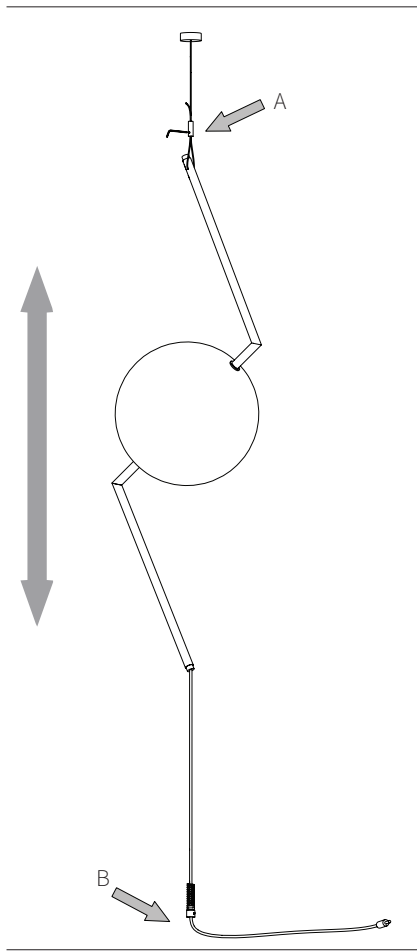
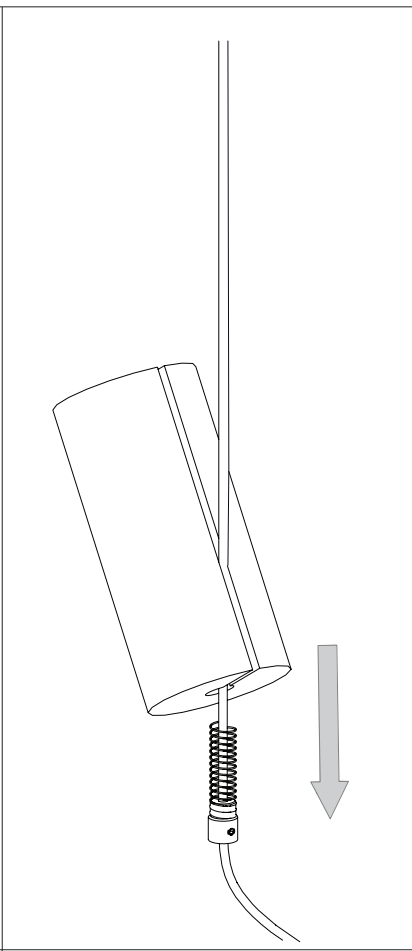
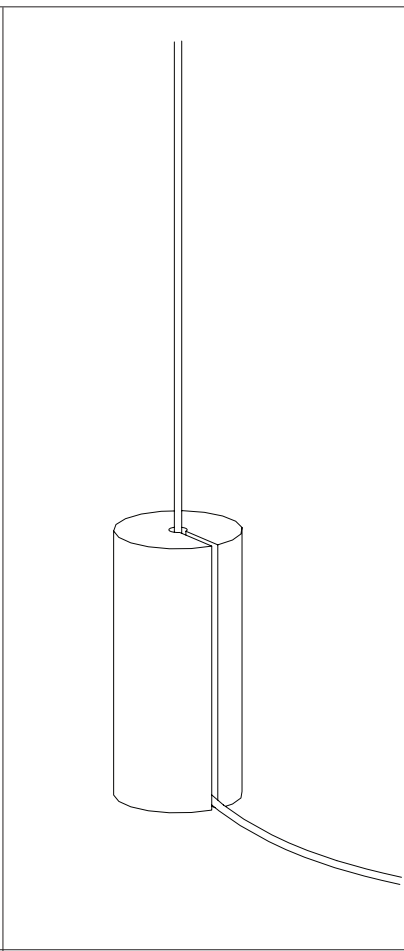
**USE NITRILE GLOVES TO HANDLE THE COMPONENTS TO AVOID FINGERPRINTS.**

ALL BRASS FINISHES ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX.

THE FINISH IS LIVE AND IS INTENDED TO PATINA OVER TIME.

WE TRY OUR BEST FOR ALL GOODS TO LEAVE OUR PREMISES IN PRISTINE CONDITION, BUT SOMETIMES PRODUCTS MAY ARRIVE WITH MINOR OXIDISATION MARKS, REVEALING THE HIGH CRAFTSMANSHIP PROCESS.

LAMP PLACEMENT

		
<p>9 - PLACE THE LAMP AT THE DESIRED HEIGHT ADJUSTING THE "A" POINT USING THE PROVIDED ALLEN KEY</p>	<p>10 - POSITION THE SPRING UP TO ONE INCH FROM THE FLOOR              PLEASE NOTE: DO NOT EXCEED THIS MEASURE</p> <p>SLIDE THE SPRING INSIDE THE BASE THROUGH THE SLOT</p>	<p>11 - SETUP THE BASE IN PLACE AS SHOWN</p>

NOTE

PLEASE CONTACT A LICENSED ELECTRICIAN.

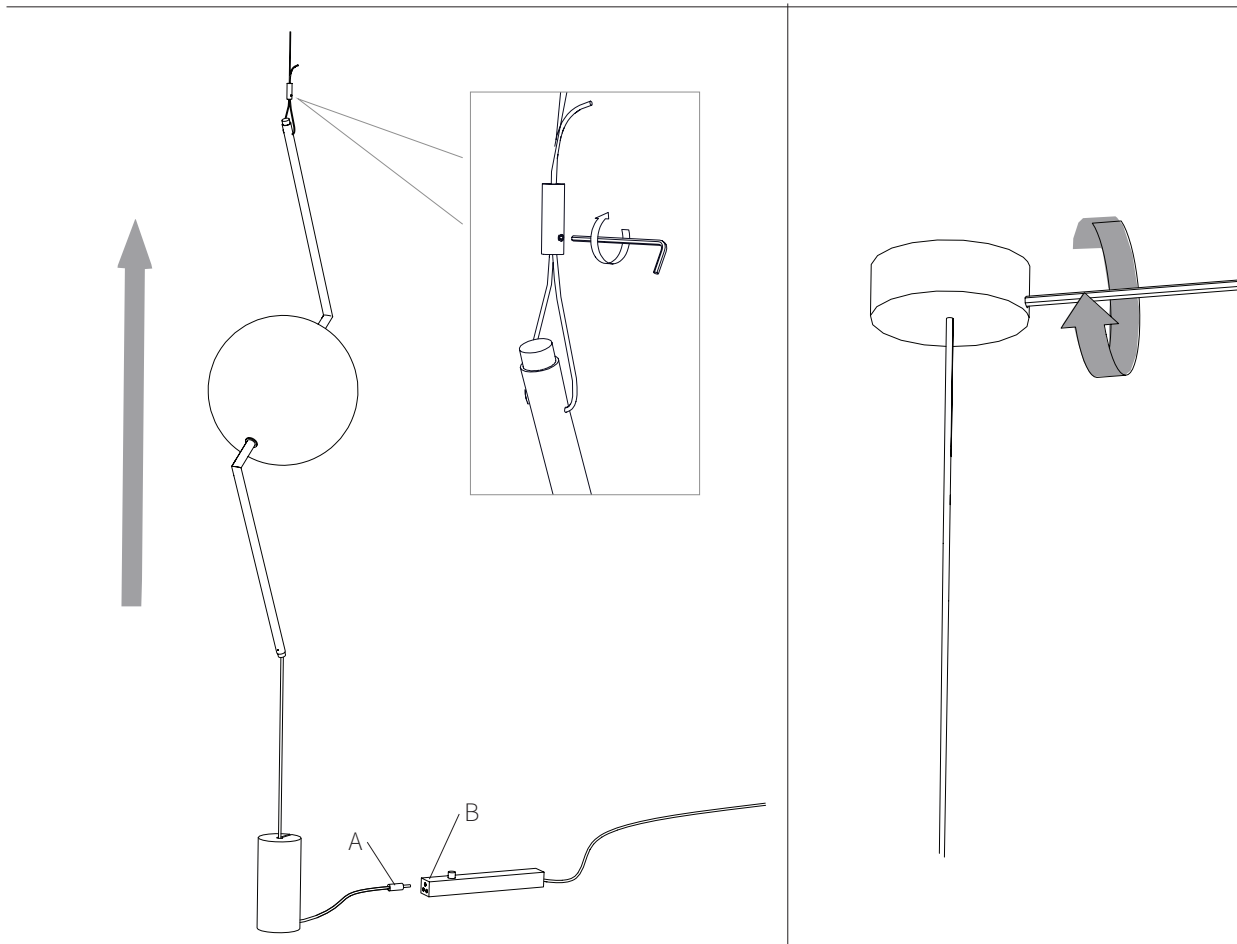
**USE NITRILE GLOVES TO HANDLE THE COMPONENTS TO AVOID FINGERPRINTS.**

ALL BRASS FINISHES ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX.

THE FINISH IS LIVE AND IS INTENDED TO PATINA OVER TIME.

WE TRY OUR BEST FOR ALL GOODS TO LEAVE OUR PREMISES IN PRISTINE CONDITION, BUT SOMETIMES PRODUCTS MAY ARRIVE WITH MINOR OXIDISATION MARKS, REVEALING THE HIGH CRAFTSMANSHIP PROCESS.

LAMP PLACEMENT



12 - PULL THE STEEL ROPE UP TO PUT THE STRUCTURE IN TENSION  
**CHECK THAT THE SPRING IS NOT FULLY COMPRESSED**  
**IF THE SPRING IS FULLY COMPRESSED, LOWER DOWN THE**  
**STRUCTURE TENSION**

ROTATE THE LAMP BODY IN THE RIGHT POSITION

13 - PLUG-IN POWER (24VCC) (A) INTO THE POWER HUB (B).  
 THE POWER HUB CAN TAKE IN UP TO THREE CONNECTORS.

14 - ON THE CEILING CANOPY, LOCK THE SUSPENDING ROPE IN PLACE WITH THE 1,5MM ALLEN KEY.

NOTE

PLEASE CONTACT A LICENSED ELECTRICIAN.

**USE NITRILE GLOVES TO HANDLE THE COMPONENTS TO AVOID FINGERPRINTS.**

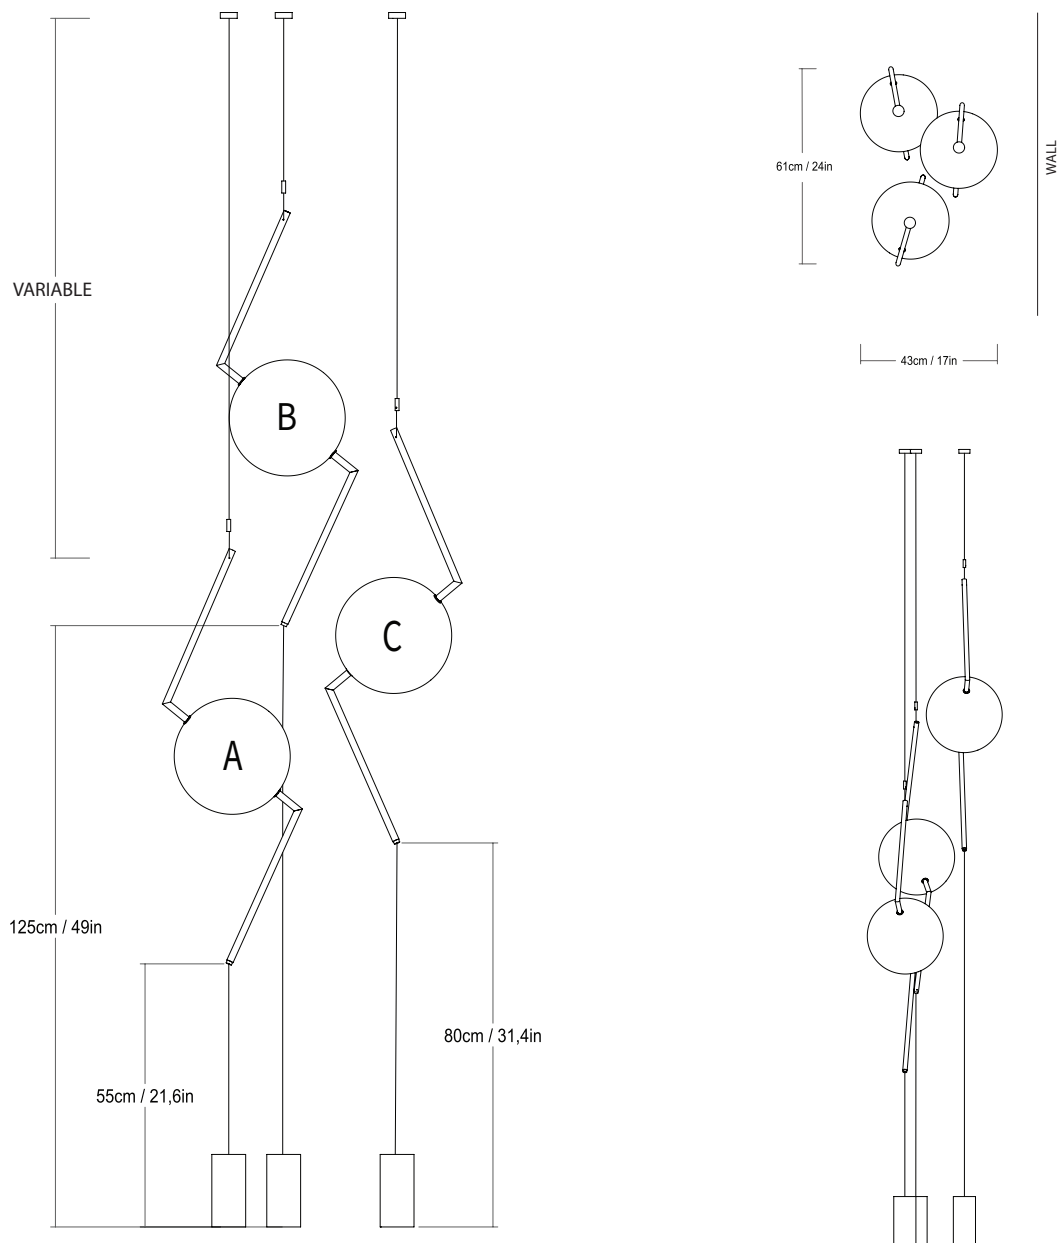
ALL BRASS FINISHES ARE UNLACQUERED AND HAND SEALED WITH A LIGHT LAYER OF WAX.

THE FINISH IS LIVE AND IS INTENDED TO PATINA OVER TIME.

WE TRY OUR BEST FOR ALL GOODS TO LEAVE OUR PREMISES IN PRISTINE CONDITION, BUT SOMETIMES PRODUCTS MAY ARRIVE WITH MINOR OXIDISATION MARKS, REVEALING THE HIGH CRAFTSMANSHIP PROCESS.



FULMINE THREE LIGHTS SUGGESTED SETUP



NOTE

**REFER AT THE PROVIDED DRILLING FORM TO POSITIONING EACH CANOPY**

YOU CAN VARY THE COMPOSITION AS YOU PREFER  
 WE SUGGEST TO LEAVE ENOUGH ROOM BETWEEN EACH GLASS SPHERE AND ADDRESS THE LIGHT TO THE WALL