
Superstrong A-Frame 36x24

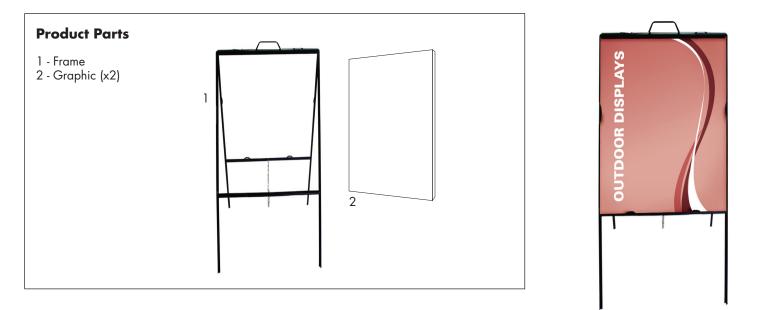

Sign Install and Display Set-Up

Step 1

Carry the A-Frame (1) to the desired location. Separate the front and back segments of the A-Frame (1) until the Chain (3) is taut.



Step 2

Insert the primary graphic into the frame and with one hand holding the frame and graphic - place holes in your graphic at the attachment eyelets with a drill (not included).



Step 3

Attachment hardware does not come standard with the Angle-Iron Frame.

Attach your primary graphic to the frame with your hardware.



Recommended Hardware (not included)

QTY 16 Sheet Metal Bolt - .25'' long x .75'' long QTY 16 Nut - .25'' QTY 32 Washers, .25'' hole, .5'' wide

Storage

Store in a cool dry location.

Care

To clean, wipe with damp cloth.