

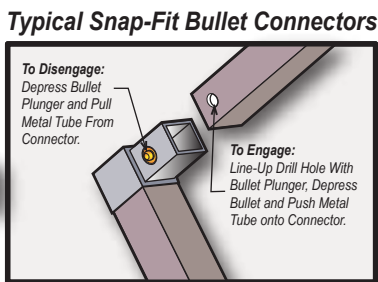
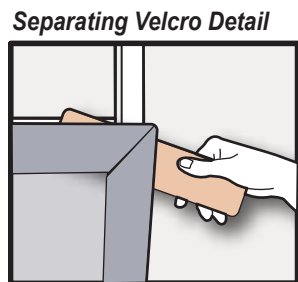
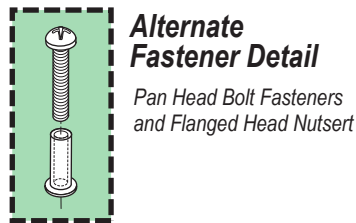


# M-KS Portable Workstation Kiosk

1. Assemble the Pedestal Frame. Frame Members Connect via Snap-Fit Bullet Connectors. Simply line-up the Frame Holes/ Bullet Connectors and push-in to engage. Frames are labeled and should be positioned as shown. Velcro on the Frame Pieces should Face Outward for Panel Attachment. Note: Door is Hinged to Adjacent Vertical Frame.
2. Velcro the 3 Fabric Panels to the Outside Perimeter of the Frame as shown. Align the Holes in the Panels with the Holes in the Frames.
3. Attach the Upper and Lower Curved Vertical Frame Sections together. Connect one Side to the Pedestal using Fasteners Provided in 4 Locations. Attach all Horizontal Frame Members in Place on Curved Vertical Frame as Shown. Then, Attach Opposite Vertical Frame Section to Horizontal Frame Members and Secure in Place using 4 Fasteners Provided.
4. Velcro the Outside Curve Fabric Panel and Inside Curve Fabric Panel to the Frames.
5. Velcro the Counter Top to the Top of the Pedestal Frame as Shown.
6. If Applicable, Velcro Graphic Panels to Fabric Panels in Locations Indicated on Title Sheet.

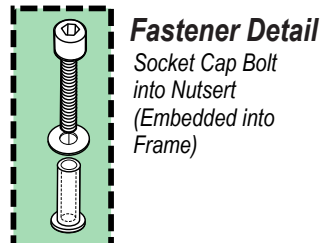

Please note that when removing panels, use a thin tool such as a putty knife to separate the Velcro. Separating the panel Velcro by force can damage the panels.

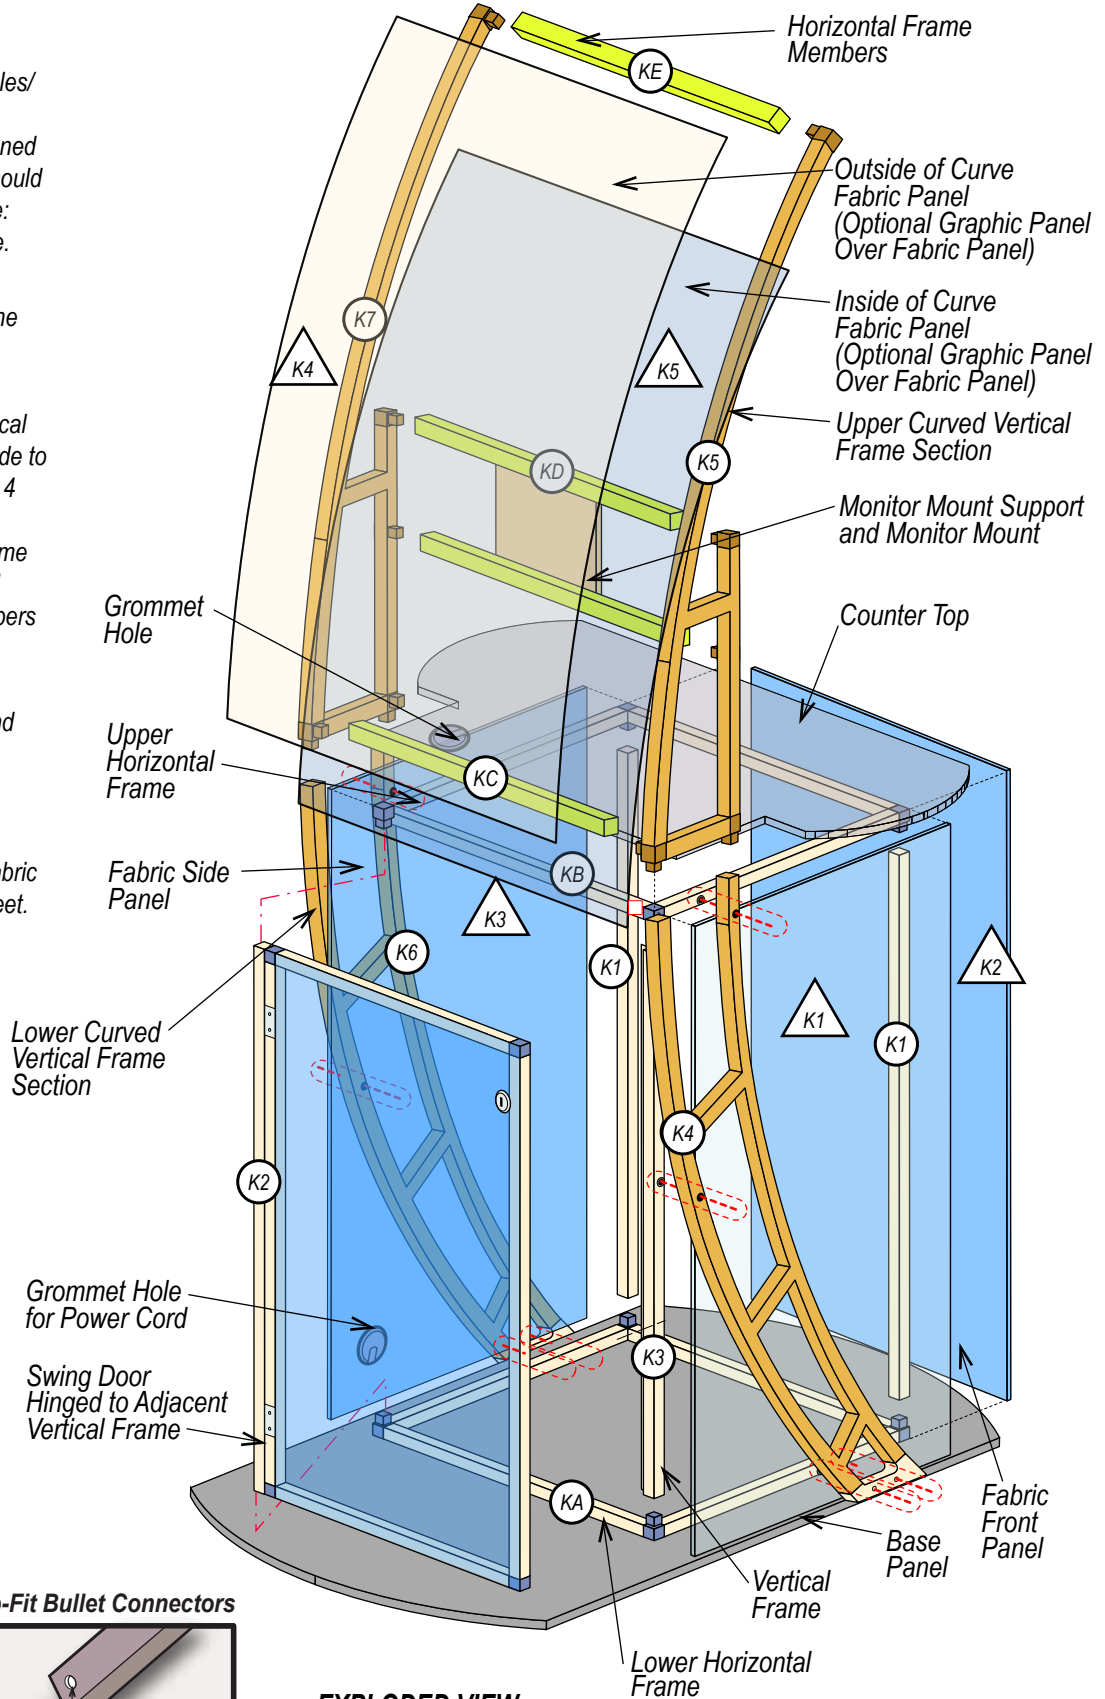

**EXPLODED VIEW**