

NO.	03	()	0	23	27												
Quantity	4	6	2	0	N	Frame	7. If you clear pla:	=	5. You ca stand, lif	4. Its tir the print feed only the botto	 Now s difficult spring po 	2. Make	1. Take a according	Setu			
Quantity Confirm							7. If you have a header in the kit you can fix to the top by using the clear plastic clips.	To lock the frames together you can use the "S" shaped brackets, they are designed tight so they lock well.	5. You can set up the feet in the position that you want to erect the stand, lift the fabric panels and fit on the feet.	4. Its time to get your hands cleaned as now you are ready to handle the printed fabric. Feed the fabric from the round edges of the frame, feed only a few feet, then stand the frame up then slide the fabric to the bottom, now close the Zipper.	3. Now start pushing the pipes together until they firmly click, if difficult you can slightly twist the parts together to make the locking spring pop up on place.	Make sure that all the corresponding numbers are correct.	1. Take all the parts out of the bags and lay them on the ground according to the assembly diagram.	Setup Instructions			
NO.	35	37		(L2)	(R)2)		eader in t	nes toge tight so	the feet ric panels	your han Feed thu et, then close the	ning the p lightly tv place.	all the c	ts out of ssembly	tructi			
Quantity	6	<u> </u>	2	-	<u> </u>	Frame	the kit yo	ther you they lock	in the po s and fit c	ids cleane e fabric fr stand the Zipper.	oipes tog vist the p	orrespon	the bags diagram.	ions			
y Confirm						Ð	u can fix	can use t well.	sition tha on the fee	ed as now om the r e frame u	ether unt arts toge	ding num	and lay t				
n NO.	90°						to the :	he "S" g	at you v et.	/ you ar ound ec p then	il they ther to	ibers ar	chem oi				
Quantity	6					Frame	top by u	shaped t	vant to 6	e ready Jges of t slide the	firmly cl make th	e correc	n the gro				
						ne	sing the	prackets	erect th	to hand the fran e fabric	ick, if ne lockii	T	bund				
Confirm								, ji	Ū	to to	BL						
NO. C						-											
luantity																900	
Quantity Confirm																	
n NO.																-	
Quan						-											
Quantity Confirm						-									<u>6</u>		NFB
				<u>\</u>									- AL			900	B-
NO. Q						-											Ϋ́
Quantity																	
Confirm																	
m NO.								ord									
						-									 		
Confirm							2000	.448mm(57"									

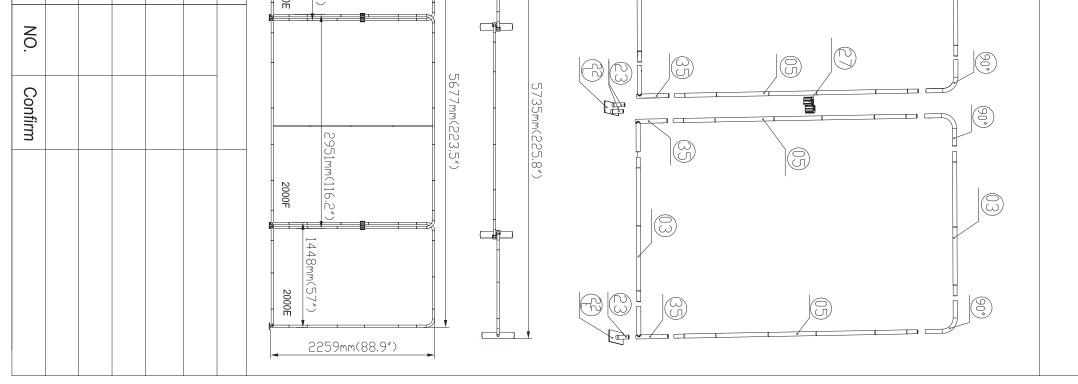


MONITOR STAND 36" x 89"

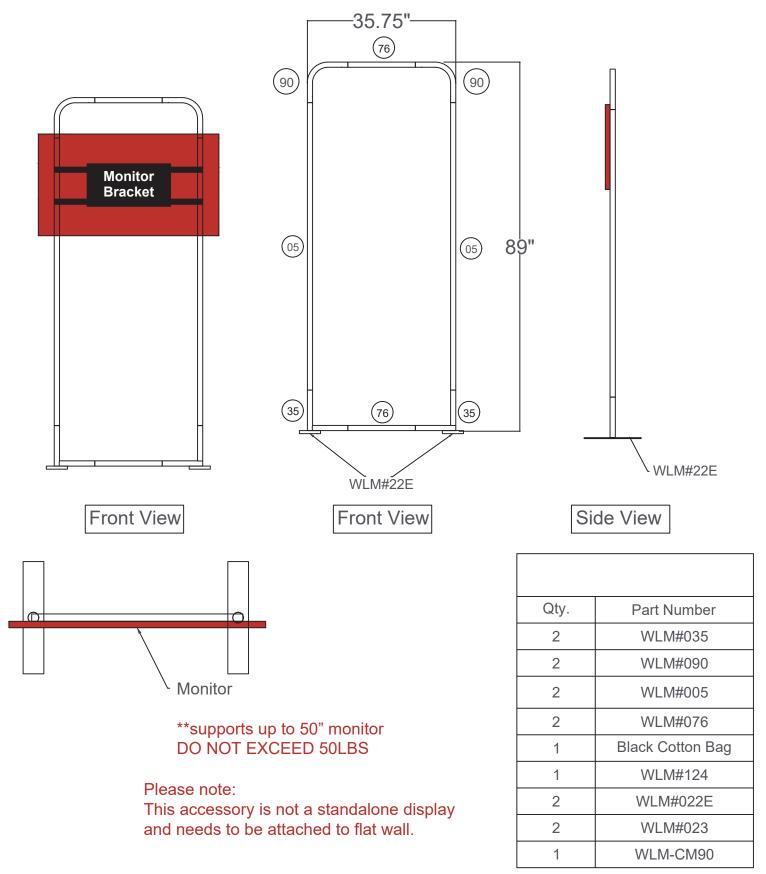

**monitor not included

MONITOR BRACKET

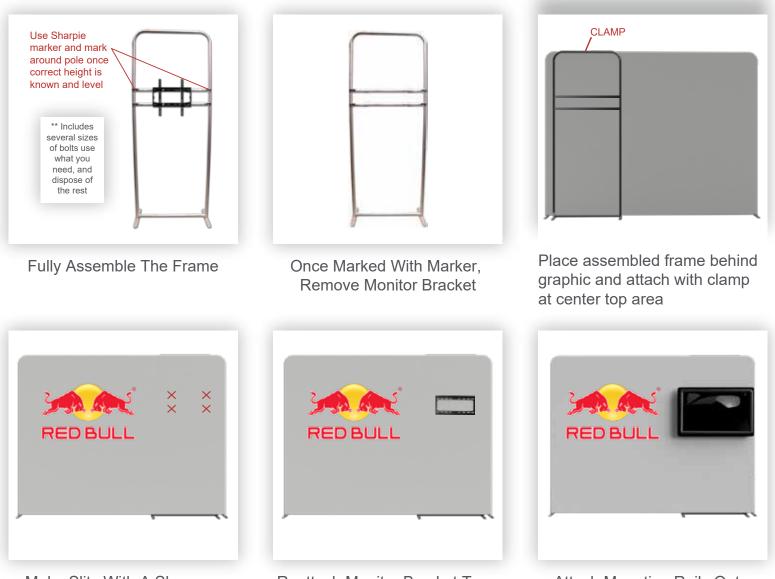

Make Slits With A Sharp Knife Where The Bolts Should Penetrate Graphic

Reattach Monitor Bracket To Front Of Graphics And Tighten

Attach Mounting Rails Onto Back Of Monitor

Hang Monitor Back Onto Support Bars

**supports up to 50" monitor (not included)

DO NOT EXCEED 50LBS

Case to Counter Setup Instructions



1. Hardcase with wheels and handle



5. Secure all 4 poles



2. Release fasteners



6. Cover the black skirt or graphic on the bottom



3. Get all parts out



4. Screw the poles into the case



7. Connect the top and poles



8. Place top on poles



9. Pull the black skirt or graphic up 10. Place countertop on display



