

Installation Instructions



Please note that the following instructions serve as general guidelines, and it is advisable to consult a licensed professional for proper installation. Additionally, carefully review the warranty specifications, as any installation with noticeable defects may void the warranty.



EST. 2021

Parts

1. Handle bars (2)
2. Insert without Screw Thread (2)
3. Insert with Screw Thread (2)
4. Rubber Spacer (4)
5. Connecting Screws
 - A. M6*100(2)
 - B. M6* 60(2)
 - C. M6* 40(2)
6. Side Screws (4)
7. Anchors & Screws (For Face Mount) (4)
8. Decorative Caps (For Remount) (4)
9. Allen Key (1)

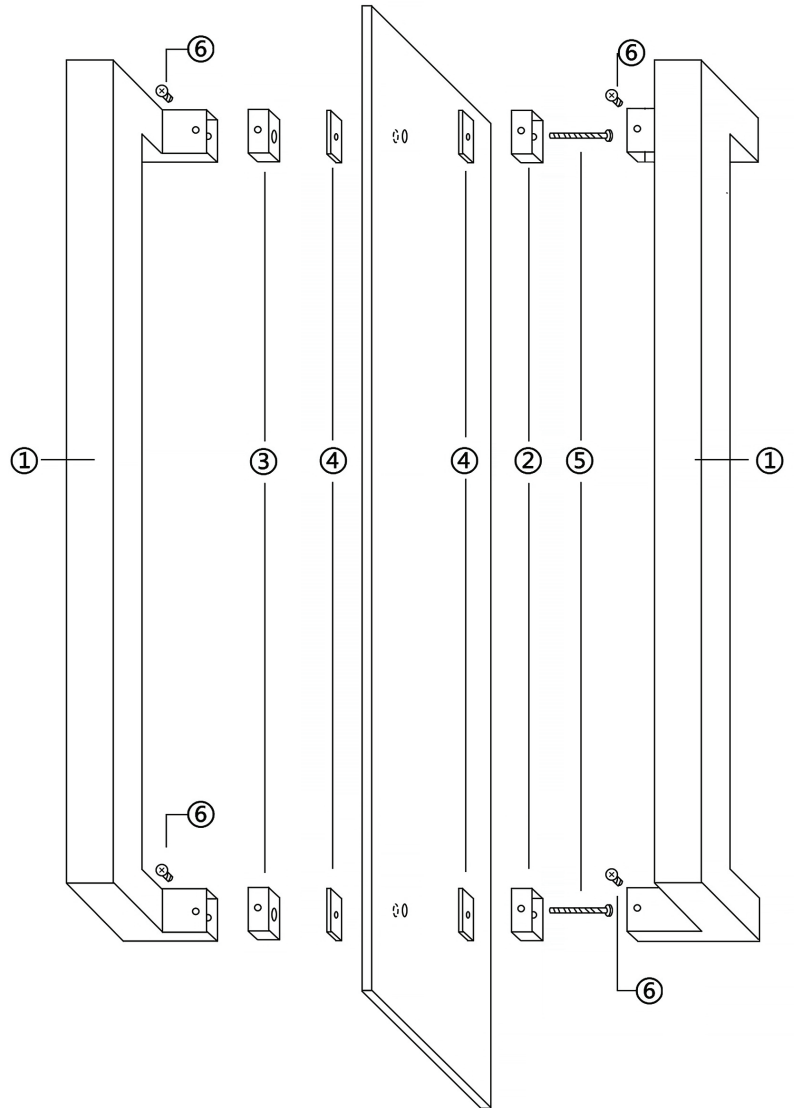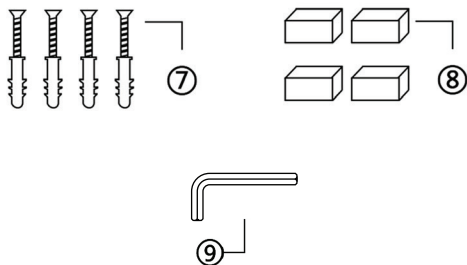

Preparation

Preparing for the installation of door handles involves gathering the necessary tools and materials, understanding the instructions, and considering the complexity of the task. While it is possible to install the handles yourself, it may be beneficial to seek the help of a professional.

Tools Required (not included): Phillips screwdriver, Drill, and drill bits.

Site and Placement

Enhance your door's aesthetic appeal with our sleek handlebar. Perfect for entry doors, backyard or patio doors, interior doors, office doors, shower doors or store front doors. Complements your decor beautifully.

There are three types of handlebar installation: back-to-back (handles connected through the door), face mount (handles mounted on the face of the door), and remounted (using existing handle holes).

Please be sure to read carefully before installation.

Face to Face Installation

1. Determine handle placement and mark positions on the door.
2. If pre-drilled holes are not available, use a drill to create new holes.
3. Choose the appropriate connector size (Part 5) to go through the insert (Part 2) hole, ensuring the flat plate (Part 2) is facing the door.
4. Place rubber spacers (Part 4) on the connector and align it with the door holes.
5. Insert rubber spacers (Part 4) on the connector shown on the other side of the door and screw in the inserts (Part 3) facing the door. Tighten them securely.
6. Position the handlebars (Part 1) onto the inserts and adjust them using the side screw (Part 6).
7. Test the handle's functionality to ensure it operates smoothly before completing the installation.

Face Mount Installation

1. Determine handle placement and mark the desired positions on the door.
2. Use a drill to create new holes for the anchors (Part 7). Insert the anchors into the newly drilled holes.
3. Position a rubber spacers (Part 4) followed by an insert (Part 3) showing the hollow part and screw (Part 7) them into the anchors securely.
4. Position the handlebar (Part 1) onto the inserts and adjust them using the side screw (Part 6) to ensure proper alignment and fit.
5. Test the functionality of the handle by operating it to ensure smooth operation before completing the installation process.

Remounted Installation

1. Determine the door handle size needed for this installation.
2. Un-install the existing hardware and clear out the pre-drill door holes from any debris.
3. Choose the appropriate connector size (Part 5) to go through the insert (Part 2) hole, ensuring the flat plate (Part 2) is facing the door.
4. Place rubber spacers (Part 4) on the connector and align it with the door holes.
5. Insert rubber spacers (Part 4) on the connector shown on the other side of the door and screw in the inserts (Part 3) facing the door. Tighten them securely, and put the decorative caps (Part 8).
6. Position the handlebars (Part 1) onto the inserts and adjust them using the side screw (Part 6).
7. Test the functionality of the handle by operating it to ensure smooth operation before completing the installation process.