



BACKLAND EXPEDITION GEAR

INSTALLATION INSTRUCTIONS


IBEX Series Ladder Installation Instructions

Our IBEX Series side ladder and IBEX Series Revel ladder are designed to be installed on the driver's side of a MB Sprinter from 2007-2022.





INSTALLATION INSTRUCTIONS

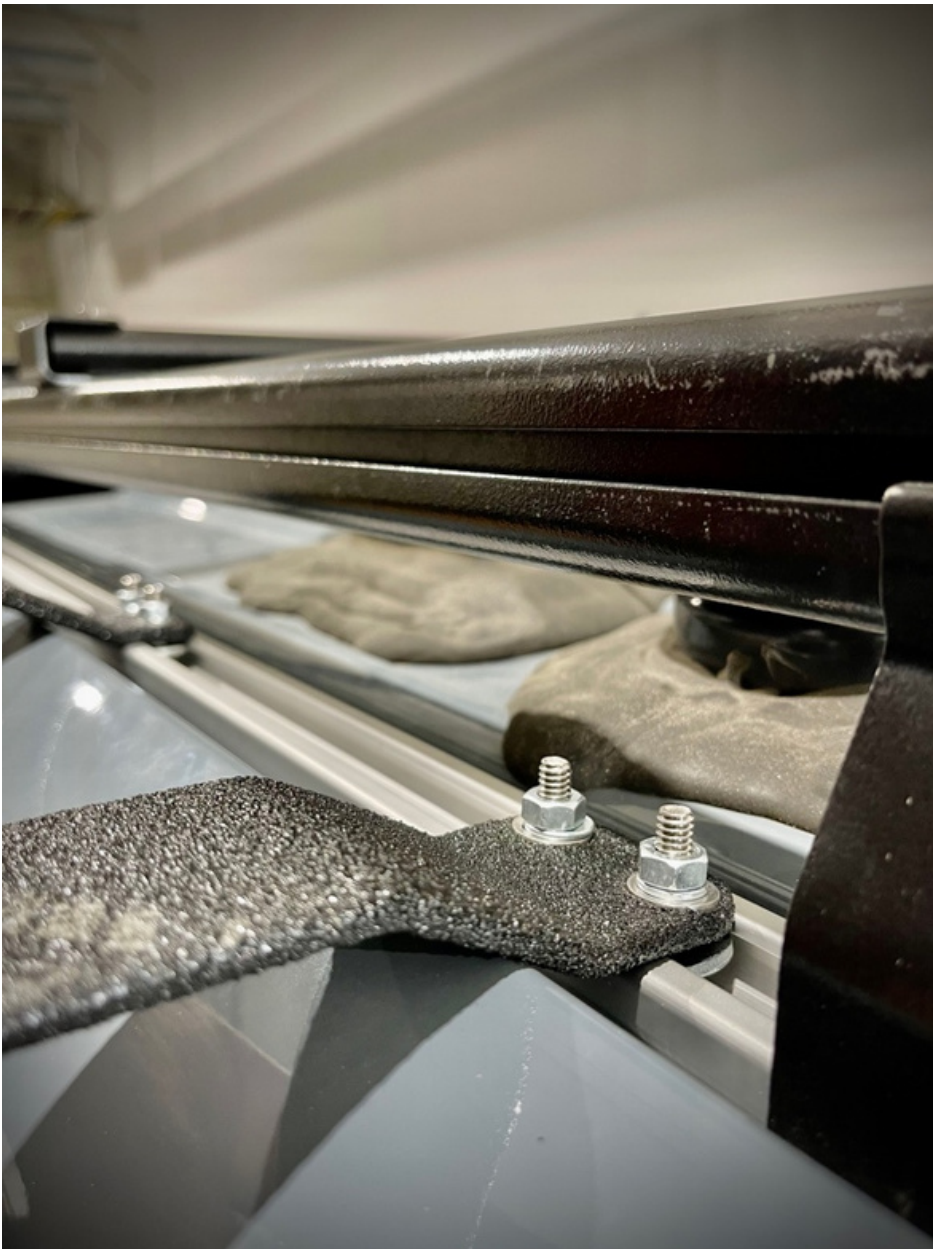

1 - Remove cladding from the van under the driver's side window and cassette toilet door.

2 - Insert 4 carriage bolts and washers in the roof rail from the top where the ladder will be mounted. Finger tighten the stainless washers, crush washers and nuts to hold the ladder in place.

**** IMPORTANT: Make sure the cassette toilet door can be opened enough to allow the cassette to be removed freely and that the side window can be opened****



BACKLAND EXPEDITION GEAR

INSTALLATION INSTRUCTIONS

3 - Check alignment of the bottom legs, if needed the legs can be adjusted (bent) using a long crescent wrench. Mark the location, making sure the ladder is parallel to the caulking line on the side of the ladder. Mark the location of the 4 M6 Rivnuts. Install Rivnuts.





BACKLAND EXPEDITION GEAR

INSTALLATION INSTRUCTIONS

4 - Secure the ladder to the van using the 4 washers and stainless Allen M6 bolts. Tread locker is recommended.





BACKLAND EXPEDITION GEAR

INSTALLATION INSTRUCTIONS

5 - Mark the location of the legs on the cladding. Cut 2 notches around the legs and you can now put the cladding back in place.





BACKLAND EXPEDITION GEAR

INSTALLATION INSTRUCTIONS



6 - Double check the ladder is still parallel to the caulking seam and tighten the upper 4 bolts.

Installation should now be complete.

