

## Installation for Kubota RTV Canopy



RTV-X900, RTV-X1120, and RTV-XG850 Sidekick

### Hardware Kit

4-Hook and Loop Cable Ties  
4- $\frac{1}{4}$ "-20 x  $\frac{3}{4}$ " SS Screw  
4- $\frac{5}{16}$ " x  $\frac{7}{8}$ " Seal Washers  
4-Lock Nuts  
4-Loop Clamps


**FOR THE REMOVABLE OPTION REMOVE THE CANOPY BEFORE  
TRANSPORTATION**

## Permanent Install Option

1. Place the loop clamps around the ROPS bar. Position the clamps so that they are evenly spaced on both sides of the ROPS. For maximum stability, place the loop clamps as far back and forward on the ROPS as shown below.



2. Place the canopy on top with the dimples over the rear bolt heads on the ROPS.

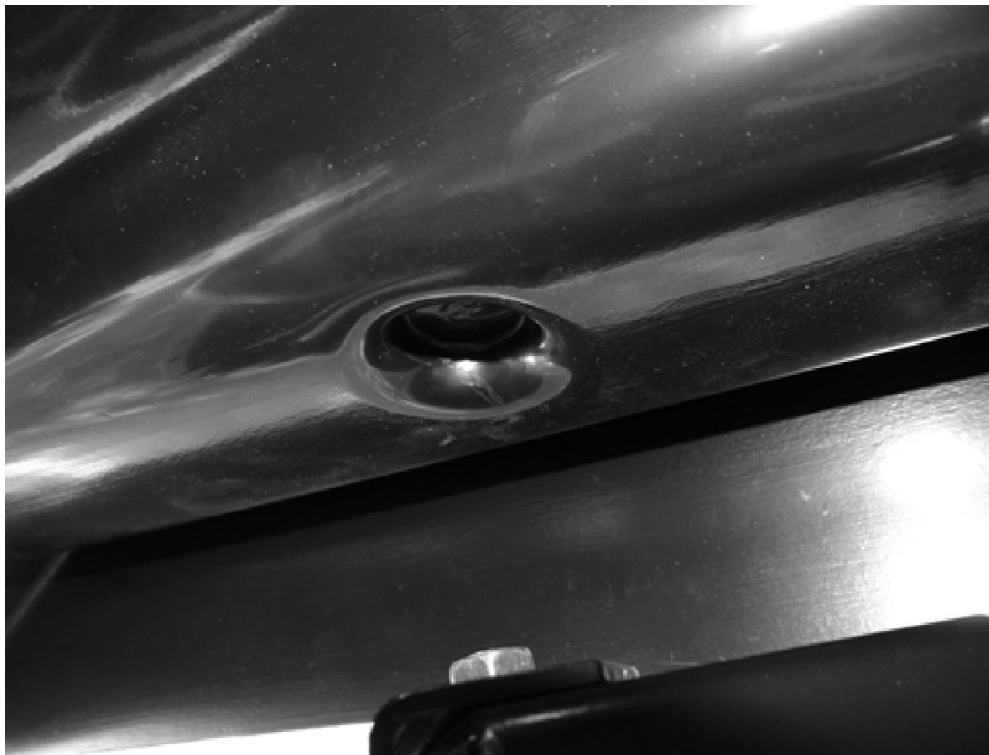

3. Drill pilot holes through the canopy to match the location of the loop clamps. Then drill the 5/16" mounting hole for the bolts.



4. Use the washers, screws, and lock nuts to secure the canopy to the loop clamps.




## Removable Install Option

1. Place the removable straps around the ROPS bar. Position the straps so that they are evenly spaced on both sides of the ROPS. For maximum stability, place the straps as far back and forward on the ROPS.



2. Place the canopy on top with the dimples over the rear bolt heads on the ROPS.

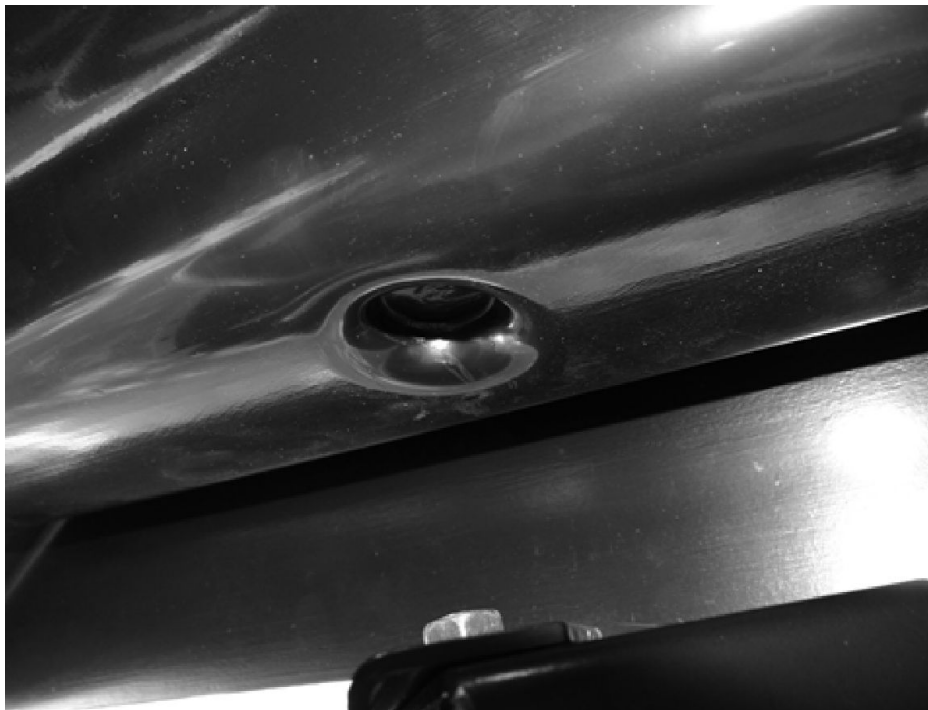

3. Drill pilot holes through the canopy to match the location of the removable straps. Then drill the 5/16" mounting hole for the bolts.



4. Use the washers, screws, and lock nuts to secure the canopy to the removable straps.



**FOR THIS OPTION REMOVE THE CANOPY BEFORE TRANSPORTATION**