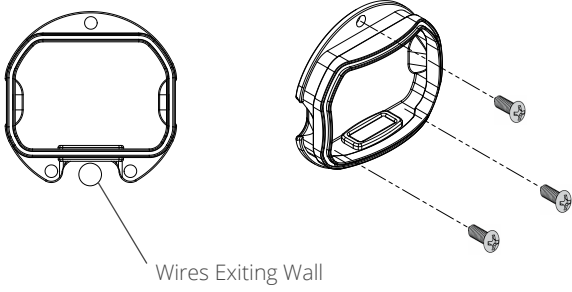
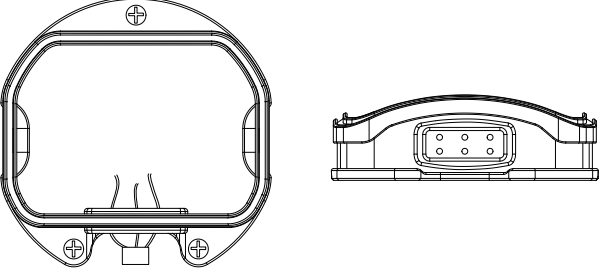
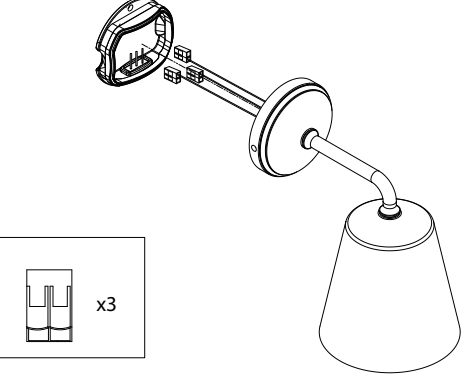
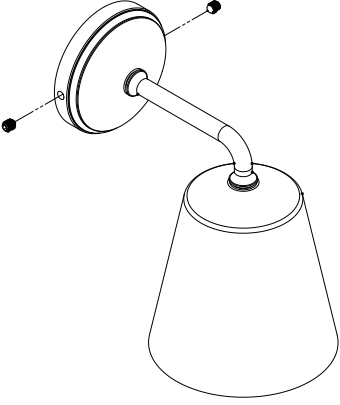
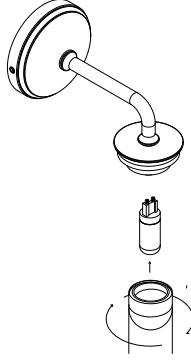
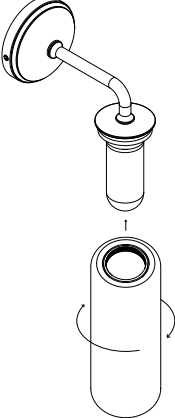
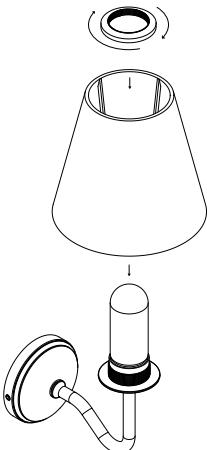
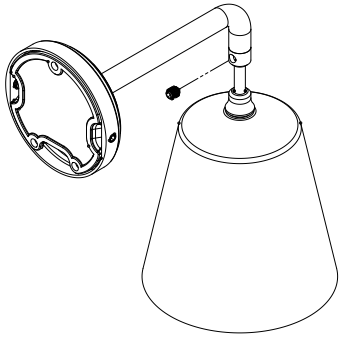


Instrucciones para apliques de pared pequeños

<p>1. Instalar el montaje del aplique de pared</p>  <p>Wires Exiting Wall</p>	<p>2. Pasar los cables por la arandela</p> 
<p>3. Conectar los WAGO dentro de la base</p>  <p>x3</p>	<p>4. Ajustar los tornillos prisioneros</p> 
<p>5. Quitar la cubierta de vidrio y colocar la bombilla</p> 	<p>6. Colocar la pantalla Claremont en el cuerpo de la lámpara</p> 

Instrucciones para apliques de pared pequeños

7. Usar el anillo de la pantalla para asegurarla	8. Usar el tornillo prisionero para ajustar la altura de la pantalla
 <p>The diagram illustrates step 7. It shows a conical lampshade with a ring at its top edge. A separate ring is shown above the lampshade with a curved arrow indicating it should be slid onto the top of the shade. Below the lampshade, the mounting arm and base are shown, with a small black ring at the top of the stem where the lampshade will be attached.</p>	 <p>The diagram illustrates step 8. It shows the lampshade mounted on the wall. A locking screw is shown being inserted into a hole on the side of the mounting arm to adjust the height of the lampshade. A separate view of the mounting arm shows the location of the locking screw.</p>