

All-Terrain Fender Installation Instructions

KIT PARTS:




left fender




right fender

NO TOOLS REQUIRED.


1. Remove both wheels, spacers and axle. (no image)

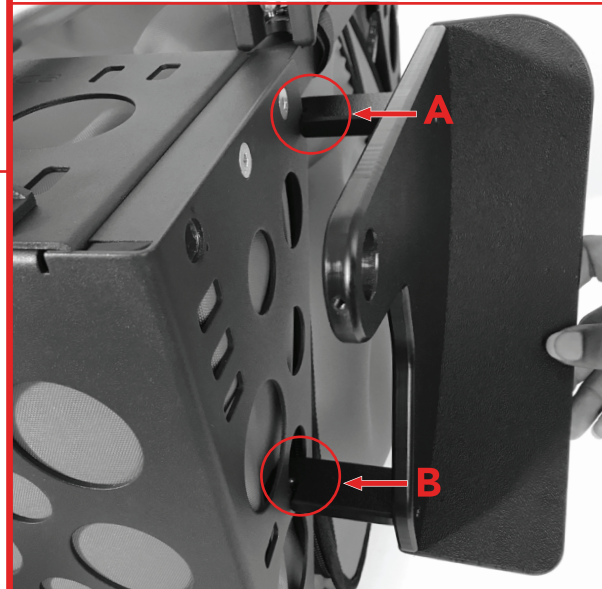

2. Position the fender against the bag frame, slotting the fender over the frame into position A and inside the circle in position B.

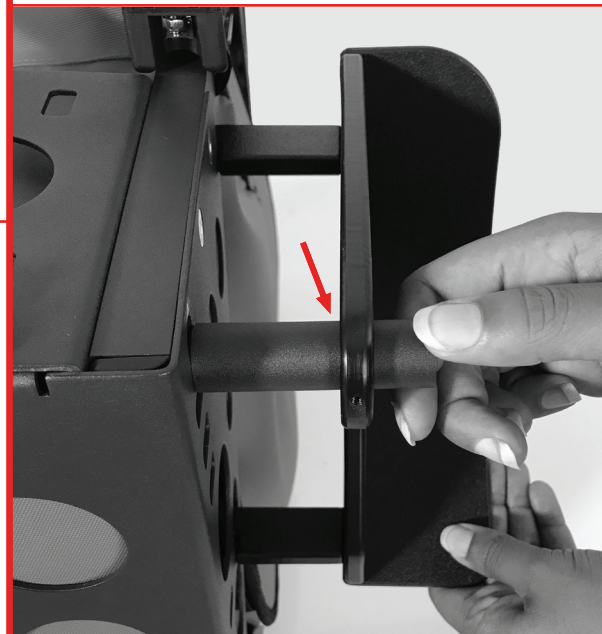

3. Insert the spacer through the fender as shown.

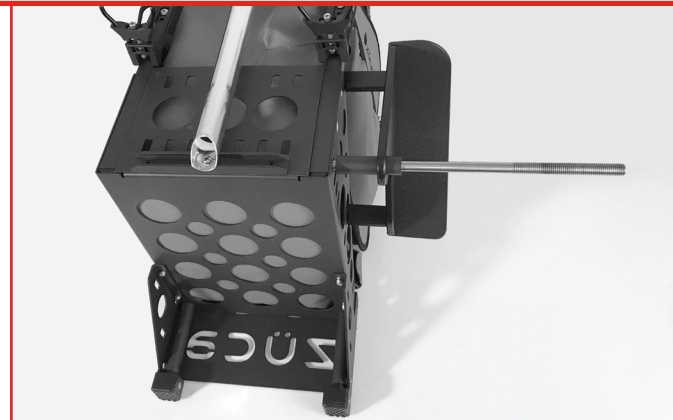

4. Slide the axle back through the spacer about halfway through the frame. (If your AT axle knob is permanently affixed, you will need to thread the wheel in first).



5. Repeat Steps 2-3 with the second fender.



6. Slide the axle all the way through the frame, threading the axle through the second spacer.



7. Reattach both wheels and tighten the axle knobs by simultaneously turning the knobs in opposite directions. Do not overtighten. Spin both wheels at the same time to test for equal fluid motion and adjust tightening as required. Your All-Terrain Fender installation is now complete!



Gear up and go!