

Quick Fist


ROLL BAR TOOL MOUNTS

Fits all roll bars from 1" to 2.5" (25 to 64mm) in diameter

Contents:

- 2 ea. Delrin® Roll Bar mounts
- 2 ea. 9/16" x4" Stainless Steel hose clamps
- 2 ea. 7" x 1.5" Neoprene rubber strips
- 6 sets: 7/8" x #10 bolts washers and nuts.

DO NOT INSTALL ON ANY PART OF A ROLL BAR THAT IS HIGHER THAN THE BACK OF THE FRONT SEAT. This minimizes life threatening objects from hitting an occupant in a roll-over. The safe working load (SWL) for two Roll Bar Mounts on a roll bar less than 1.5" is 50lbs. Roll bars 1.5" in diameter or more, the SWL is 100lbs.

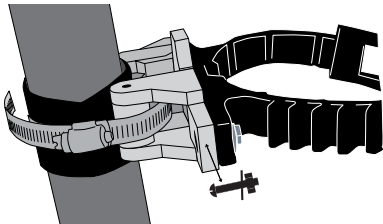

Installation:

It is best to attach the QUICK FIST Roll Bar Mounts as low as possible on your roll bar. Bottles like Fire extinguishers or CO2 tanks should touch a deck or floor of the vehicle.

1. Bolt the QUICK FIST clamp to the Roll Bar Mount so that the bolt comes from the base of the Mount, and the washer and nut are on top of the rubber clamp. Repeat for the second mount.
2. Wrap the rubber strip around the roll bar where the Mount will be attached. The rubber will protect your roll bar from scratches and eliminates movement caused by rough terrain. Trim off any overlap leaving about ¼" gap between the ends of the rubber strip. Temporarily tape in place.
3. Open one of the hose clamps and feed the end through the Delrin Mount just above the base, close to the middle hole.
4. Tighten the hose clamp so that its screw is where the two ends of the rubber meet. Remove tape.
5. Repeat with the other Delrin Mount.
6. Check bolt tightness occasionally.

Quick Fist


ROLL BAR TOOL MOUNTS

Fits all roll bars from 1" to 2.5" (25 to 64mm) in diameter

Contents:

- 2 ea. Delrin® Roll Bar mounts
- 2 ea. 9/16" x4" Stainless Steel hose clamps
- 2 ea. 7" x 1.5" Neoprene rubber strips
- 6 sets: 7/8" x #10 bolts washers and nuts.

DO NOT INSTALL ON ANY PART OF A ROLL BAR THAT IS HIGHER THAN THE BACK OF THE FRONT SEAT. This minimizes life threatening objects from hitting an occupant in a roll-over. The safe working load (SWL) for two Roll Bar Mounts on a roll bar less than 1.5" is 50lbs. Roll bars 1.5" in diameter or more, the SWL is 100lbs.

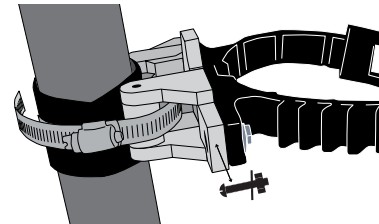

Installation:

It is best to attach the QUICK FIST Roll Bar Mounts as low as possible on your roll bar. Bottles like Fire extinguishers or CO2 tanks should touch a deck or floor of the vehicle.

1. Bolt the QUICK FIST clamp to the Roll Bar Mount so that the bolt comes from the base of the Mount, and the washer and nut are on top of the rubber clamp. Repeat for the second mount.
2. Wrap the rubber strip around the roll bar where the Mount will be attached. The rubber will protect your roll bar from scratches and eliminates movement caused by rough terrain. Trim off any overlap leaving about ¼" gap between the ends of the rubber strip. Temporarily tape in place.
3. Open one of the hose clamps and feed the end through the Delrin Mount just above the base, close to the middle hole.
4. Tighten the hose clamp so that its screw is where the two ends of the rubber meet. Remove tape.
5. Repeat with the other Delrin Mount.
6. Check bolt tightness occasionally.