


"Ramp" assembly

- ① Remove 1/4" x 1-1/4" bolt from "V" at centre. Slide end of "Spreader Tube" between and replace 1/4" x 1-1/4" bolt & nut.
- ② Install the "Aluminum Angle End Brace" using 1/4" x 3/4" bolts & hex nuts. Install "Flat Diagonal Bracing" using 1/4" x 3/4" ribbed neck bolts & hex nuts.
- ③ Ramp to be connected to dock with channel connector using 1/4" x 2-1/4" carriage bolts & acorn nuts supplied.

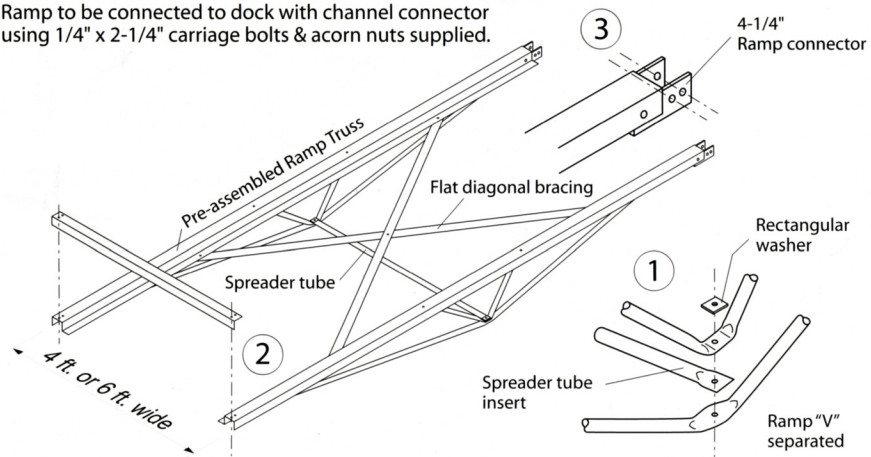

Ramp Assembly Procedure