


### STEP 1

- Remove baseplate from bottom of leg

NOTE: Baseplate nut and bolt are required to attach wheel kit

### STEP 2

- Slide right angle wheel connector into the bottom of the leg and secure it using the hardware that was attached to your baseplate
- Place inner aluminum washer on wheel axle
- Install wheel on axle
- Install outer aluminum washer
- Install  $\frac{1}{4}$ " x 2" nut and bolt to hold on wheel and washers

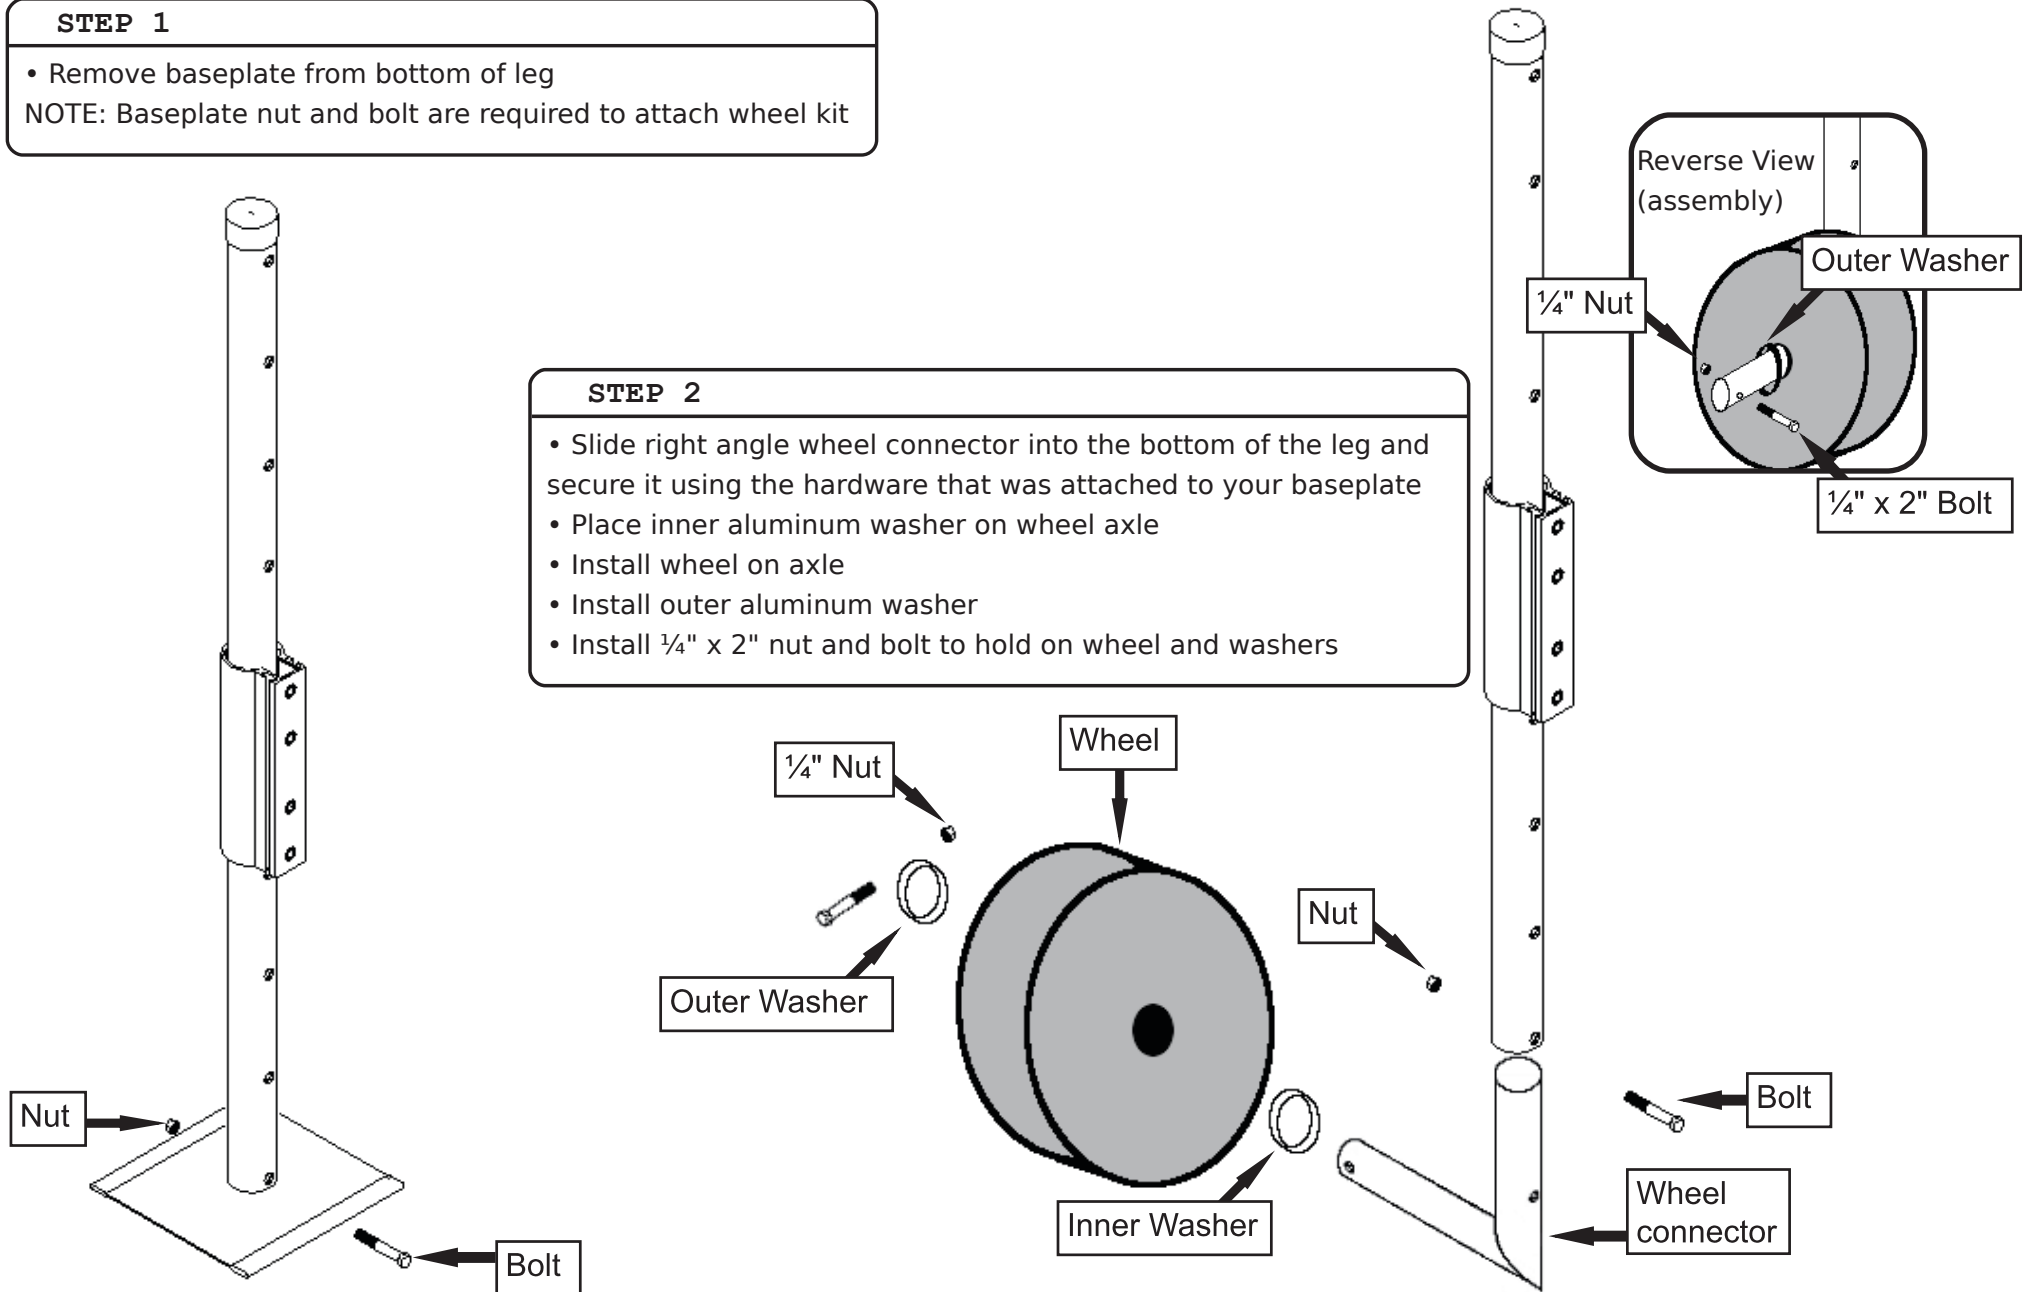

**FENDOCK**

Aluminum Docks and Boat Lifts

1-888-FENDOCK

(1-888-336-3625)

[www.fendock.com](http://www.fendock.com)

335 Roosevelt Ave Ottawa, Ontario K2A 1Y9 Tel: (613)722-6581 Fax: (613)722-3168

Assembly Instructions for:

# Wheel Kit

Part No.: PN 98001

© 2011 Fendor Glass & Aluminum Inc.