

Eastern Front Cabin


Always "dry run" parts before gluing with a woodwork quality PVA.

Start with the floor and place the MDF on a flat surface.


Glue the 4 walls in place and set aside to dry.

Put aside the window sills, windows and doors if you intend to paint them a different colour. They can be glued in place after painting is complete.

Assemble the chimney brickwork and set aside to dry.

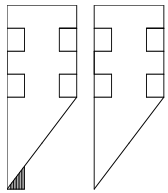

Once dry, trim the shaded area with a craft knife and sand to get a close fit to the incline of the roof. Glue on the capping stone and then glue in the plastic chimney pot

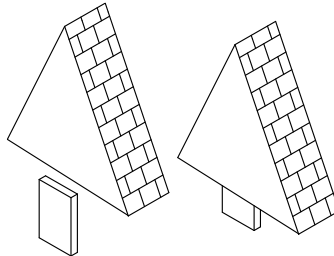

Glue the two 3mm rectangles inside the roof gable ends, allowing 5mm to protrude. This will locate the roof and keep it in place. Complete the roof by gluing the plastic strip in place and trimming to size once dry.

Thank you for buying this model from:

Charlie Foxtrot Models www.charliefoxtrotmodels.com

Eastern Front Cabin


Always "dry run" parts before gluing with a woodwork quality PVA.

Start with the floor and place the MDF on a flat surface.


Glue the 4 walls in place and set aside to dry.

Put aside the window sills, windows and doors if you intend to paint them a different colour. They can be glued in place after painting is complete.

Assemble the chimney brickwork and set aside to dry.

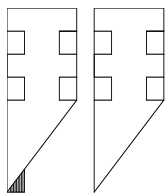

Once dry, trim the shaded area with a craft knife and sand to get a close fit to the incline of the roof. Glue on the capping stone and then glue in the plastic chimney pot

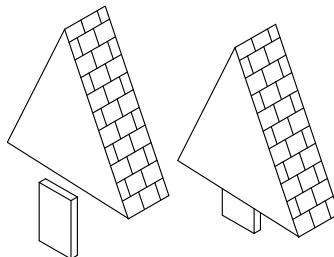

Glue the two 3mm rectangles inside the roof gable ends, allowing 5mm to protrude. This will locate the roof and keep it in place. Complete the roof by gluing the plastic strip in place and trimming to size once dry.

Thank you for buying this model from:

Charlie Foxtrot Models www.charliefoxtrotmodels.com