


Eastern Front Razed 2

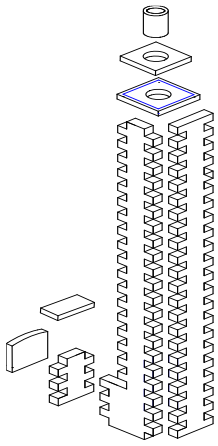

Always “dry run” parts before gluing with a woodwork quality PVA.
Start with the floor and place the MDF on a flat surface.
Glue each of the razed sides to the base and set aside to dry.
Asymmetric tabs on the base are arranged to make this straightforward.

Glue the 3mm thick chimney stack together and cap with squares and finish by fixing the plastic pipe.

Use the assortment of timbers as corner supports (3mm x 4mm timber) and 2mm x 3mm as burnt and fallen planks.

Thank you for buying this model from:

Charlie Foxtrot Models www.charliefoxtrotmodels.com