


Wagon Shed

Instructions

Always “dry run” parts before gluing with a woodwork quality PVA.
Start with the ground floor and place the MDF on a flat surface.

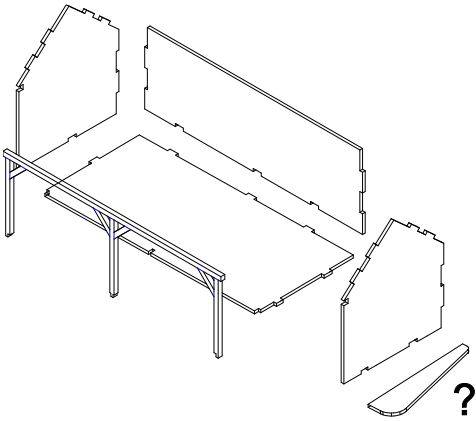

Glue the 3 planked walls to the base, followed by the 3mm open front and the rear roof piece. You may wish to paint inside before gluing on the front roof piece.

Included in the kit are two optional panels. The panels do not have locating tags. Customise your model by using none, one or both panels. Panels can be turned over so the wide end appears at the front or rear of the building. Decorate the side panels using the broken wheels (not supplied in the 20mm version) and ladder or other items from your bits box.

It is recommended that you spray with primer and then paint using emulsion or acrylic paint.
Thank you for buying this model from:

Charlie Foxtrot Models

www.charliefoxtrotmodels.com