

Boulangerie

Instructions


Always “dry run” parts before gluing with a woodwork quality PVA.
Sort the 3mm finger jointed walls into 2 levels as each level is of a different ceiling height.
Start with the ground floor and place the MDF on a flat surface.

Select the jointed long interior wall and glue to both sides, making an “H” shape. Glue the base at the same time so the 2mm tabs fit inside the side walls. The floor is raised by this method of construction.

Glue the remaining two sides to the base, ensuring that glue is applied to the corner joints sparingly. The base should have the planked flooring facing you and the large shop windows adjacent to the planking.



Assemble the first floor and set aside to dry. The first floor is regular and symmetrical.

Assemble the chimney brickwork and roof then set aside to dry.

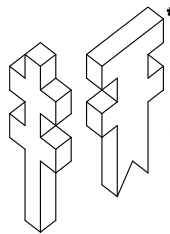


* Once dry, trim the shaded areas using a craft knife and sand down to make a tight fit to the apex of the roof

* Use PVA to fix chimney in position.

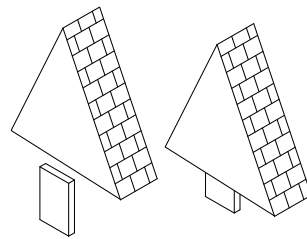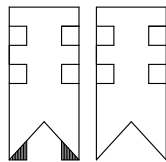

Glue in small 3mm blocks to inside of gables leaving 5-10mm protruding

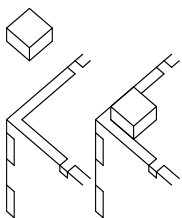

Turn upper storey floor over and glue on corner blocks. Take care to only glue to the 2mm floor leaving the walls free. This only needs to be done for the back of the building

Glue the large 2 holed chimney cap to the chimney brickwork then layer up with a second smaller chimney cap.

File the plastic pipe end square. Then using a razor saw, cut off approximately 15mm and glue pipe into the chimney hole. Repeat until both chimney pots are in place. Glue to roof.

Cut the plastic angle piece into approximately 10mm lengths and glue to the apex ridge of the roof.

Glue on the front pavement and fascia. Once dry glue on the steps and insert the three 3 mm balcony supports in the square holes above the doors.

Glue on the lower balcony. This is a rectangular 2mm piece that sits on top of the 3 supports.

You may wish to paint the building before fixing the three part railings and French windows.

It is recommended that you fill and texture the walls prior to painting. Once painted, glue in the windows and doors ensuring they fall flush with the inside of the walls.

Thank you for buying this model from:

Charlie Foxtrot Models

Contact: charliefoxtrotmodels@hotmail.com