


Table Edge Terrace

Instructions

Always "dry run" parts before gluing with a woodwork quality PVA.

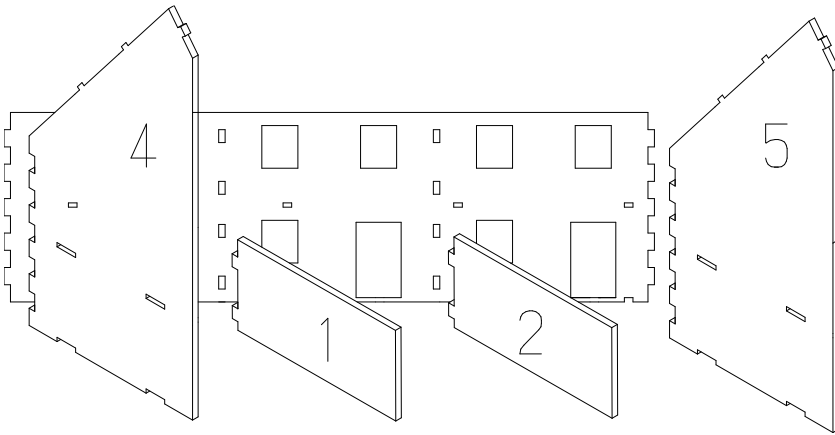


Place the main wall face down on the table and glue in the lower walls numbered 1 & 2.

Note: As 3mm MDF can vary slightly in thickness the tags may need slight trimming with a craft knife to get a good fit.

Glue in one of the floor sections with the engraved lines facing up.

Glue on the other floor section, engraved lines facing up. Line up parts one and 2 with the engraved guidelines to ensure they dry square. Set aside to dry.


Glue on the large roof panel, followed by the thinner roof strip.

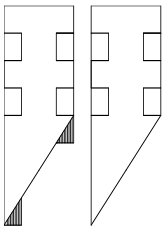

Glue the chimney pieces together and, when dry, trim the shaded areas to gain a close fit to the roof.

Repeat this process with the 3mm dormer walls.

Once chimneys and dormers are glued to the roof, glue on chimney capping tiles and dormer roof pieces.

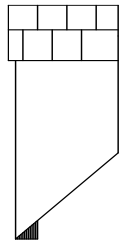

Cut the angle plastic to approximately 10mm and glue to the apex ridge of the roof and dormers. Cut the plastic pipe into approximately 15mm and glue into chimney holes.

It is recommended that you fill and texture the walls prior to painting. Paint the windows, doors and shutters before you glue onto the model.

Thank you for buying this model from: **Charlie Foxtrot Models** www.charliefoxtrotmodels.com

Have you seen the front yard that has been designed to fit this terrace? Two versions are available now in the website shop.

A tutorial for the finishing and painting of this kit is on the **Charlie Foxtrot Models** Blog.