



Horse Bracelet Tutorial





Please read through all of the instructions before proceeding. You will use the steps outlined in the tutorial for the dark brown or light brown cord you purchased.

YOU WILL NOT USE GLUE UNTIL THE LAST STEP

Items needed:

1. [Horse's "Saddle" large hole bead](#)
2. [Horse Head Clasp](#)
3. [5mm Stitched Leather Cord](#) OR [5mm Natural Bolo Leather Cord](#)
See length needed in STEP 2
4. [Super New Glue](#) or instant bonding liquid glue
5. Flexible measuring tape or paper strip/string & ruler
6. Low tack tape such as masking tape or painter's tape
7. Scissors



Step 1



Step 2

Step 1: Measure your wrist circumference with a flexible measuring tape where you will wear the bracelet. Alternatively, you can wrap a strip of paper or string around your wrist and then measure the length with a ruler. Write down the measurement of your wrist.


Step 2: PLEASE READ BEFORE YOU CUT

You will cut the leather cord into two equal lengths.

You can always cut the length of the two cords shorter. To be cautious, start with a longer length.


As a general guideline we find the bracelet fits most people best when the cords are cut $\frac{1}{2}$ " less than your wrist circumference.

For example, a wrist circumference of 6.5" you will cut the leather cords to 6" each (or more to be cautious).

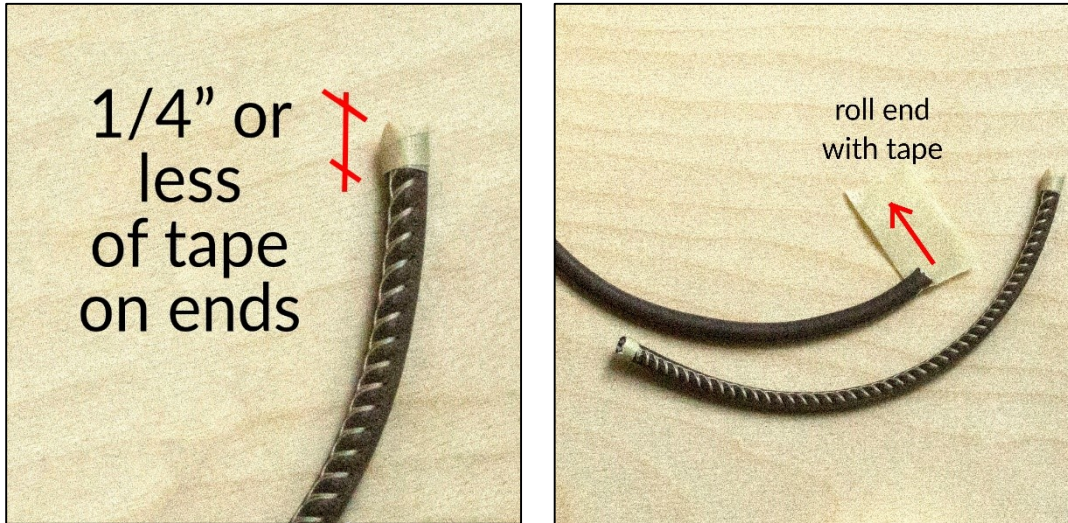


Step 3

Step 3: Wrap the two leather cords as shown on both ends with the masking tape covering 1/4" or less of the cord.

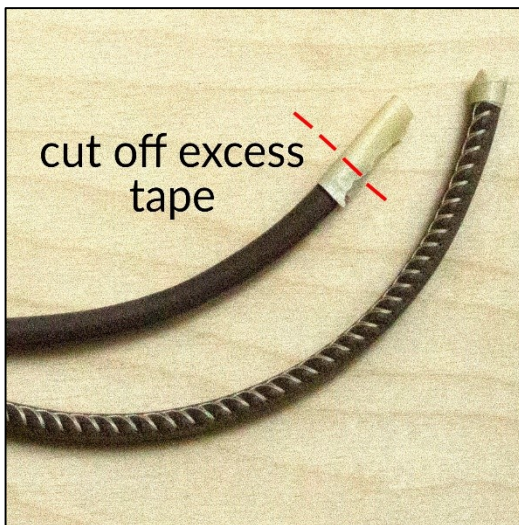


Step 4

Step 4: Cut off the excess tape at the end of the cord.

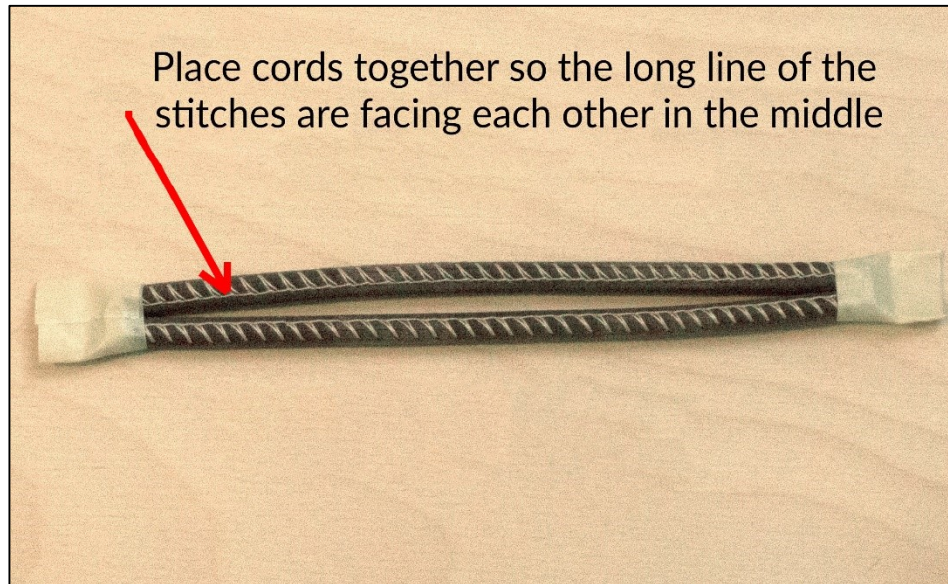

Step 5

Step 5: For the dark brown stitched cord, align the stitches towards each other. The long line of stitching should be in the middle. This will look like the horse's mane.

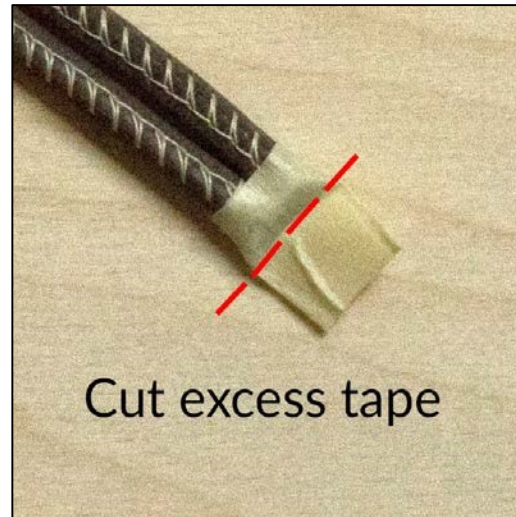

Step 6

Step 6: Add tape again, but this time wrap both cords together. Do not cover ends of cord more than $\frac{1}{4}$ ". Cut off excess tape.





Step 7

Step 7: DO NOT GLUE YET. Place the "saddle" big hole bead on the cords. Next place the horse head end of clasp on one end of cords and hook end of the clasp on the other end.

Make sure no tape is showing outside of the clasp hole. If so, remove that part of tape.

Step 8: Place the bracelet on your wrist to check the fit. Cut the length of the cords down if necessary and re-tape the end.

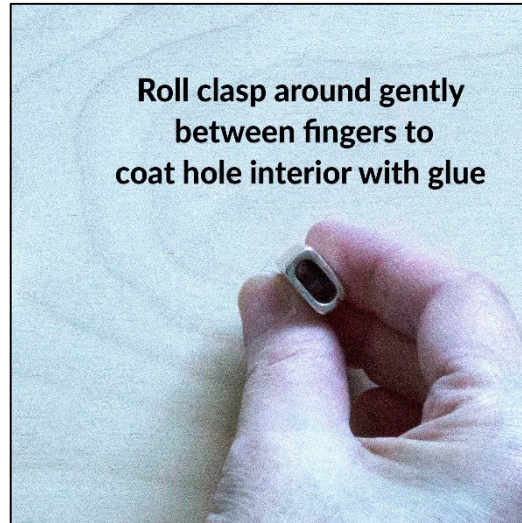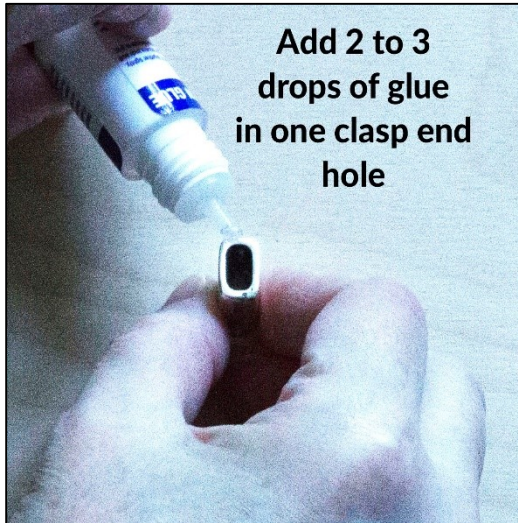

Step 9

Step 9: Holding the head end of the clasp add 2 or 3 drops of Super New Glue (do not add too much) in the hole. Rock and roll the clasp end gently allowing the glue to coat the interior walls of the clasp hole.



Step 16

Step 10: Lastly, place the horse head on the cords. Be careful to orient in the right direction. Hold the clasp end in place for at least 30 seconds. Repeat steps 9 & 10 for the hook end of the clasp.

Enjoy wearing your new bracelet! We hope you love his beautiful smile as much as we do.



Contact us anytime with questions. We are always glad to help.
info@stinkydogbeads.com

Kitty Bozzini, Owner SDBeads
www.StinkyDogBeads.com

