

OUTRIDE
THE
ORDINARY

INSTALLATION GUIDE

KICKSTAND



COLOR
BLACK

@coastcycles
<http://coastcycles.com>












CONTENT PAGE

SAFETY	2
SYMBOLS USED	3
TOOLS REQUIRED	3
KICKSTAND INSTALLATION	4 - 6
HEIGHT ADJUSTMENT INSTALLATION	7

SAFETY


NOTE: We strongly urge you to read this Installation Guide in its entirety first. Refer to the appropriate sections for any issue which you don't completely understand. Please note that not all kickstands have the features described in this Installation Guide.

SYMBOLS USED

<p>Use wrench</p> 	<p>Assemble in the specified order</p> 	<p>Assemble the same for the other side</p> 	<p>Pay attention here</p> 	<p>Detail view</p> 	<p>Assembly view</p> 
<p>Tighten screw gently</p>  <p>Correct </p>  <p>Wrong </p>  <p>Overtightened The threads are stripped.</p>					

TOOLS REQUIRED

Allen: 2.5 & 8.0(mm)



KICKSTAND INSTALLATION



NO	DESCRIPTION	TOOL REQUIRED
1	Kickstand (X1)	<div data-bbox="1160 1429 1416 1610"> <p>Allen: 2.5 & 8.0 (mm)</p> </div>
2	Washer M10 (X1)	
3	Hex Socket Head Allen Bolt M10 (x1)	




KICKSTAND INSTALLATION



KICKSTAND INSTALLATION



HEIGHT ADJUSTMENT INSTALLATION

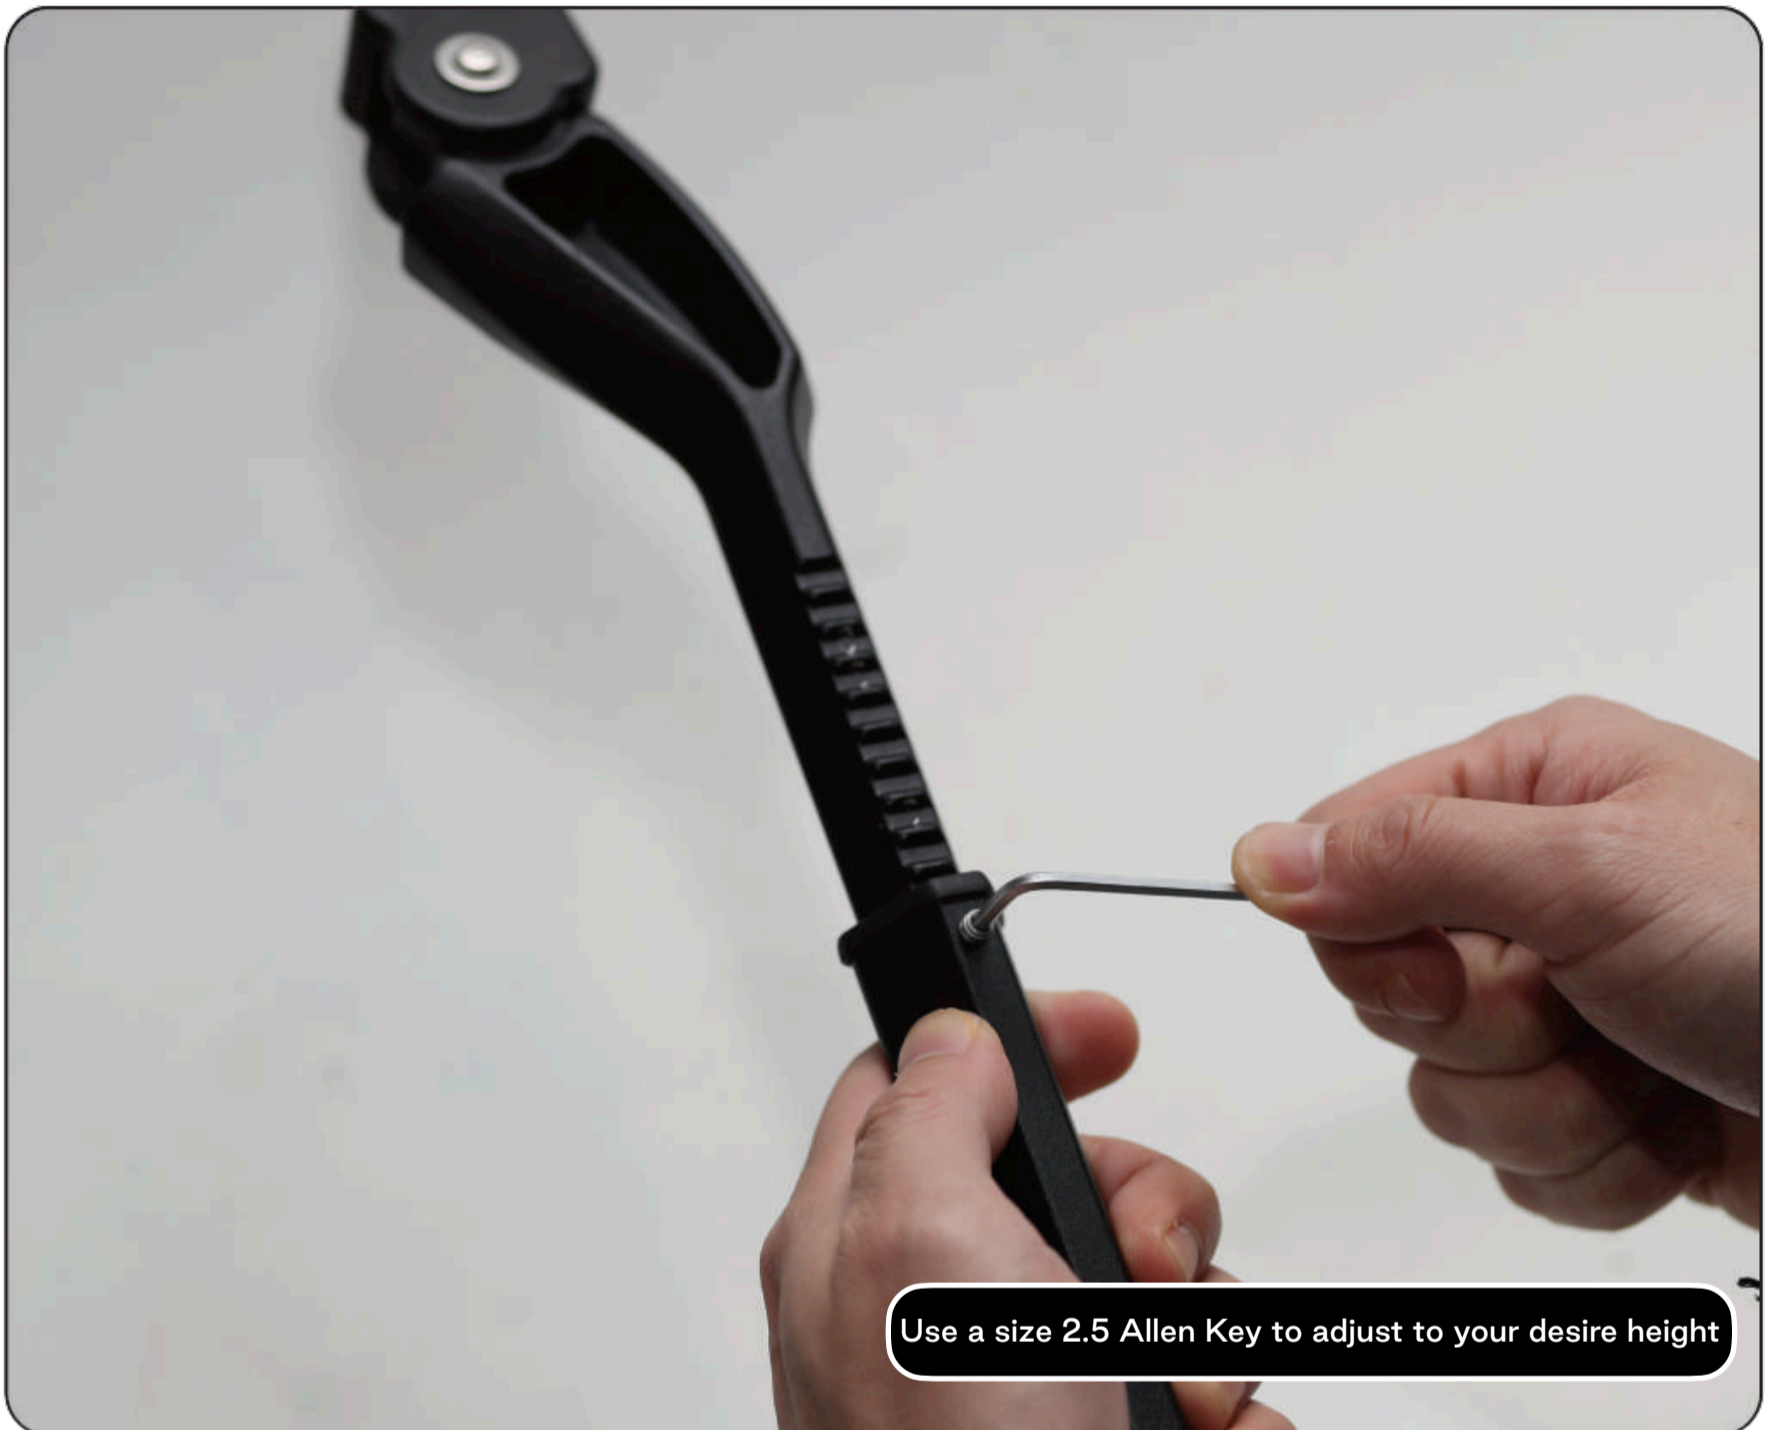

! NOTE: Make sure you do not tighten the bolt too tight

COASTCYCLES