

OUTRIDE
THE
ORDINARY

ASSEMBLY GUIDE

BUZZRAW SADDLE



COLOR

BLACK

@coastcycles

<http://coastcycles.com>

01. CONTENT PAGE

SADDLE ASSEMBLY

STEP 1.1	2
STEP 1.2	3
STEP 1.3	4
STEP 1.4	5

COMPATIBLE WITH

BUZZRAW CLASSIC



BUZZRAW PRO



BUZZRAW X




STEP 1.1 | SADDLE ASSEMBLY


Tool Required

5mm Hex Wrench | 

2 saddle positions.

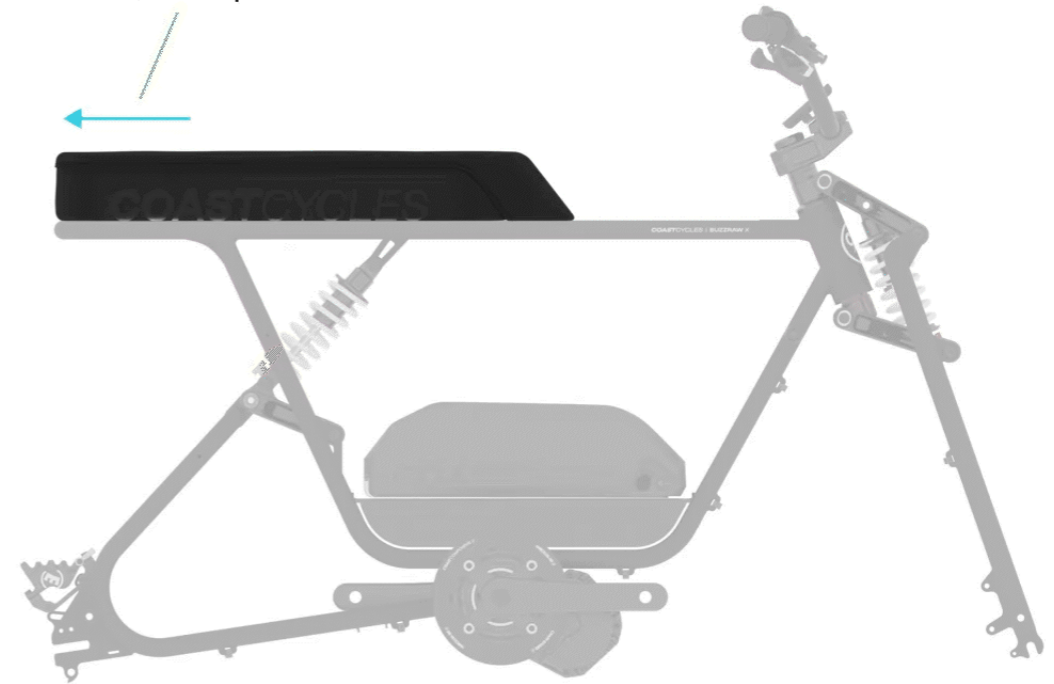


2 saddle positions.

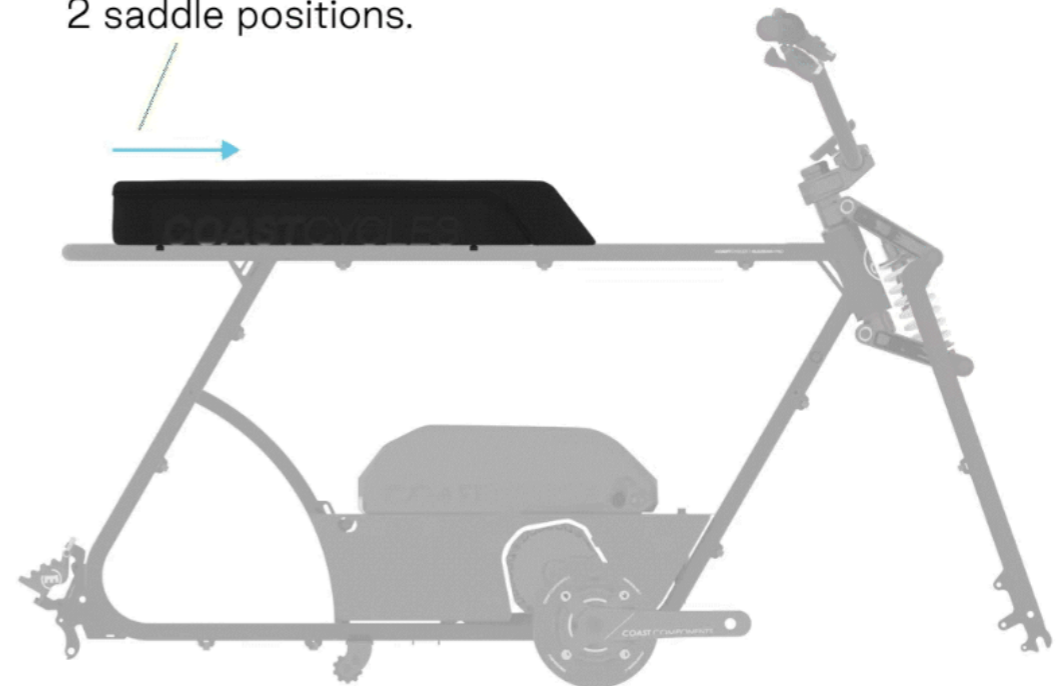

STEP 1.2 | SADDLE ASSEMBLY

Tool Required

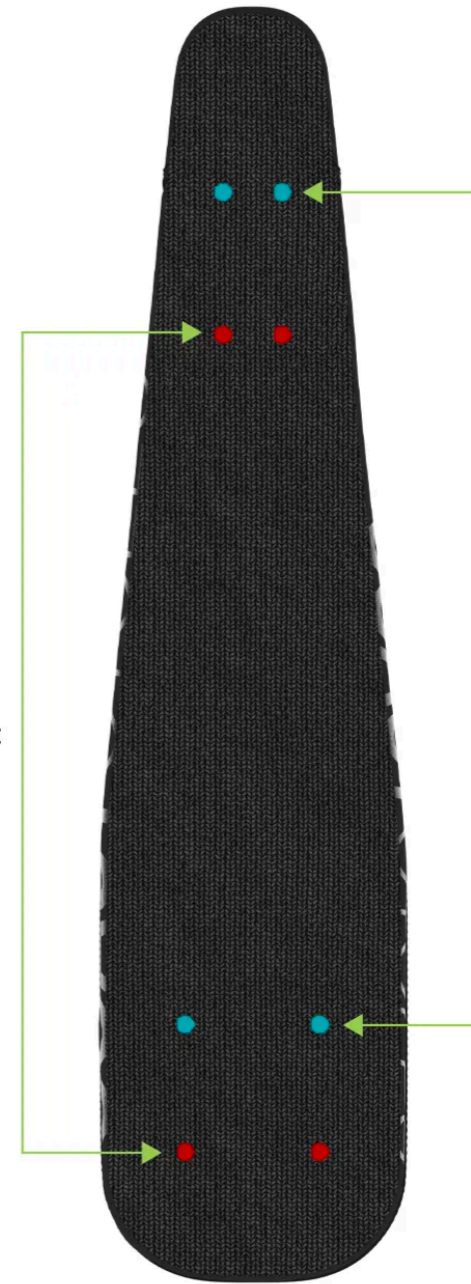
5mm Hex Wrench | Forward Position:
<1.75m HeightRear Position:
>1.75m Height

STEP 1.3 | SADDLE ASSEMBLY

Tool Required

5mm Hex Wrench | 

Locate the 4 saddle bolts and fasten the saddle to the frame as shown to 5Nm with a 5mm hex wrench.

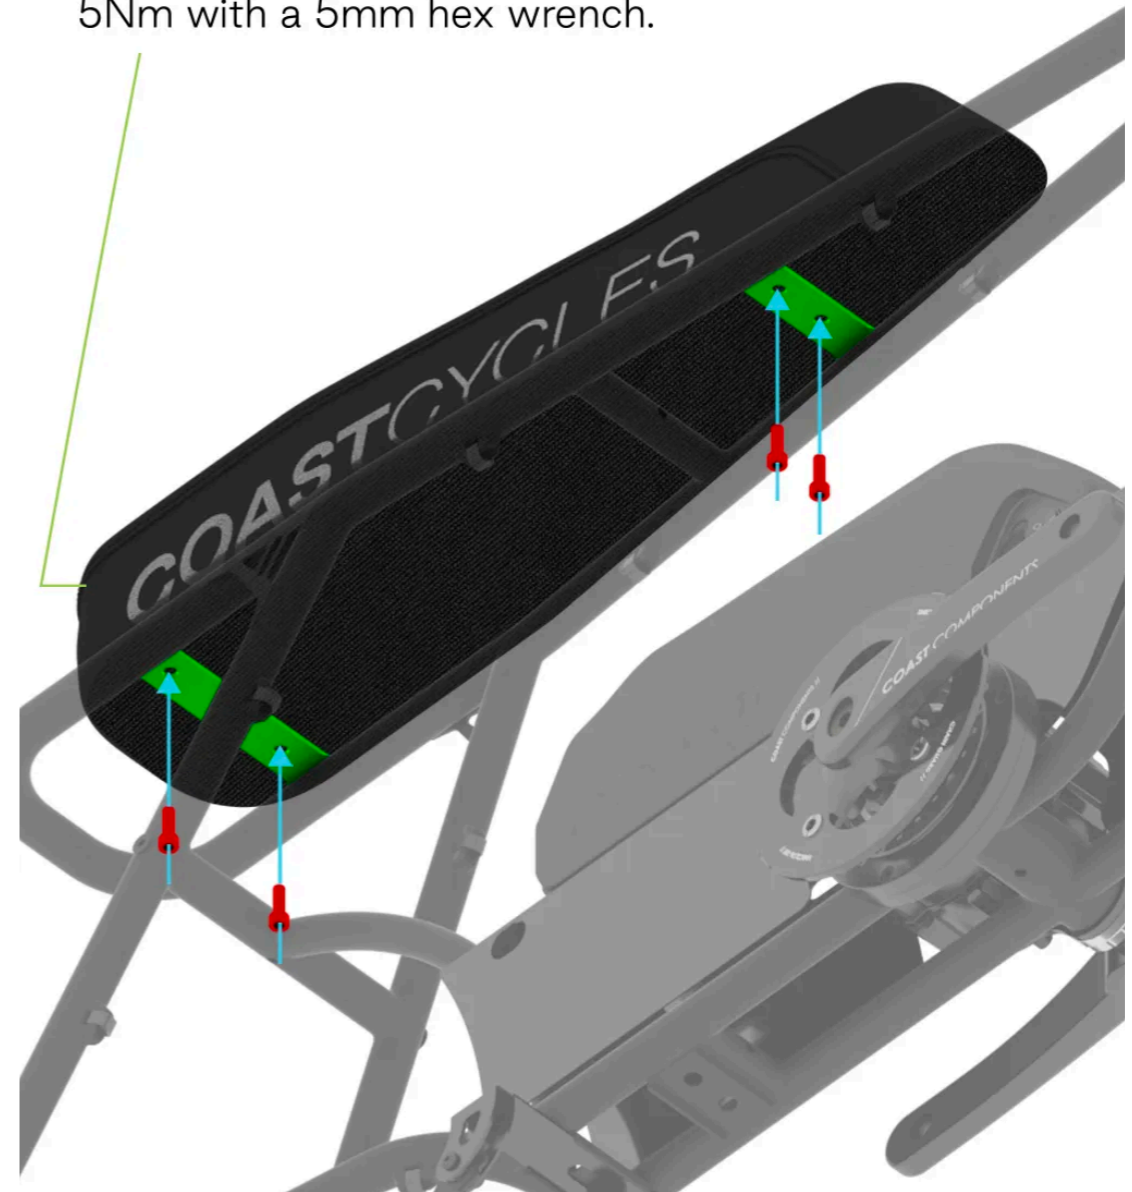

STEP 1.4 | SADDLE ASSEMBLY

Tool Required

5mm Hex Wrench | 

COASTCYCLES