

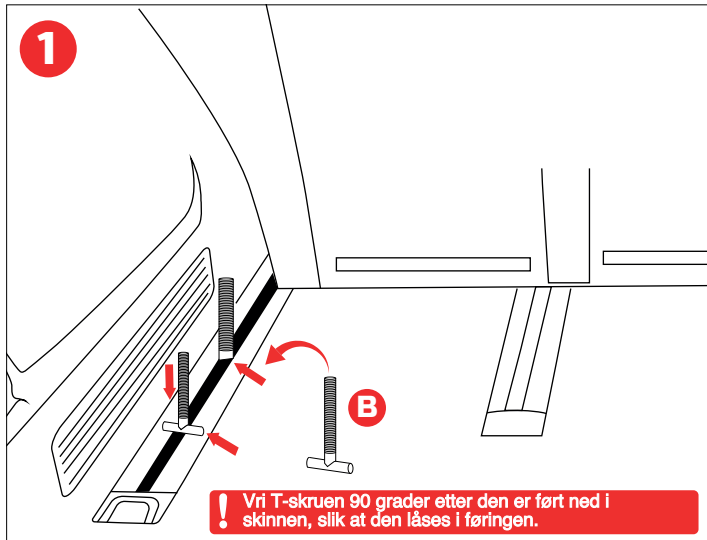
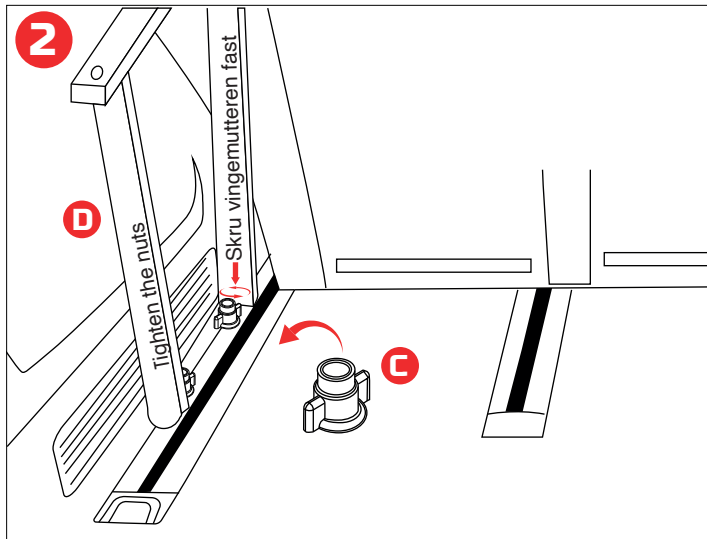


VW T5 T6 / T6.1 MULTIVAN MULTIFLEX-SENG MONTERINGSVEILEDNING


VW T5 T6 / T6.1 MULTIVAN MULTIFLEX-BED ASSEMBLY MANUAL

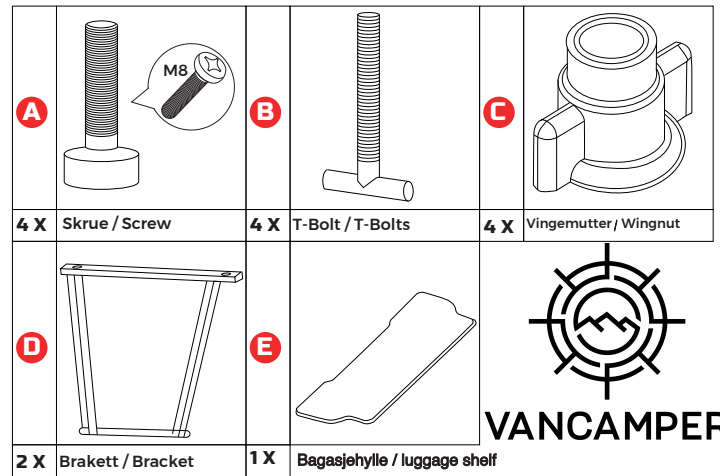


- DE** Sett inn 2 stk. T-bolter i hver skinne
- EN** Insert two T-bolts into the left and right rails

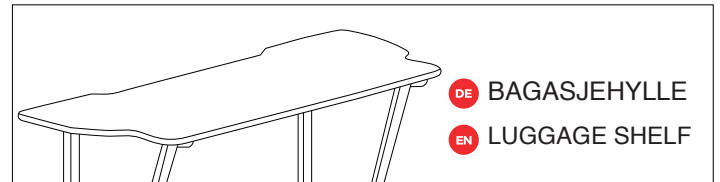


- DE** Fest braketten til T-bolten med vingemutteren
- EN** Attach the brackets to the T-bolts using the wing nut

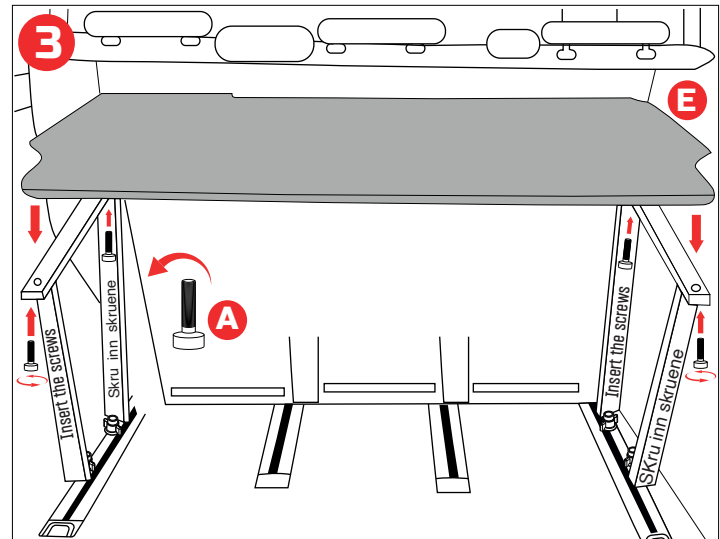

- DE** Fest bagasjebrettet til brakettene med M8-skrue
- EN** Secure the Luggage Shelf with the screws on the brackets

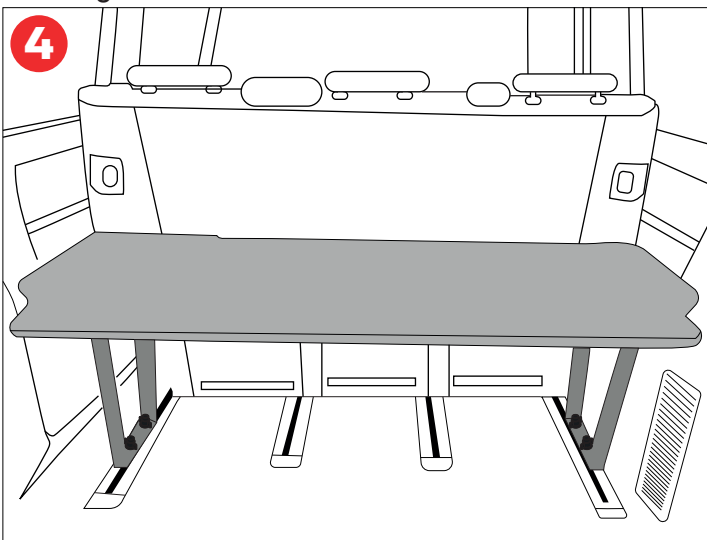

- DE** Bagasjehyllen er nå klar til bruk
- EN** Luggage Internal Shelf is now ready to use

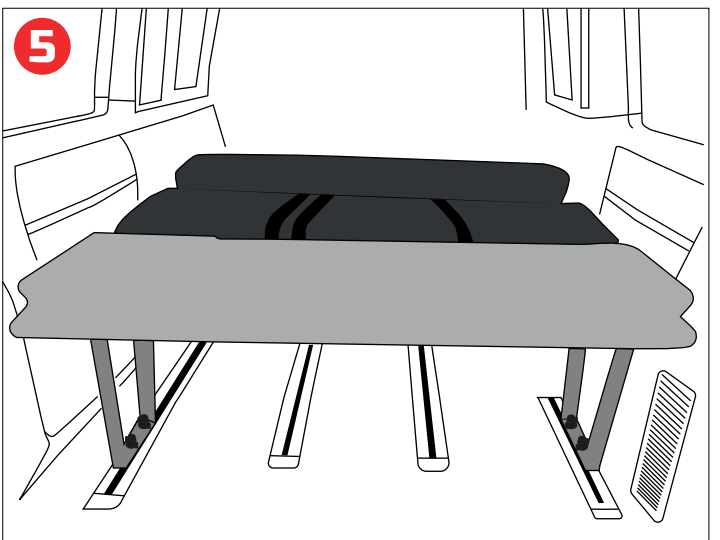

- DE** Legg seteryggen ned og benytt sengen
- EN** You can fold the seats and use it as a bed