


CRAZYFOIL

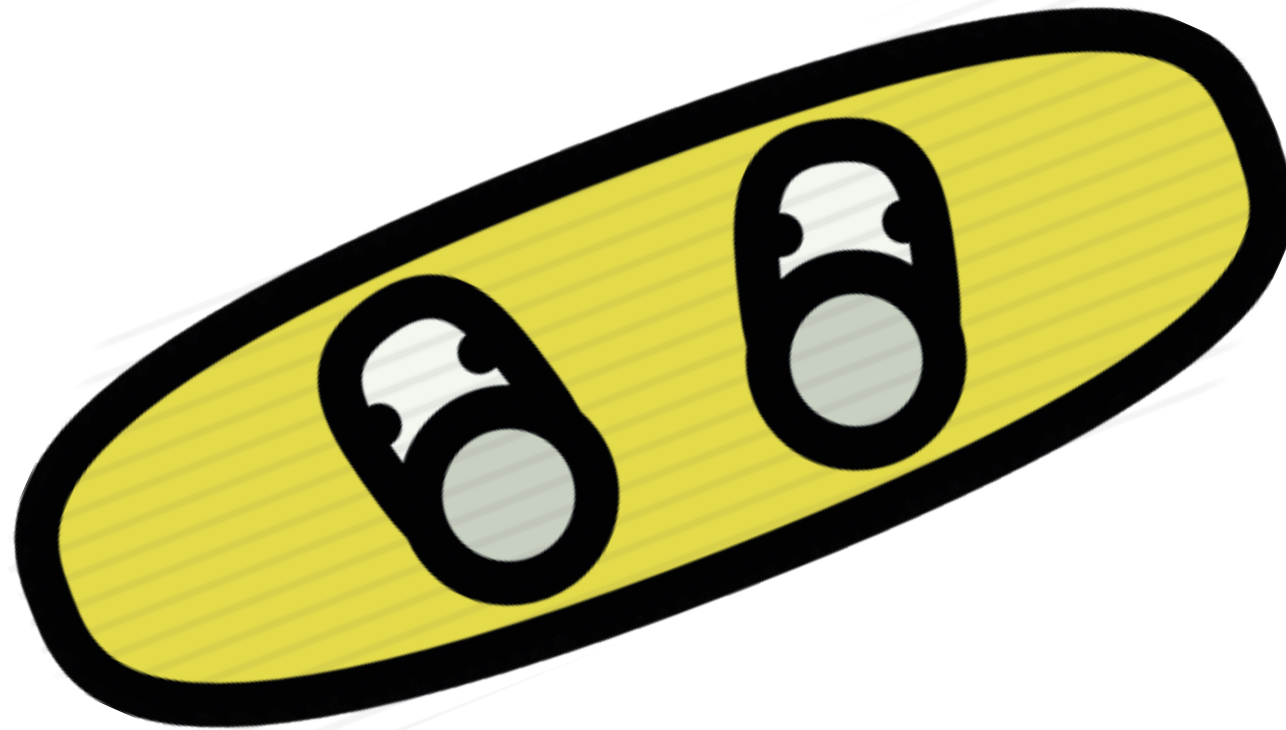

BOARD FIXING

BOOTS POSITIONING & BOARD FIXING

WHAT YOU NEED



REAR BOOT POSITIONING



SELECT LAST BOARD INSERT



*FIX THE FRONT SCREW OF THE
REAR BOOT TO THE BOARD*



*DRILL 6mm HOLE ON THE
BACK SIDE OF THE BOOT*

1.

REAR BOOT POSITIONING



INSTALL M6 SCREW AND WASHER UNDER THE BOARD



INSTALL BUTTERFLY NUT ON TOP TO FIX THE BOOT



TIGHT THE SCREW

**REAR BOOT IS
INSTALLED**

FRONT BOOT POSITIONING



*SELECT INSERT FOR YOUR
COMFORT*



*FIX THE FRONT SCREW OF THE
FRONT BOOT TO THE BOARD*



*DRILL 6mm HOLE ON THE
BACK SIDE OF THE BOOT*

2.

FRONT BOOT POSITIONING



*INSTALL M6 SCREW AND
WASHER UNDER THE BOARD*



*INSTALL BUTTERFLY NUT ON
TOP TO FIX THE BOOT*




TIGHT THE SCREW

*FRONT BOOT IS
INSTALLED*


BOARD FIXING



POSITION TOP PLATE ON THE BOARD, MIDDLE OF IT 25cm FROM MIDDLE OF THE REAR FOOT. PLATE CENTERED AND ALIGNED WITH THE BOARD.

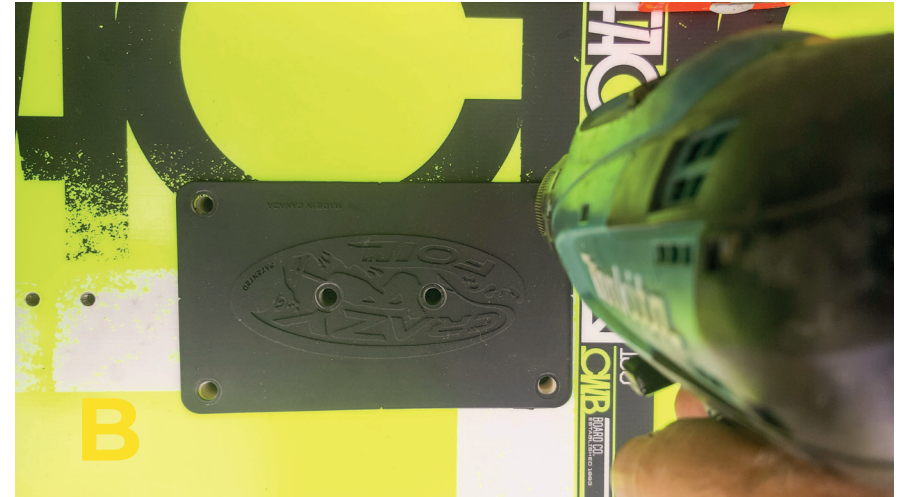

DRILL 4 CORNERS WITH 8mm BIT, USING TOP PLATE AS A TEMPLATE.

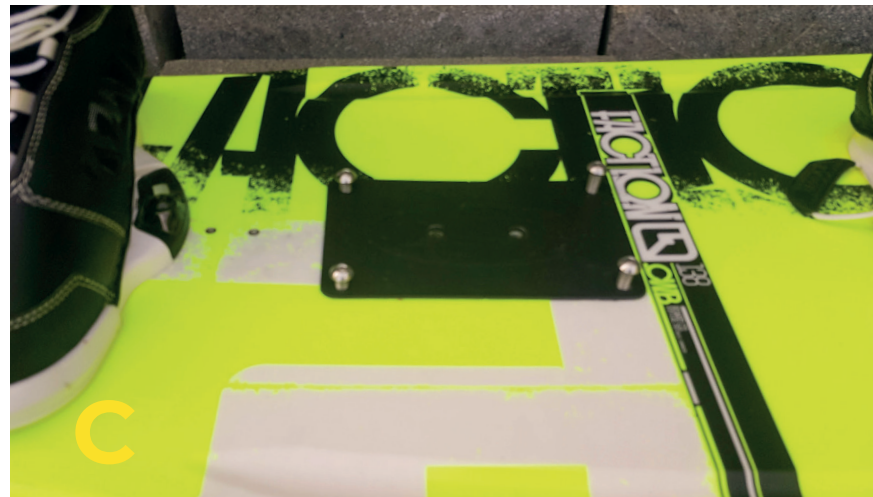

INSTALL M8 40 SCREWS ON 4 CORNERS.

3.

BOARD FIXING



INSTALL THE 4 M8 NUTS



TIGHT THE 4 CORNERS SCREWS

BOARD FIXING



**DRILL 8mm MAST SCREW HOLE
USING BASE MAST AS A TEMPLATE**



**INSTALL MAST UNDER THE BOARD
AND M8 60 ON TOP**



TIGHT THE SCREWS ON THE MAST



**YOUR HYDROFOIL IS
INSTALLED**