

HUMANCENTRIC®

Google Home Mini Wall Mount


Parts included

- (1) Mounting bracket
- (2) Drywall screw
- (2) Drywall anchor

Tools needed for installation


- Phillips head screwdriver
- 3/16 inch diameter drill bit
- Power drill, Hammer

1

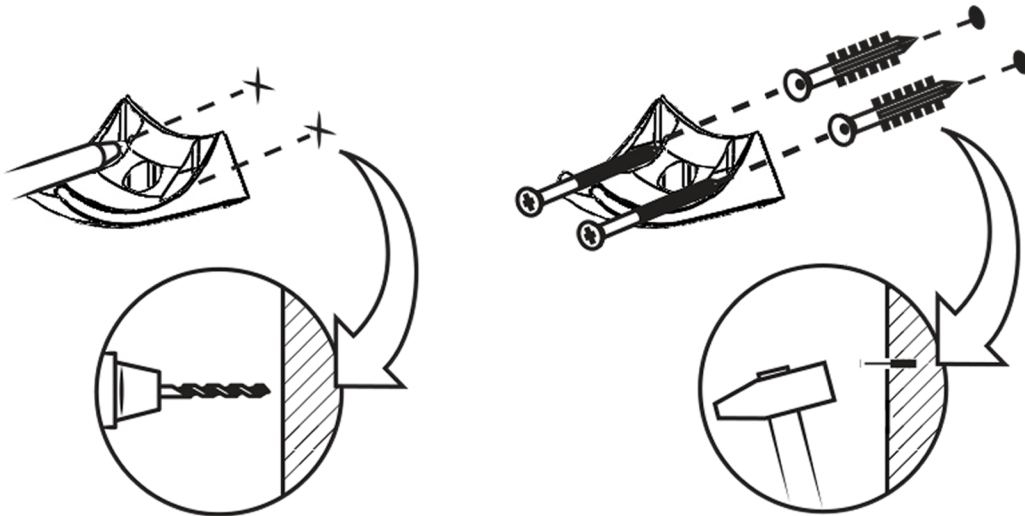

Use a 3/16 inch diameter drill bit

2

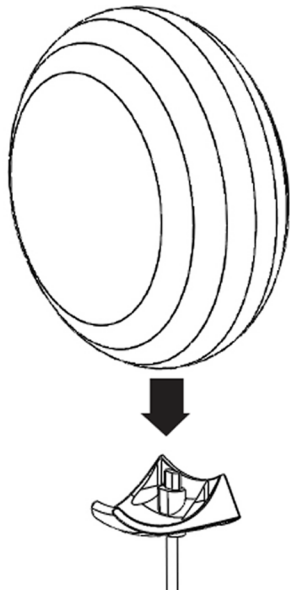

Note: *Ensure the plug can reach the outlet when choosing the location of your mounting bracket*