
## BW200/BW350 REAR WHEEL HUB ADAPTER INSTRUCTIONS



The DMO rear wheel hub adapter kit includes a billet aluminum spacer, as well as a set of nuts, bolts, and washers. To install this kit, you must first remove your rear wheel and drive hub assembly from the swingarm, and then unbolt the wheel from the hub.

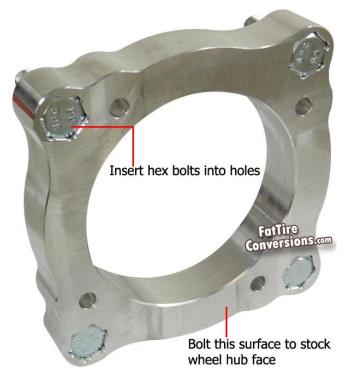

Next, insert the included bolts into the bolt holes as shown above and slide the assembly over the stock wheel studs. Use the smaller lock washers and lock nuts to fasten the aluminum hub adapter/spacer to the stock rear wheel axle hub. A deep socket will be required to tighten the nuts.





With the hub adapter bolted to the stock hub, face the deeper side of the wheel toward the newly installed wheel adapter and slide it over the hex head bolts you inserted into the hub adapter above. Now fasten the wheel to the adapter using the larger included lock washers and lock nuts. Reinstall the entire rear wheel, hub, and axle assembly onto the swingarm and you are good to go!