


# AG FRAME SEAT

## LOW Seat Position:

- Before attaching seat (low), install round rubber feet – 1 on each chair leg (4 total).

## HIGH Seat Position:

- Before attaching seat (high), remove round rubber feet - 1 from each chair leg (4 total).
- Attach fabric shelf to crossbar of one lower leg using Velcro.
- Slide both lower legs into seat tubes until spring pins snap into position.
- Wrap shelf fabric around crossbar of 2nd lower leg. Pull tight, secure using Velcro.

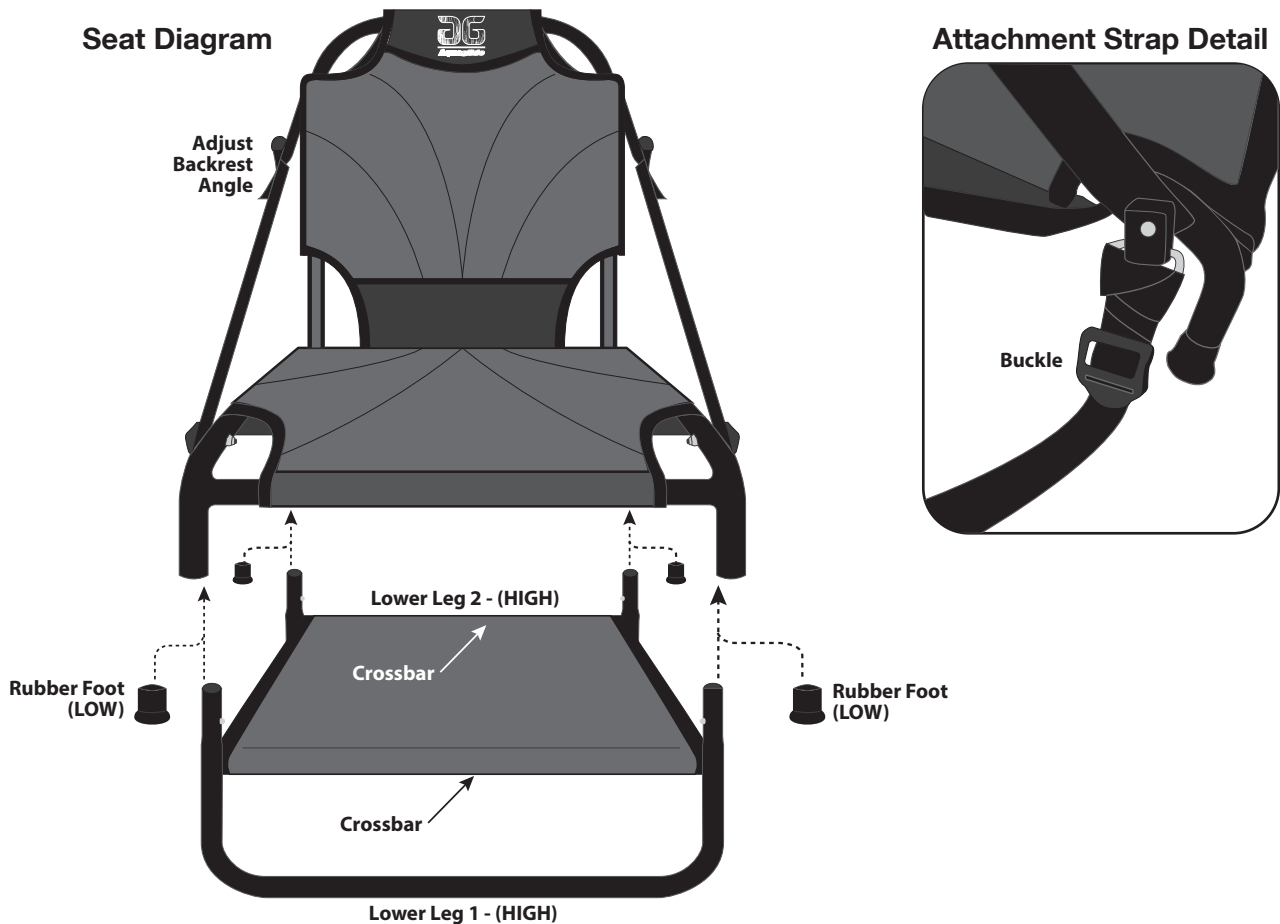

## Seat Installation (kayak & SUP):

- Place seat in desired position. On LOW setting (kayak only) do not push seat to deck until straps are connected – this leaves space to attach. Otherwise, place seat on dropstitch deck.
- Lead webbing outward through kayak floor loop (slightly forward or aft of seat) or SUP carabiner then up to buckle.
- Thread webbing through buckle and tighten, pulling seat securely to deck. Repeat for remaining webbing straps (4 total).
- Adjust seat backrest angle to upright position for paddling.