


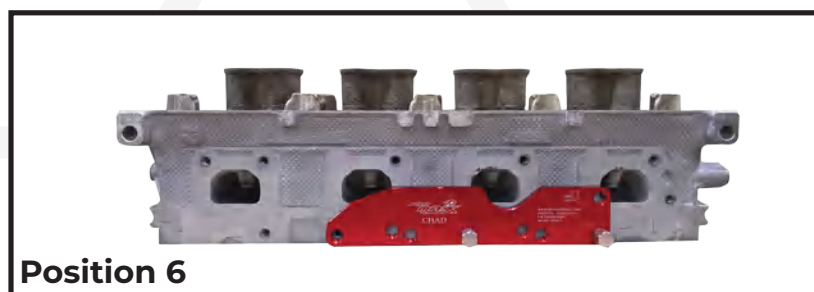
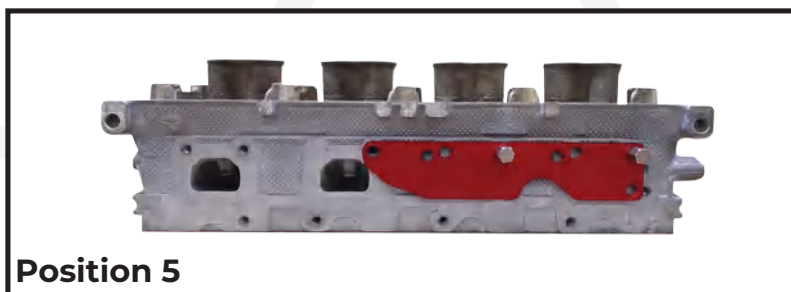
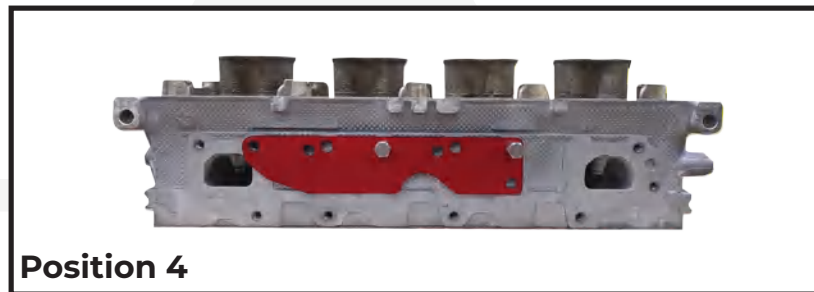


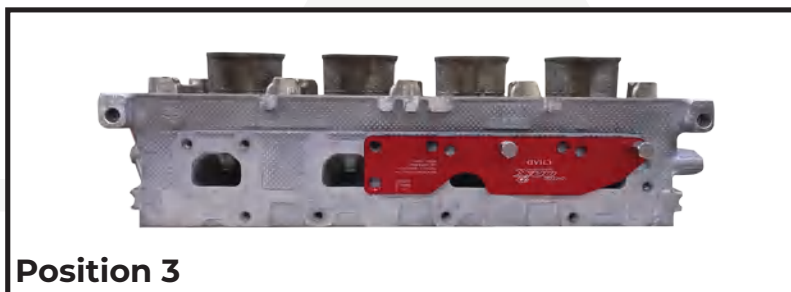

DODGE 6.4L HEMI - RIGHT

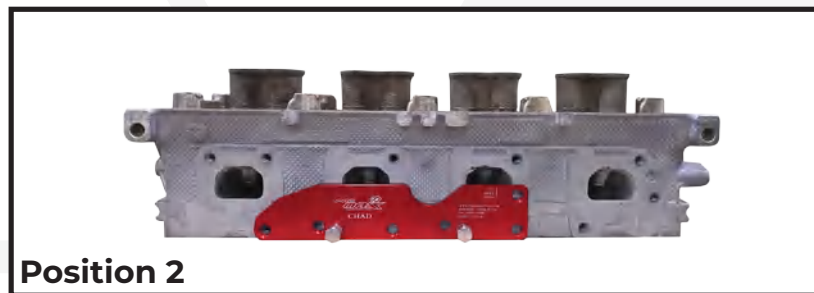

The positions of the plates, bushings, and fasteners can be rearranged to drill dead center on any broken bolt. There must be 2 ProFasteners and 1 ProBushing.

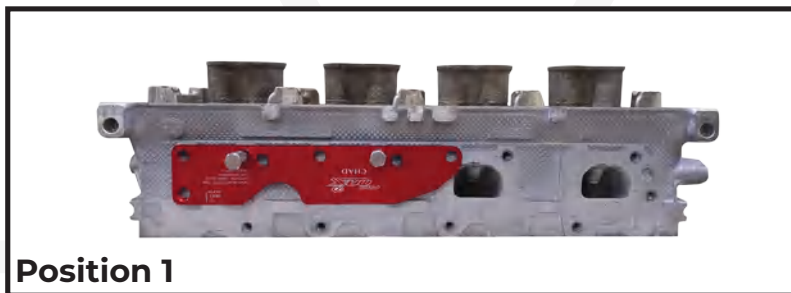







Check Out More Solutions From ProMAXX Tool By Scanning QR Code

📍 1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241
 ☎️ (724) 941-0941
 🌐 www.promaxxtool.com





DODGE 6.4L HEMI - LEFT

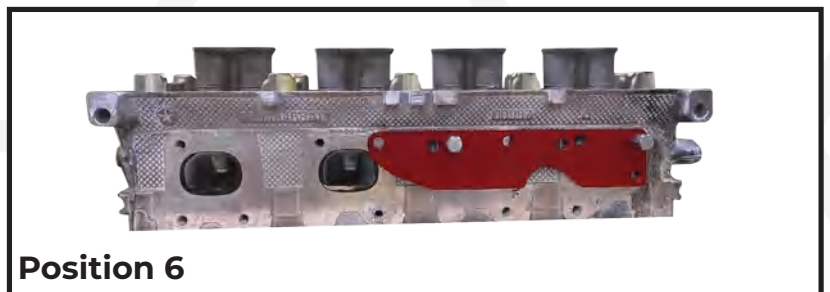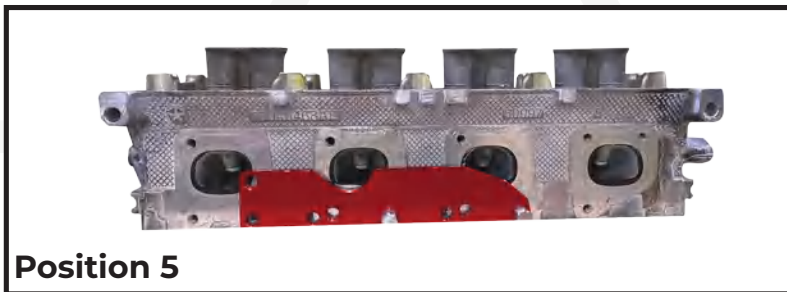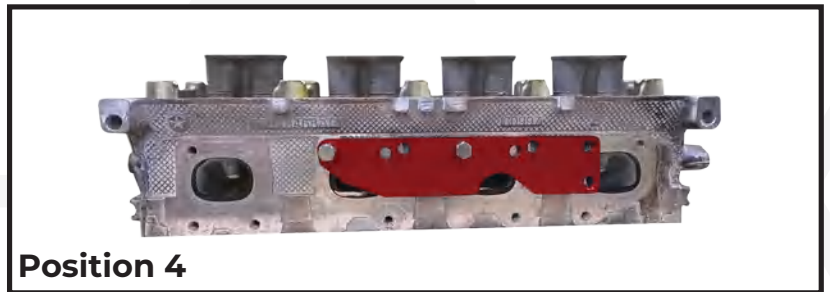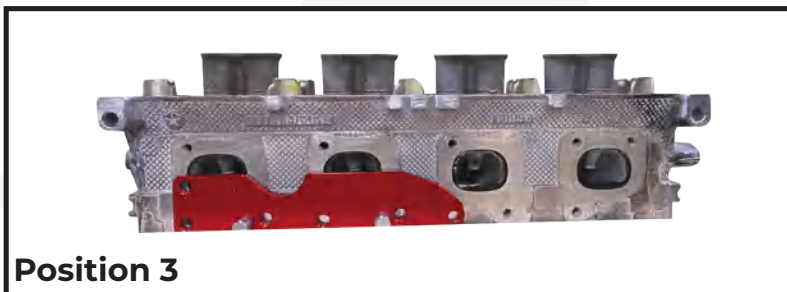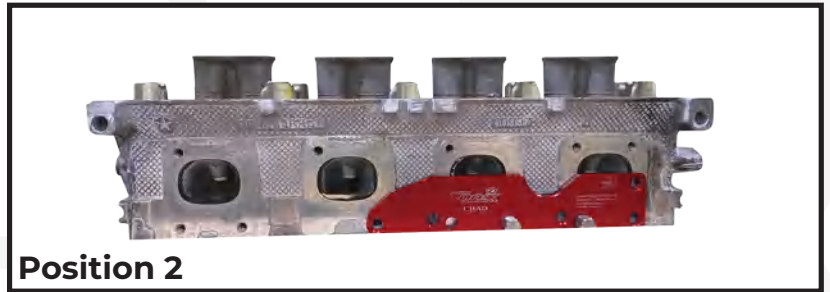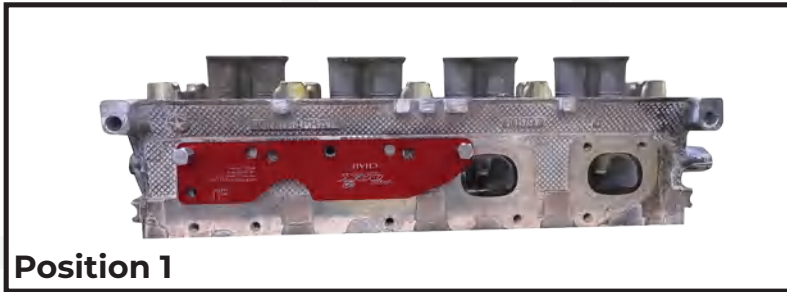

The positions of the plates, bushings, and fasteners can be rearranged to drill dead center on any broken bolt. There must be 2 ProFasteners and 1 ProBushing.



Check Out More Solutions From
ProMAXX Tool By Scanning QR Code

📍 1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241
📞 (724) 941-0941
🌐 www.promaxxtool.com

