




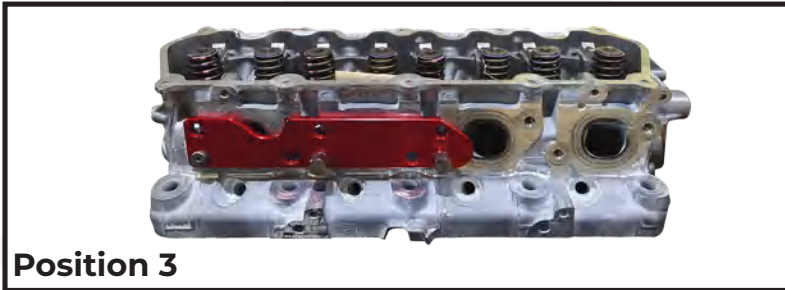

# FORD 7.3L V8 GODZILLA

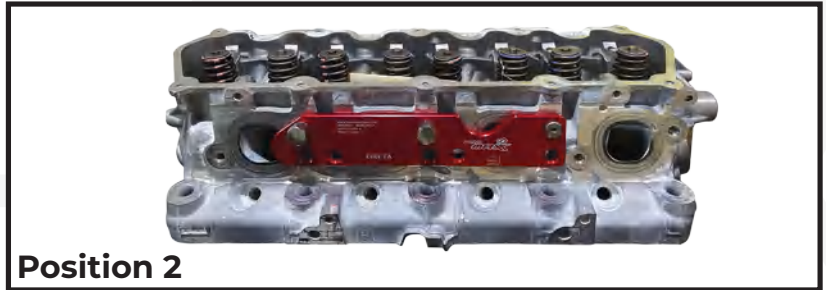

The positions of the plates, bushings, and fasteners can be rearranged to drill dead center on any broken bolt. There must be 2 ProFasteners and 1 ProBushing.

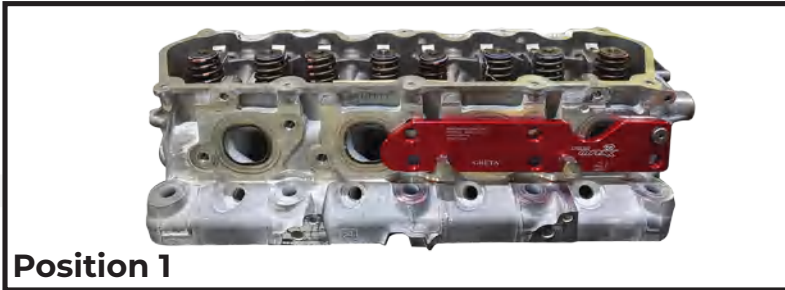

Check Out More Solutions From ProMAXX Tool By Scanning QR Code

📍 1121 Boyce Rd Suite 2000, Pittsburgh, PA 15241  
☎️ (724) 941-0941  
🌐 [www.promaxxtool.com](http://www.promaxxtool.com)

