



Montageanleitung Assembly Instructions



HIGH QUALITY

MADE IN GERMANY

PNr.: SW10063

EAN: 4260754980263






Montageanleitung Assembly Instructions

PREPARATION - WATER LOOP PLANNING

Have a look at the port overview and plan your water loop accordingly. The CPU and GPU are connected in parallel.

Make sure to use the correct in and out ports for the CPU and GPU.

Additional stop settings are provided if only the CPU or GPU ports are used.

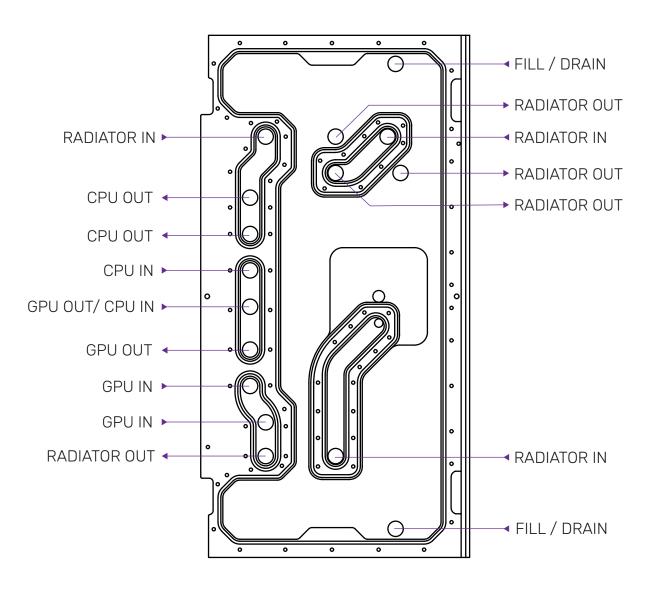






Montageanleitung

Assembly Instructions

2. PACKAGE CONTENTS

WARNING - This product is intended for advanced users. Improper installation may result in damage to your equipment. While all eorts have been made to provide the most comprehensive information possible, Stealkey Customs assumes no liability expressed or implied for any damage(s) occurring to your components as a result of using Stealkey Customs cooling products, either due to mistake or omission on our part in the below instructions, or due to failure or defect in the Stealkey Customs cooling products. Do not disassemble the water block. Warranty will be voided. Turn on the power to your system and discharge your body's static electric charge before proceeding with the installation procedure. If you do not feel comfortable with performing the installation procedure, consult a qualied computer technician.

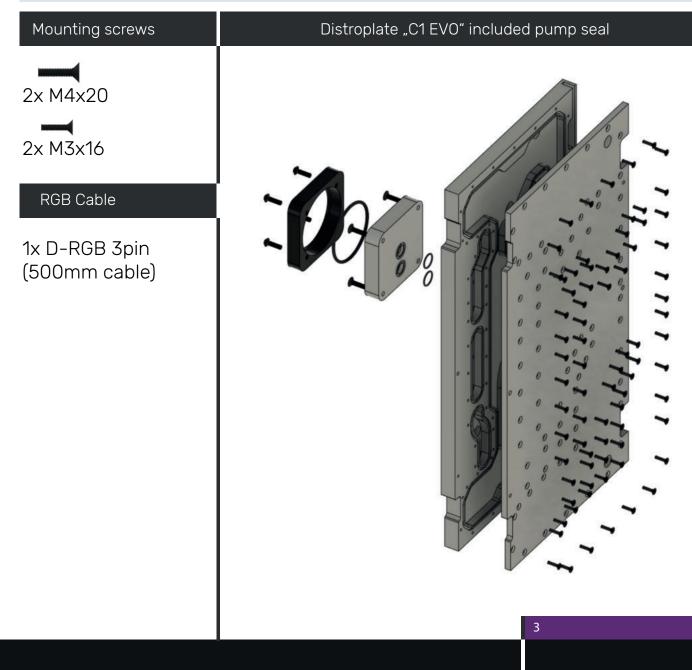






Assembly Instructions

Montageanleitung

3. INSTALL THE DISTRIBUTION PLATE

Install the Distribution Plate behind the front panel of the chassis. Use the 2 included M4 and 2 included M3 screws. Do not overtighten the screws (Max 3-5 N/m).

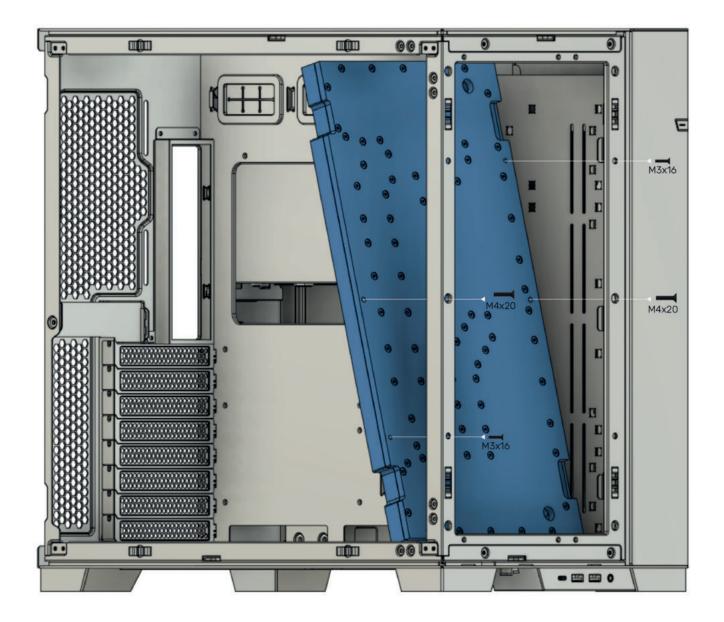

4





Assembly Instructions

Montageanleitung

4. CONNECT THE D-RGB CABLE

Connect the D-RGB Cable to a compatible motherboard.

5. INSTALLING FITTINGS

Install G1/4 threaded male settings and close the remaining ports with Stop Fittings.

Always perform a leak test before providing power to any system components (Max pressure of 0,5 bar).

Allign the screw positions. Carefully loosen the fill port stop fitting to let trapped air bleed out.

6. CLEANING & CARE

Clean the Distribution Plate only with microfibre cloths to avoid scratching the material.

Do not use alcohol-based cleaners to avoid stress cracks in the material.

Before installing the Distrobution Plate, it is recommended to flush the distroplate to remove the last residues.

Acrylic paints can leave residues.






Montageanleitung

Assembly Instructions

7. RESERVOIR DIMENSIONS

Specifications are in mm.

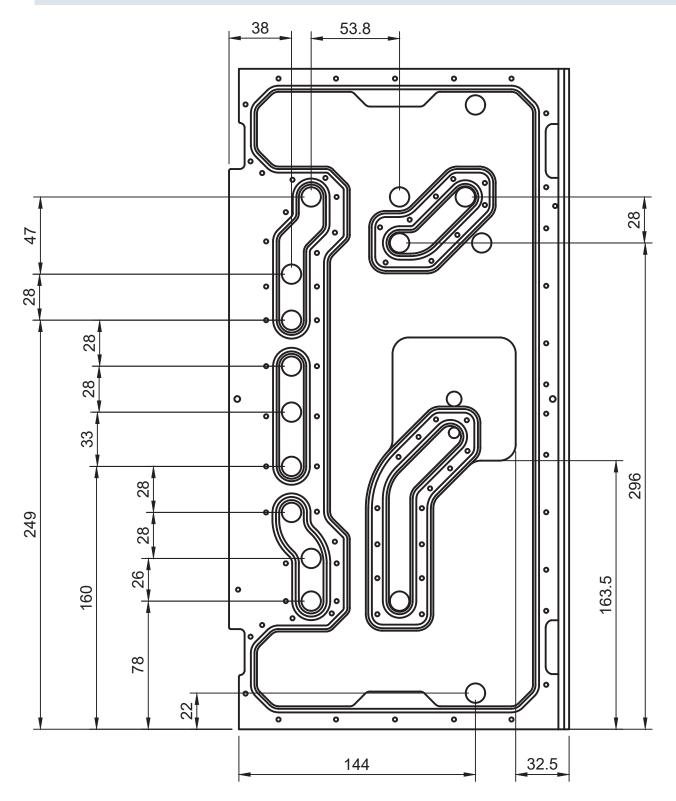

6