

HOTEL EMPORIUM

# BASE LOCK DISPENSER INSTALLATION GUIDE

REFILLABLE / 360ML e 12.17 FL OZ

DISPENSER SIZE: 86.5 L × 58.8 W × 181 H (mm)



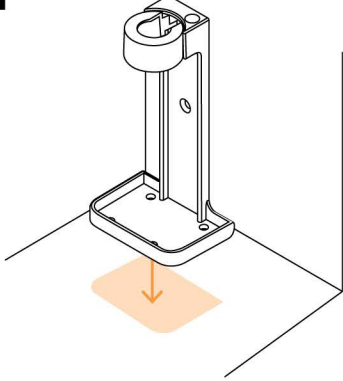
MATERIAL: HDPE Bottle & ABS Bracket

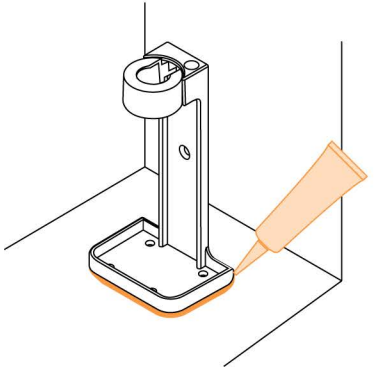
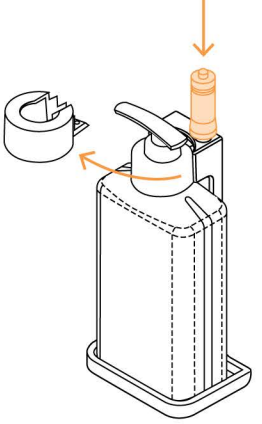
INFO: Tamper-Resistant Bracket & Fluid Indicator Windows



# BASE LOCK DISPENSER INSTALLATION GUIDE

PARTS	TOOLS	MAGNET KEY INFO
 <p>BRACKET      3M TAPE      KEY      BOTTLE</p>	 <p>ALCOHOL WIPE      CAULK</p>	 <p><b>Avoid magnetic key contact</b> from all electronic devices and IC cards. Ask staff to hang magnetic key on the handlebars of the cleaning trolley.</p>
<b>ADDITIONAL INFO</b> <p><b>Do not use a corrosive detergent.</b> <b>Use a soft damp cloth, warm water, and mild cleaner to clean bottles and brackets.</b></p>		

<b>1</b>  <p><b>Clean surface with alcohol wipe.</b> Make sure surface is fully clean and dry before installation.</p>	<b>2</b>  <p>For tape installation, clean the bottom of the bracket then adhere the double sided 3M mounting tape to the bracket. Peel film off.</p>	<b>3</b>  <p>Press bracket firmly onto the countertop for 30 seconds until it is secured.</p>
--	--	--

<b>4</b>  <p><b>Place a line of adhesive caulk</b> around the bracket to prevent water and grime from getting under the bracket. Wipe away any excess caulk. <b>Wait for 72 hours</b> before inserting the bottles to allow tape to securely set.</p>	<b>5</b>  <p>Unscrew magnetic key cap and place key on top of the bracket to unlock the neck clamp. Lift the neck clamp from the bracket and place the bottle inside. Reassemble neck clamp and remove key. <b>Dispenser is ready to use!</b></p>
---	---