

HOTEL EMPORIUM

FLOATING DISPENSER INSTALLATION GUIDE

NON-REFILLABLE / 380ML e 12.8 FL OZ

CYLINDER BOTTLE SIZE: Ø63.3 W × 192.4 H (mm)


CURVE BOTTLE SIZE: Ø63.5 L × 53.3 W × 206.8 H (mm)

RECTANGLE BOTTLE SIZE: 67.6 L × 40 W × 203.9 H (mm)

BRACKET SIZE: 43 L × 12.2 W × 75.8 H (mm)

MATERIAL: HDPE Bottle, PE/PP Pump, & ABS Bracket


INFO: Tamper-Resistant Bracket, Magnetic Key, & Fluid Indicator Window

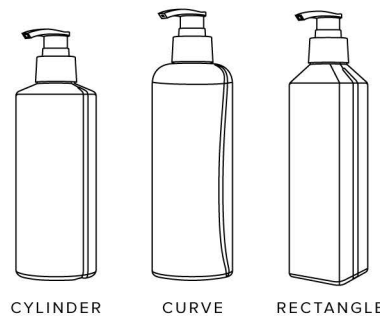


FLOATING DISPENSERS INSTALLATION GUIDE

PARTS INCLUDED IN INSTALLATION KIT

(SHAMPOO, CONDITIONER, AND BODY WASH ARE NOT INCLUDED)



(2)
WALL ANCHORS




(2)
SCREWS



(1)
3M TAPE



(1)
KEY





(1)
BRACKET



(1)
380ML BOTTLE

RECOMMENDED PLACEMENT GUIDE

ON THE BACK WALL, OPPOSITE OF THE SHOWER HEAD
(NOT TO SCALE)

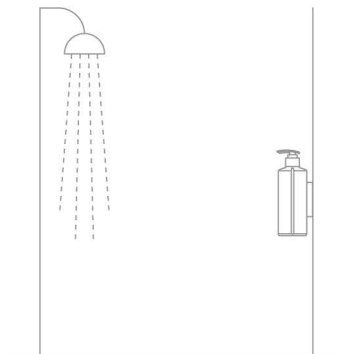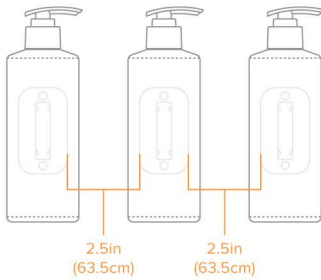

48in max
(121.9cm)

ADA COMPLIANT

RECOMMENDED TOOLS



ALCOHOL
WIPE



LEVEL




TAPE
MEASURE



TAPE



CAULK



POWER
DRILL



HAMMER



SCREW
DRIVER

ADDITIONAL INFO

Do not use a corrosive detergent.
Use a soft damp cloth, warm water, and mild cleaner to clean bottles and brackets.
Recommended installation is mounting bracket with both screws and tape.


FLOATING DISPENSERS INSTALLATION GUIDE

1





Clean surface with alcohol wipe.
Make sure surface is fully dry before installation.

2

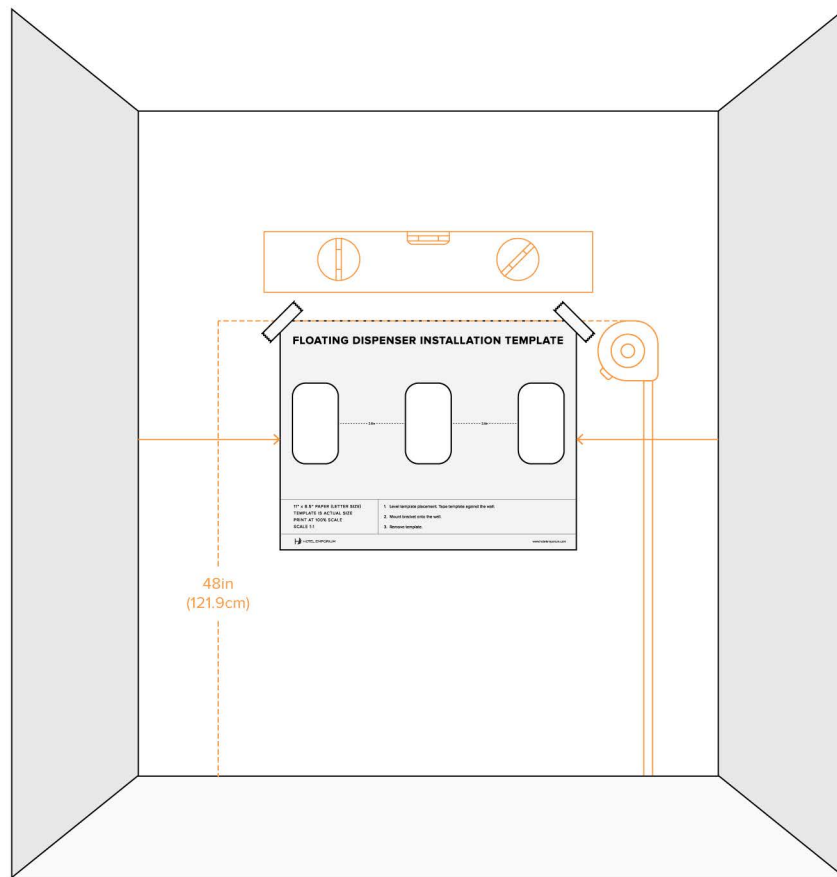

Determine the proper placement of dispenser. Tape template onto the wall and make sure template is level. Recommended height is 48" from the floor to the pump of the dispensers.


3A

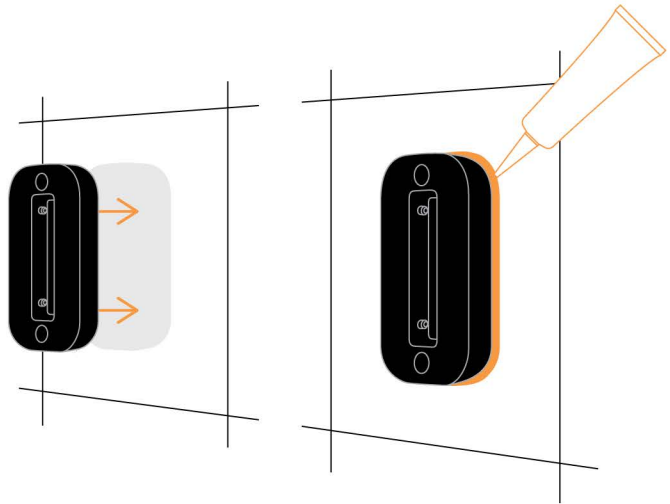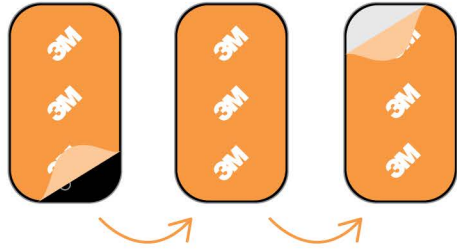

Tape Installation

1. For tape installation, clean back of bracket then adhere the double sided 3M mounting tape to the bracket. Peel film off.
2. Press bracket firmly onto the wall for 30 seconds until it is secured. Repeat process for other brackets. Remove template.
3. **Place a line of adhesive caulk** around the bracket to prevent water and grime from getting behind the bracket. Wipe away any excess caulk. **Wait 72 hours** before inserting the bottles to allow tape to securely set.


3B

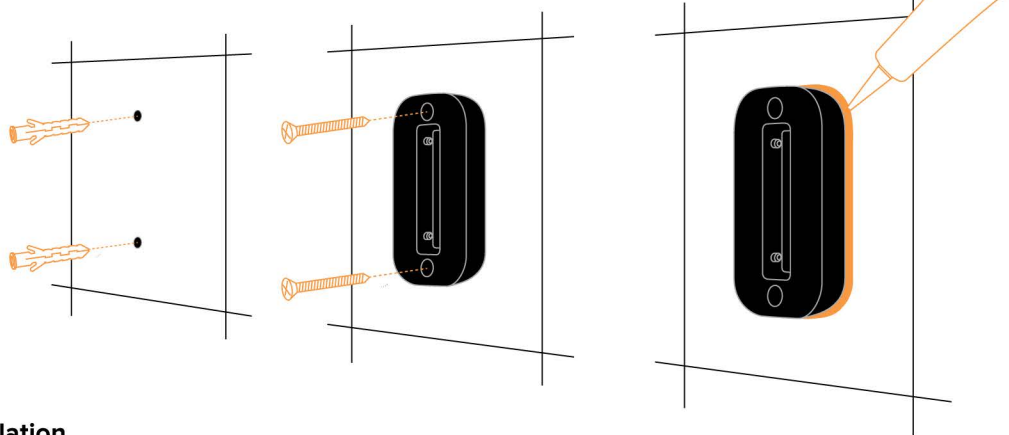

Screw Installation

1. For screw installation, use bracket to mark the bracket holes on the wall. Drill bracket holes into the wall.
2. Screw in wall anchors with your hands, then use a hammer to tap anchors flush into the wall.
3. Place bracket into position on the wall and use a screwdriver to tighten screws in place.
4. **Place a line of adhesive caulk** around the bracket to prevent water and grime from getting behind the bracket. Wipe away any excess caulk. **Wait 24 hours** for caulk to dry.


4

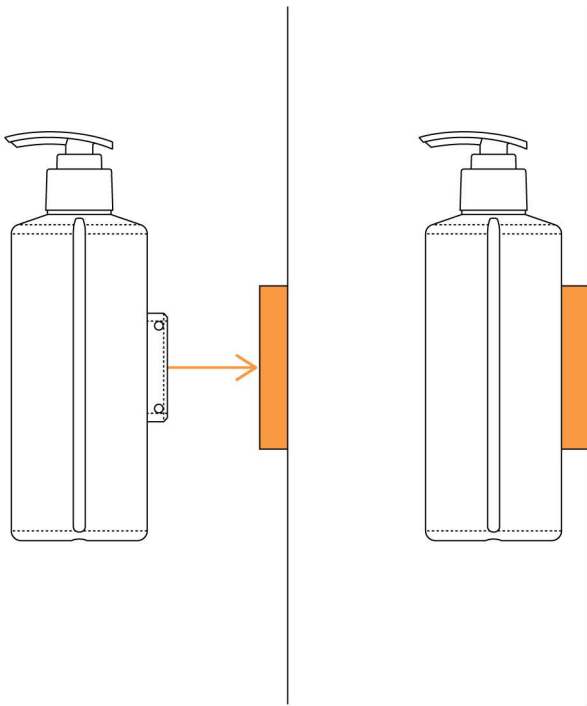

Push the bottle into the bracket where the backing fits into the bracket crevice and it clicks into place.


Dispenser is ready to use!

5

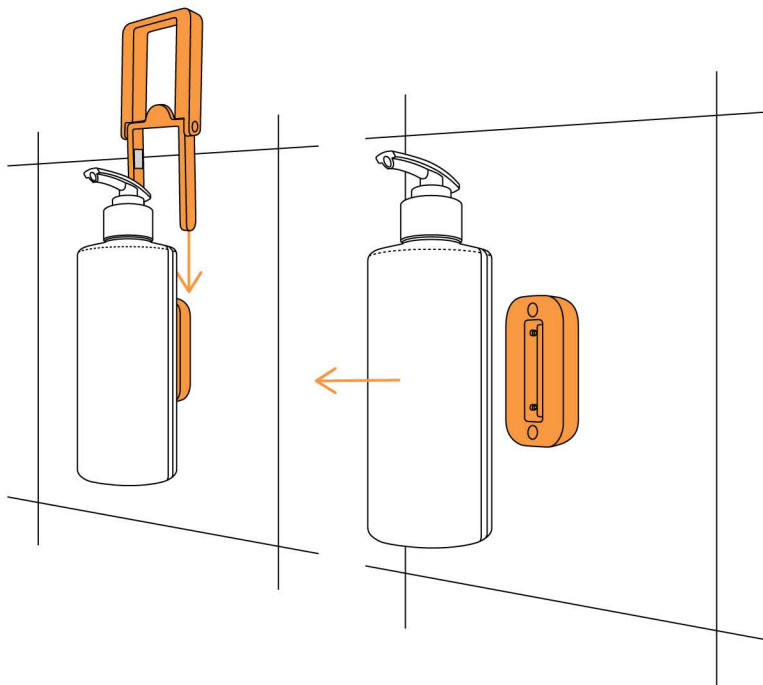

Open the magnetic key and with one hand on the bottle, slide the key to fit the entire sides of the bracket to release the bottle. Remove the emptied bottle from the bracket and replace with a new bottle.

FLOATING DISPENSER INSTALLATION TEMPLATE

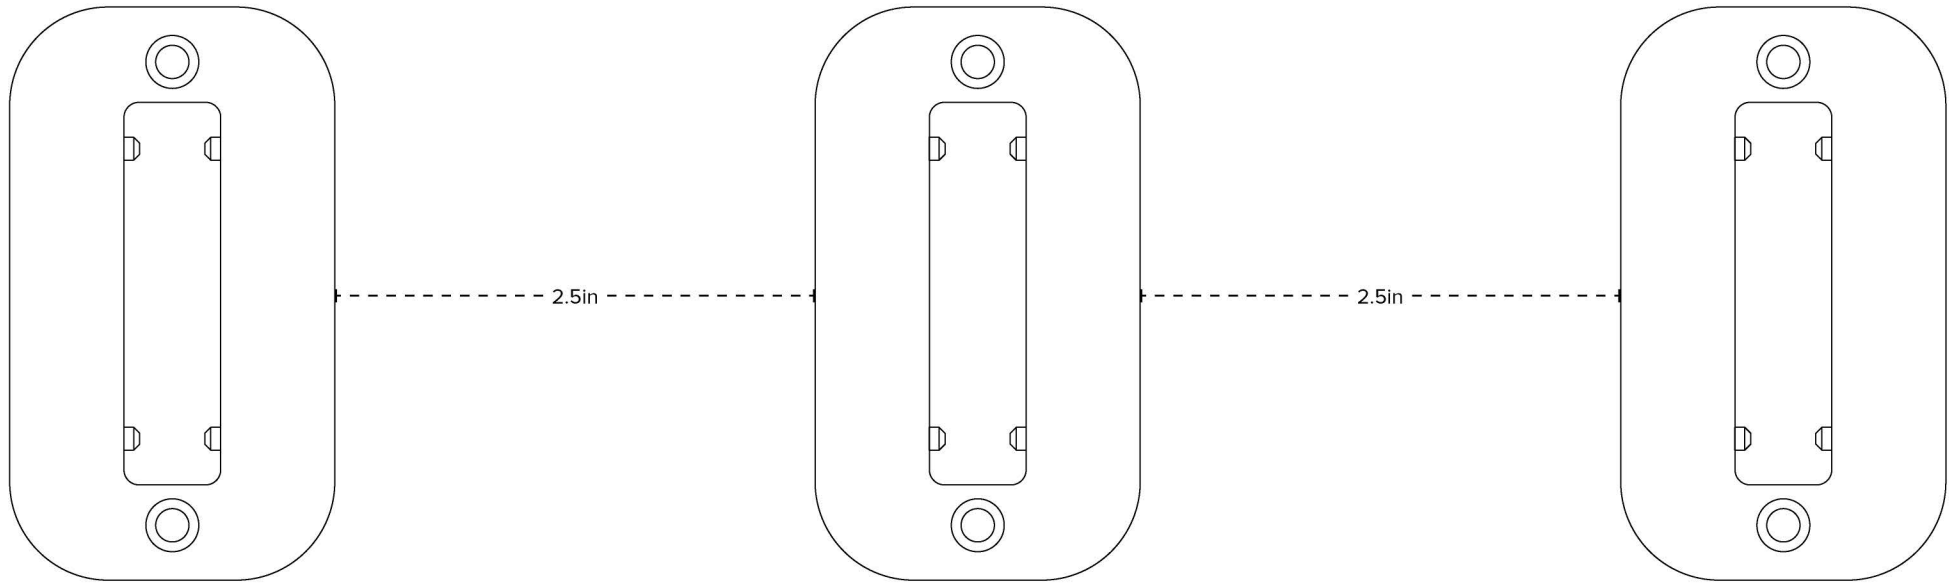

11" x 8.5" PAPER (LETTER SIZE)
TEMPLATE IS ACTUAL SIZE
PRINT AT 100% SCALE
SCALE 1:1

1. Level template placement. Tape template against the wall.
2. Mount bracket onto the wall.
3. Remove template.