


Berlin Bookcase/Showcase

E Series Assembly Guide




Need Help? If you face any issues during assembly, feel free to contact us via WhatsApp:
+90 532 510 06 75 - +90 531 780 21 32 - +90 532 587 75 79


- 25cm Telescopic Rail (1 group)
- Hinge with Soft Close Feature (4 pieces)
- Handle & Screw (3 pieces)
- Screw (for side panel locking) (40 pieces)
- 120 cm Double-Grooved Channel Panel
- Furniture Leg (4 pieces)
- Metal Dowel (36 pieces)
- Linco Connector + Metal Minifix Connector (36 pieces)
- 4x18 Wood Screw (40 pieces)
- T Dowel (30 pieces)
- Shelf Pin (8 pieces)
- Set screw (1 piece)
- 6x25 Star Screw (1 piece)
- A
- B
- C
- D
- E
- F
- G
- H
- I
- J
- K
- L
- M

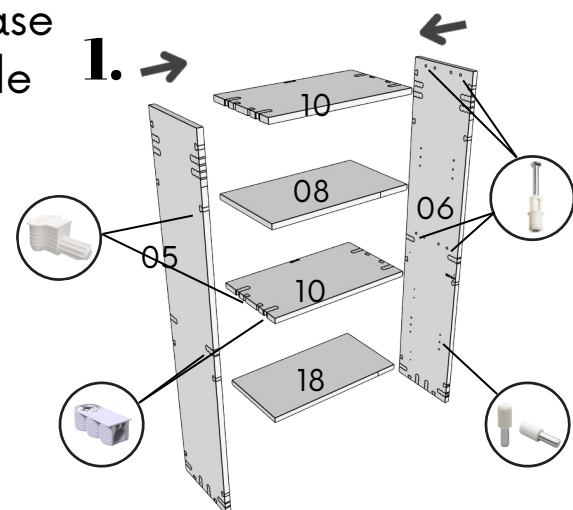


1. → Insert the Linco's (B), T Dowels (D), and Metal Pins (A) into the pre-drilled holes on parts 05, 06, and 10. Assemble the parts as shown.

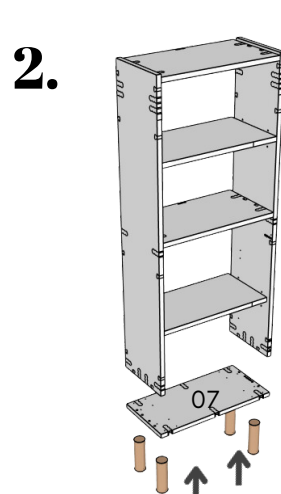


2. Attach the appropriate hardware to the slots on part 07, then mount the 07 piece to the module you assembled in the first step. For the cabinet legs, insert the black inner piece into the slot shown with a black arrow, and secure it with wood screws (C) through the pre-drilled holes on the bottom surface of part 07. Place the wood-textured sections on top as shown.

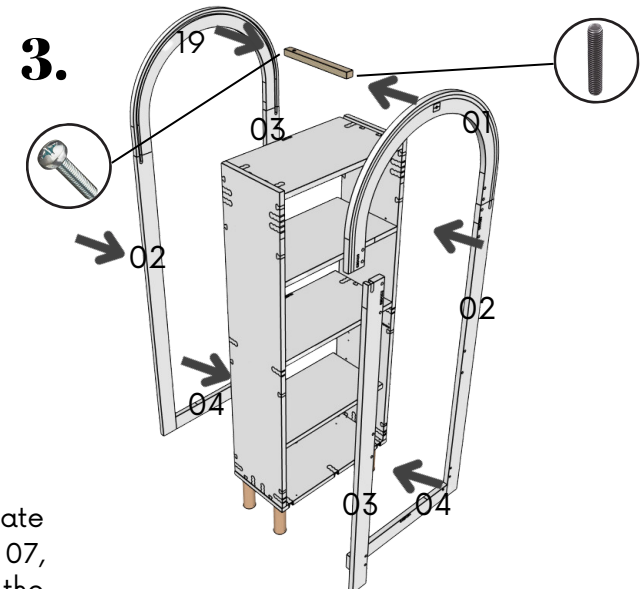


3. Attach a setscrew (F) to one end of the thick slat, then connect it to part 01. After that, attach 01-02-03 (**except part 03 from the group**), 04, and 19 as shown in the diagram. Next, secure part 19 to the thick slat with a star screw (G) from the back hole.

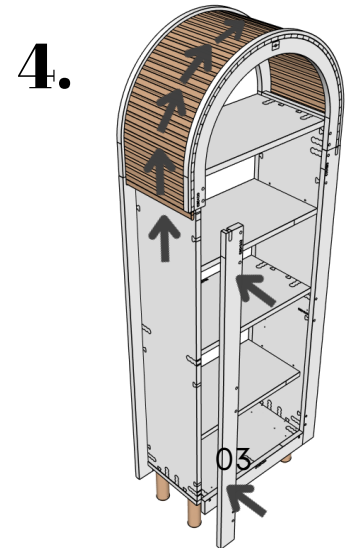

4. Insert the slats into the opening at the top corner of the unattached part 03. Then, connect the unassembled part 03 with the double-grooved piece (L), and slide it behind the cabinet with the screw (K).

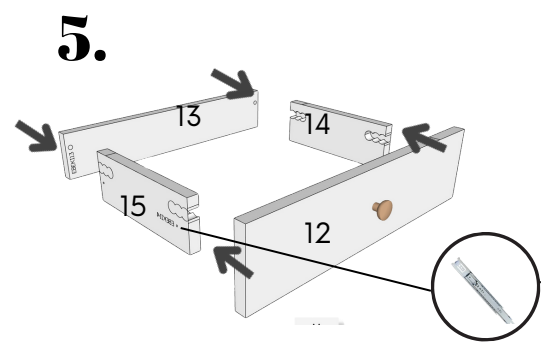

5. Assemble the drawer parts using the appropriate hardware as shown. Attach the drawer rails to parts 15 and 14.

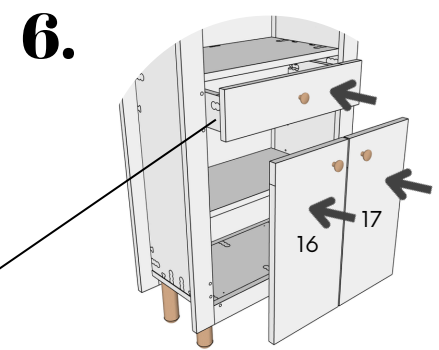

6. Attach the drawer rails from the ground level and place the drawer frames in position. Secure the door hinges with screws (C) into the pre-drilled holes on the doors. Then, align and mount the doors to the cabinet. Attach the handles to complete the assembly.