



CLEARMIRROR



IMPORTANT: INSTALLATION PREPARATION & CARE

Prep The Wall And Seal The Mirror Edges With Mastic

Clean the wall and prep with a good quality, environmentally safe, acrylic sealer (Gunther Prime-N-Seal). When applying adhesive to secure mirror to wall, **also run a continuous bead around the entire perimeter**. This provides a moisture seal and protects from grout sealant, glass cleaners and other chemicals.

We strongly encourage only soap and water be used to clean mirror and tile near the mirror.

Prevent Mirror From Turning Black

ClearMirror shower mirrors are made from low-iron mirror produced to the highest standards. However, if chemicals other than approved adhesives come in contact the mirror backing, it could turn the mirror black.

MIRRORS THAT TURN BLACK AFTER INSTALLATION ARE NOT COVERED UNDER WARRANTY!

The only chemical that should contact the mirror backing is mirror adhesive. Do not use silicone.


The adhesive will not harm the heater. Use as needed to safely secure the mirror.

Apply continuous mastic bead around the entire perimeter of **mirror back** to create a vapor seal.



Mirror Back ←

Heater →

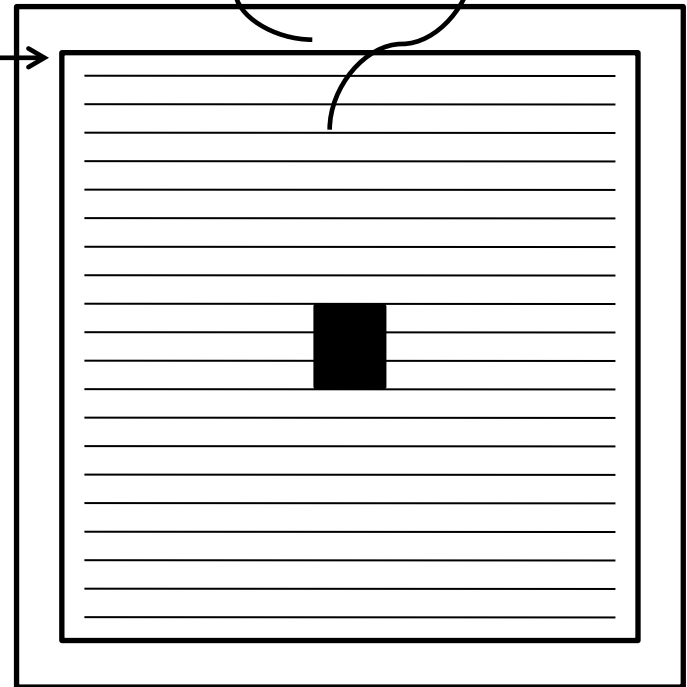

Apply adhesive on the open mirror surface and to heater for mounting to wall.

Brace The Mirror – Drying Times Vary

Tape or brace mirror in place until the adhesive is completely dry.

Use Premium Adhesive For Best Results

Use **Gunther Premier Plus Mirror Mastic, KERDI Fix, or Wedi 610 Adhesive**.

Available from your local mirror/glass/tile specialist or online through Amazon or CR Laurence. Products have a shelf life, so we do not provide it with your shower mirror. Other premium mirror mastics will work but Gunther, KERDI Fix & Wedi 610 are recommended.

NewHome Bath & Mirror

425 Weir Drive • Woodbury, MN 55125 • 651.251.9036