

Instrucciones de montaje · Assembly Instructions

Cómoda Trevi

5032906



ES · IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS.

LÉASE ATENTAMENTE.

EN · IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR · ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT · IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.


PT · IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ANTENTAMENTE.

R · ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТИТЕ.


A · الامعت سالا لابق اديج أرقا. عجارم للظفح ا.م.اه

CN · 重要事项：保留以备将来参考，请仔细阅读。



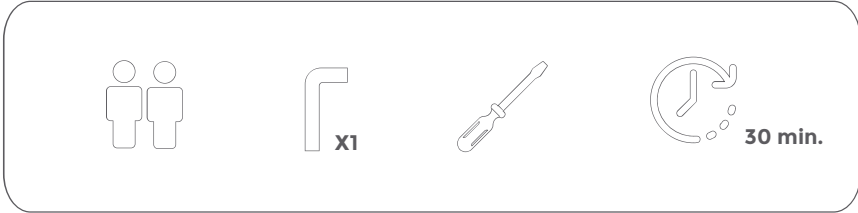

C07914 x1



C05503 x8
(M6x40)




C05366 x8




C01537 x20



C11092 x1




C10392 x1



C00326 x1



C01419 x12




C01538 x20




C01235 x12



C14464 x2




C00329 x1



C11360 x4




C00192 x4
(M4x25)



L







C09061 x2





R




C04790 x8

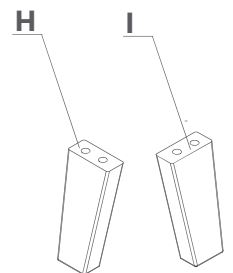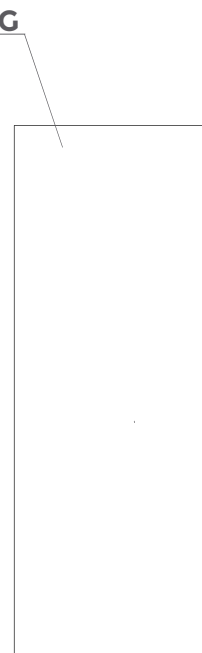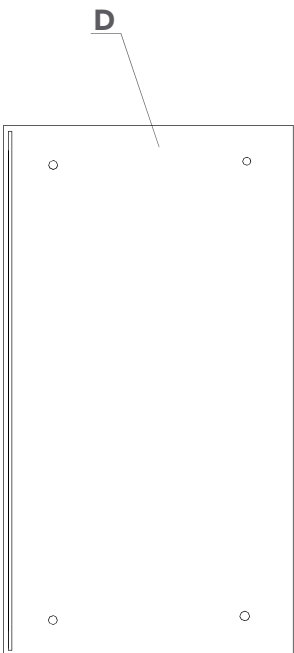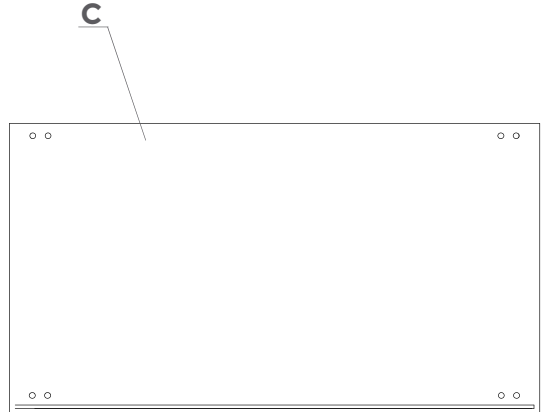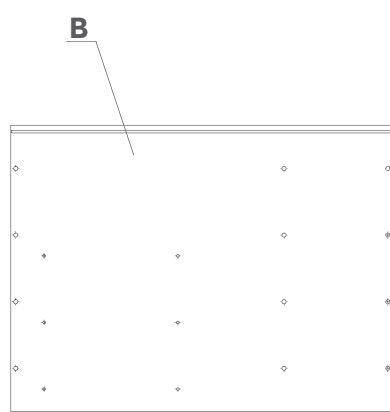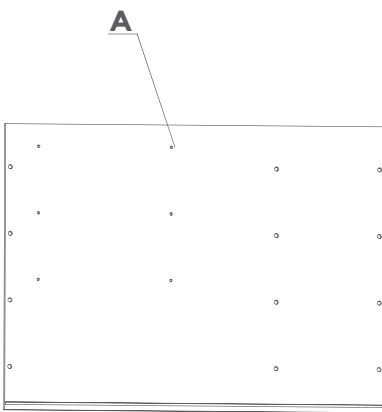


1

-  C05503
x8
-  C05366
x8

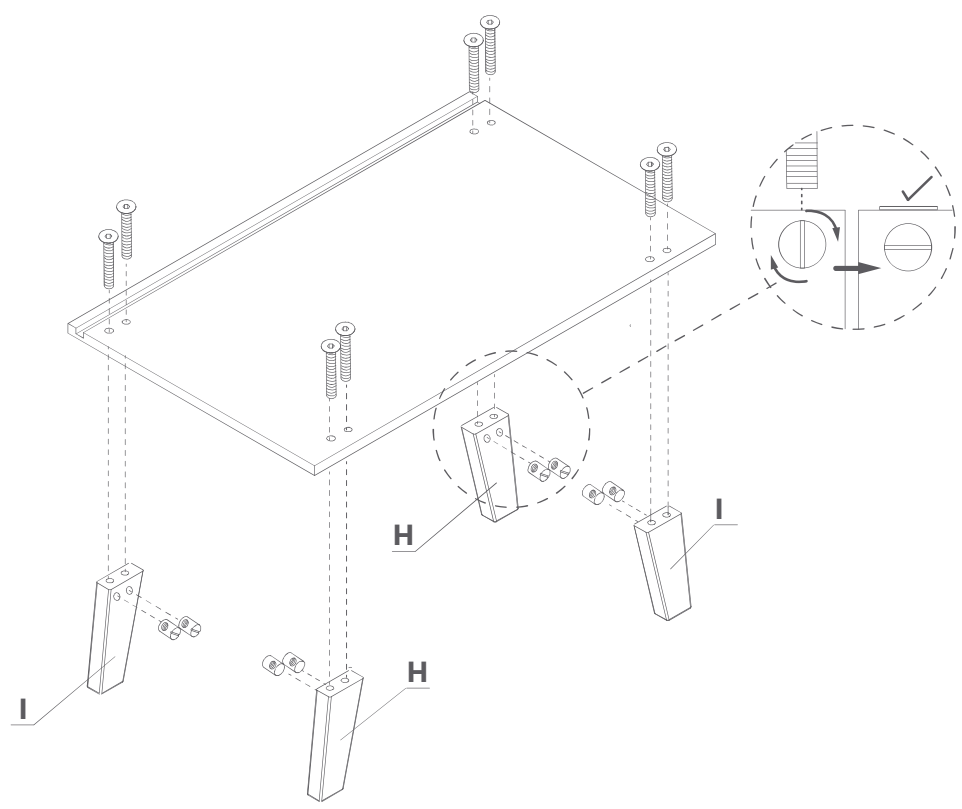

2


-  C011419 x6
-  C01538 x6

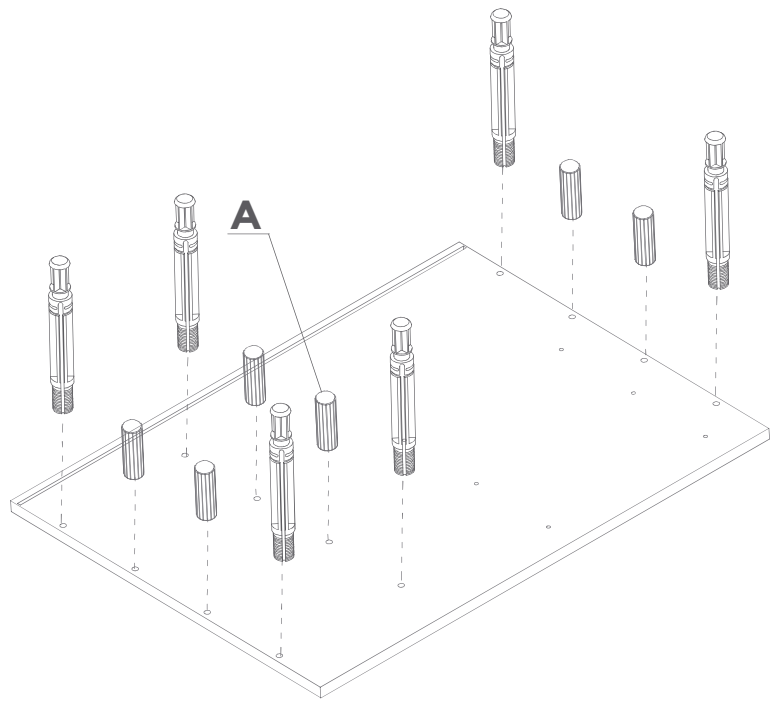

3

 C011419 x6


 C01538 x6

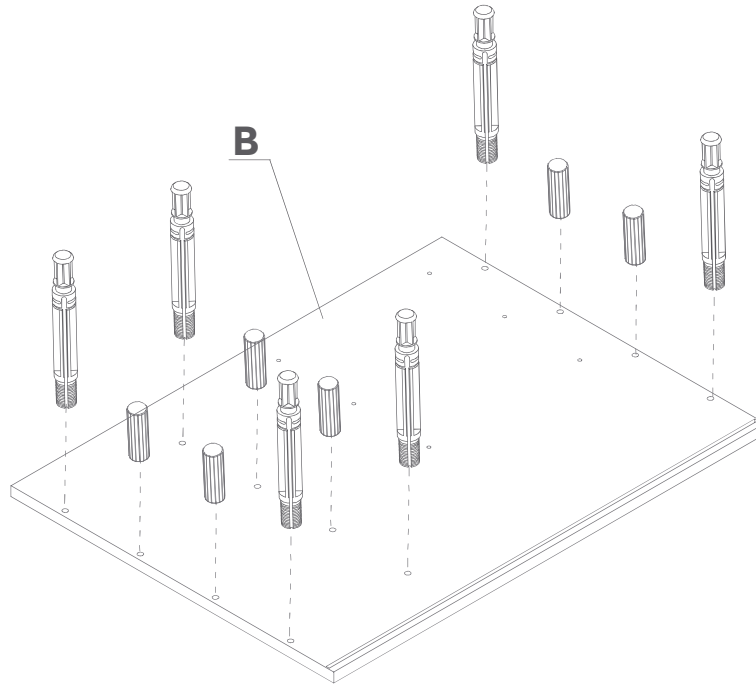


4



 C01537 x6

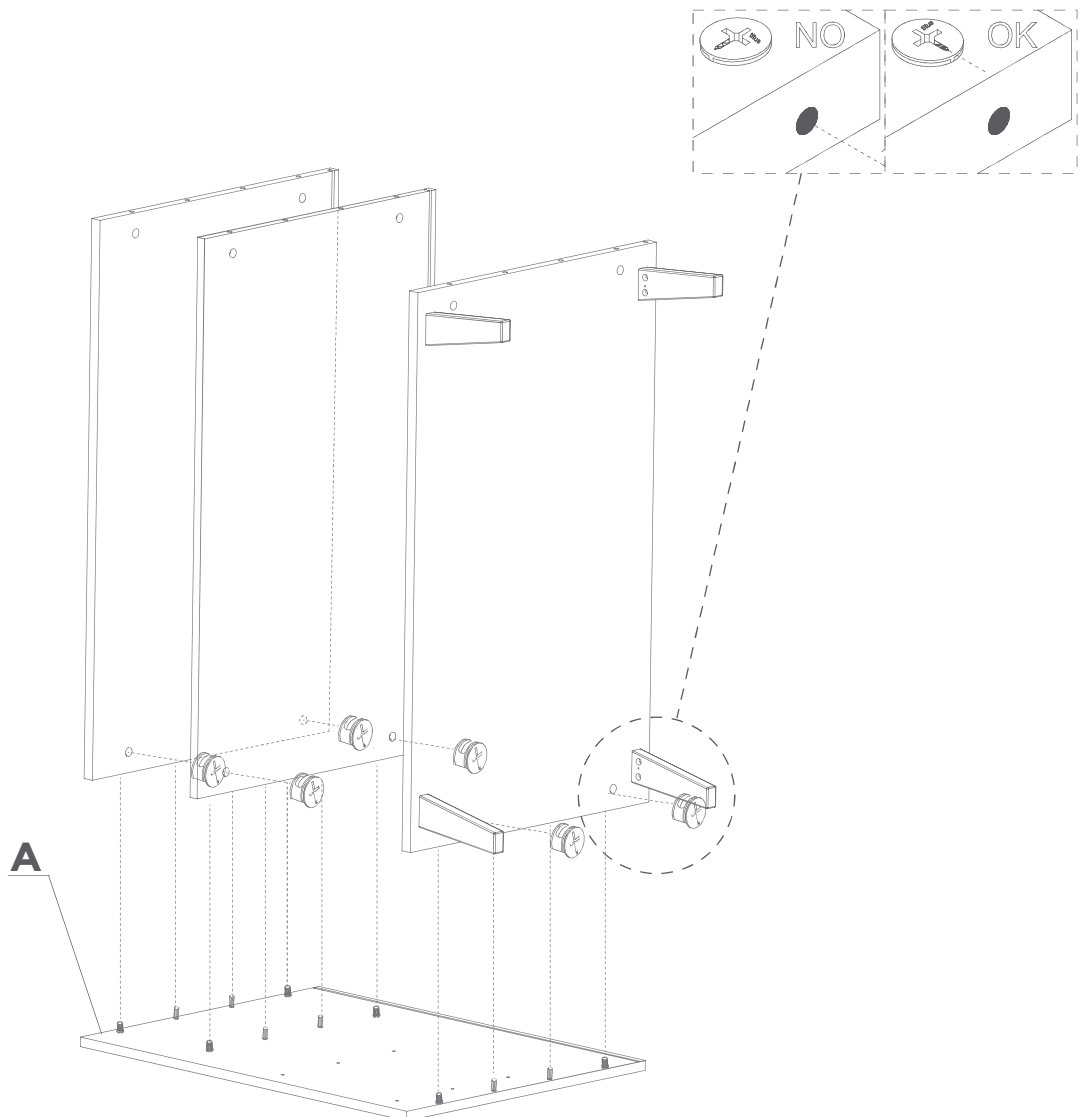


5

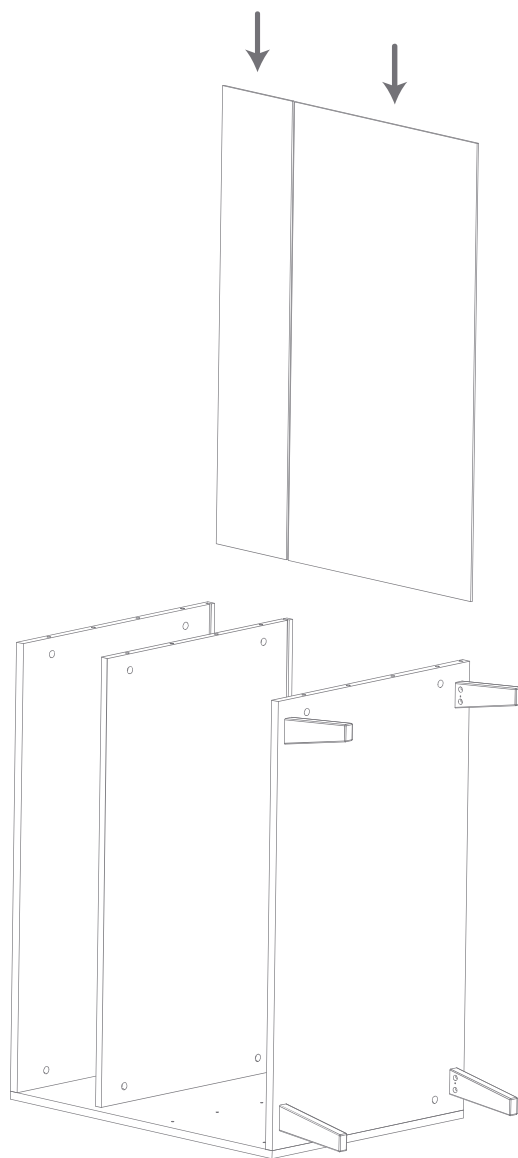


6




C01537 x6

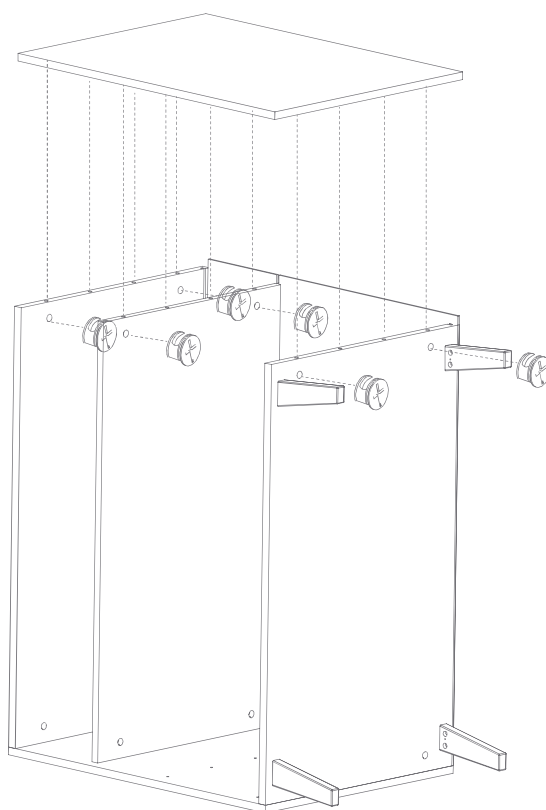




7

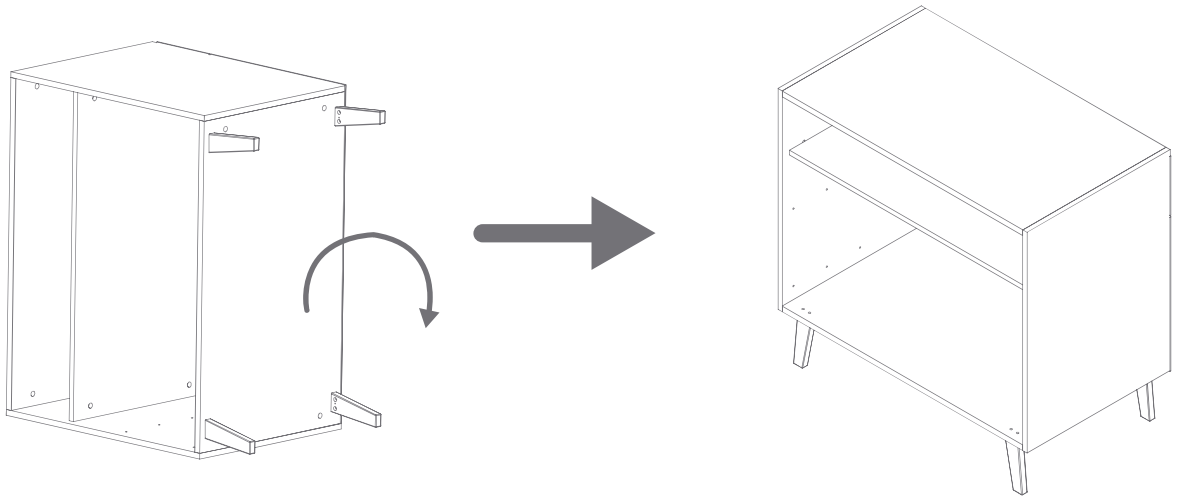


8





R

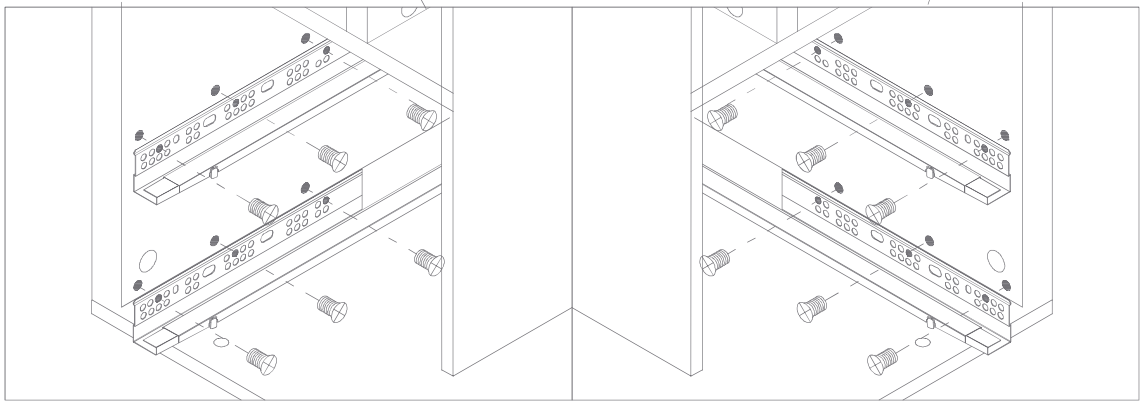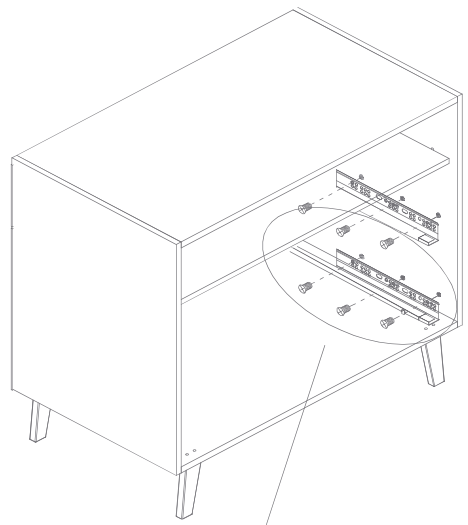
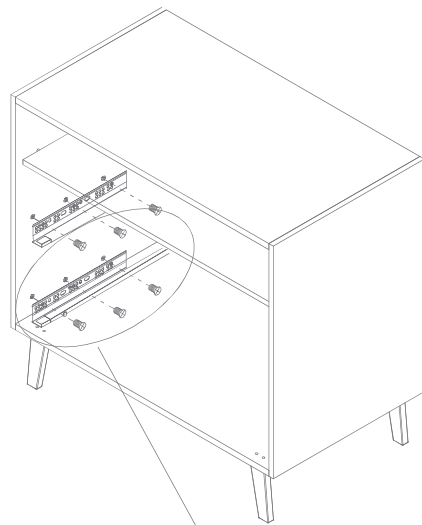


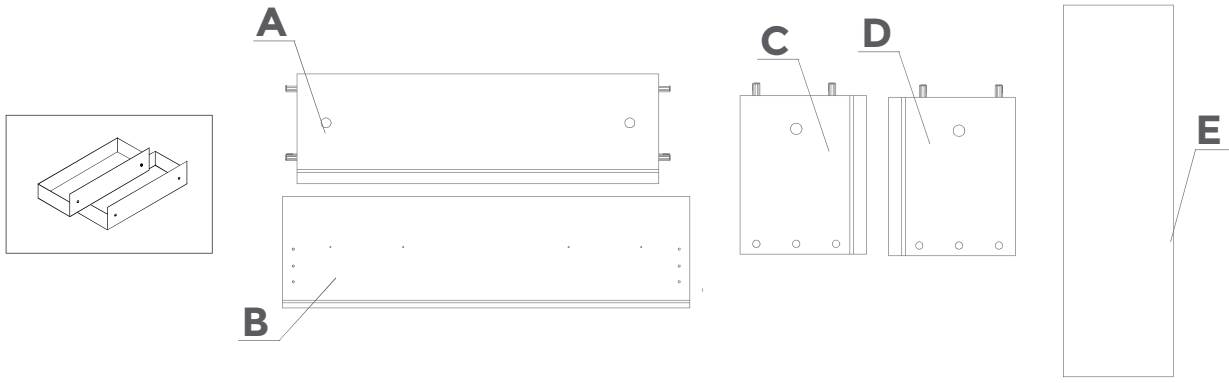



1x2

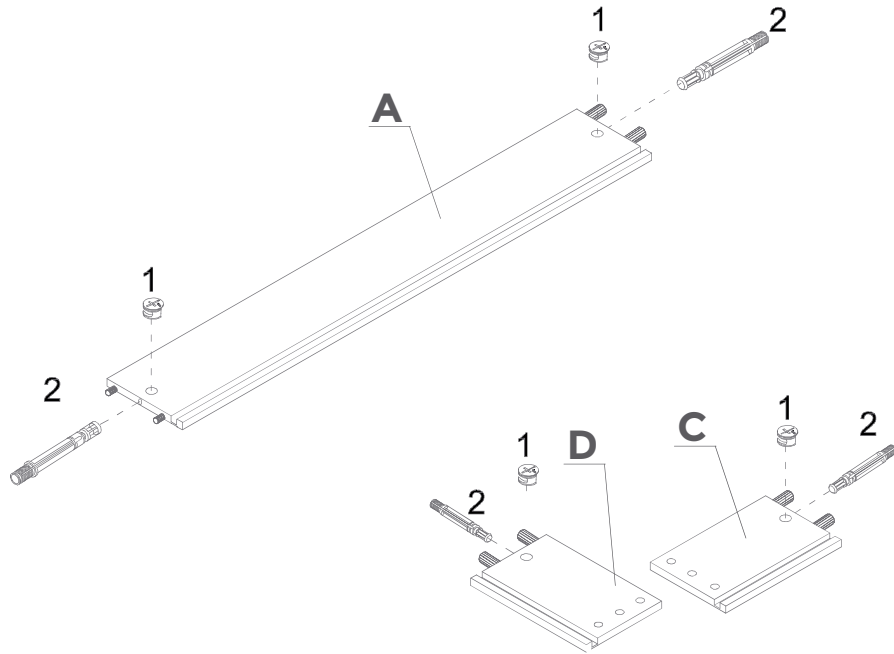





2x2

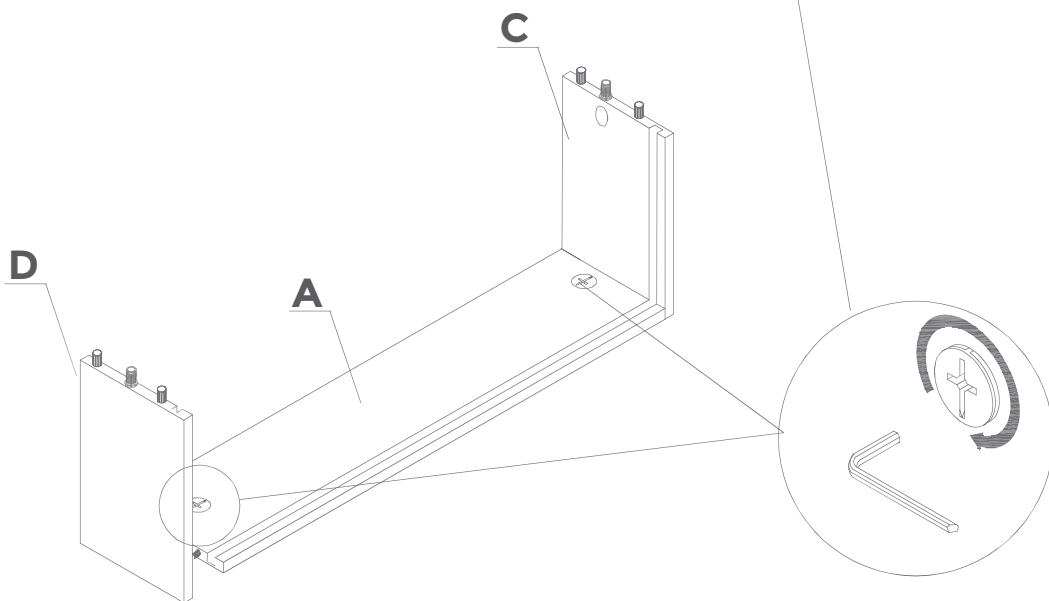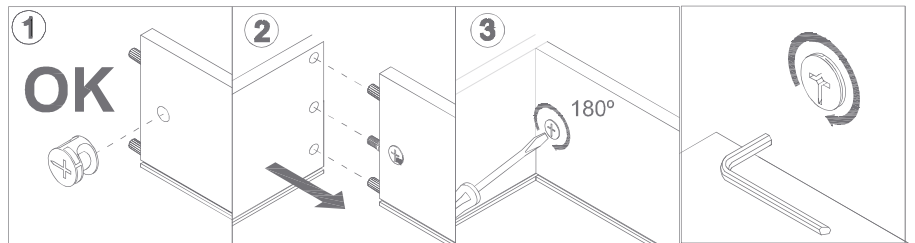


3 x2

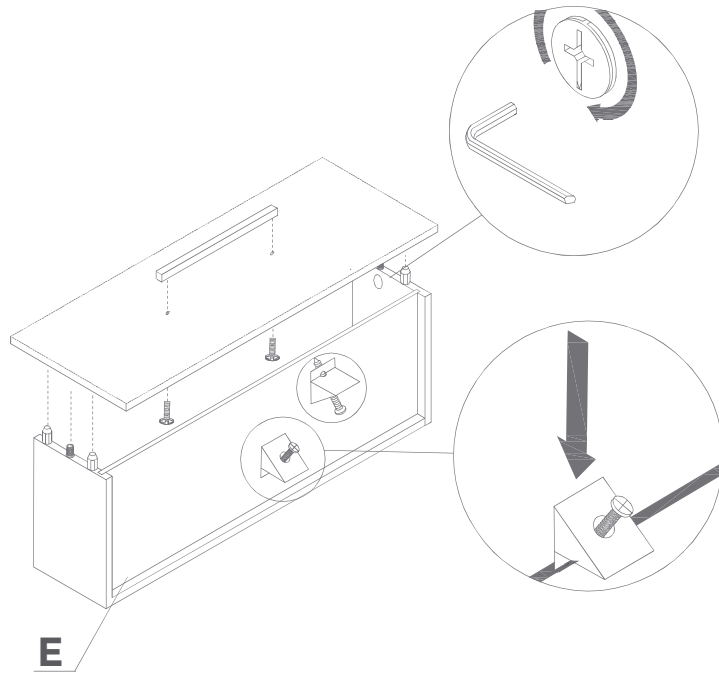


9

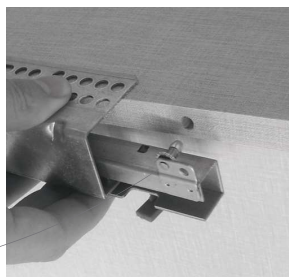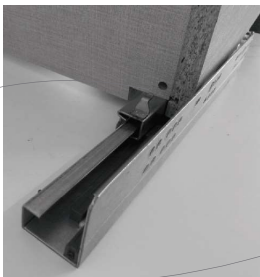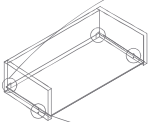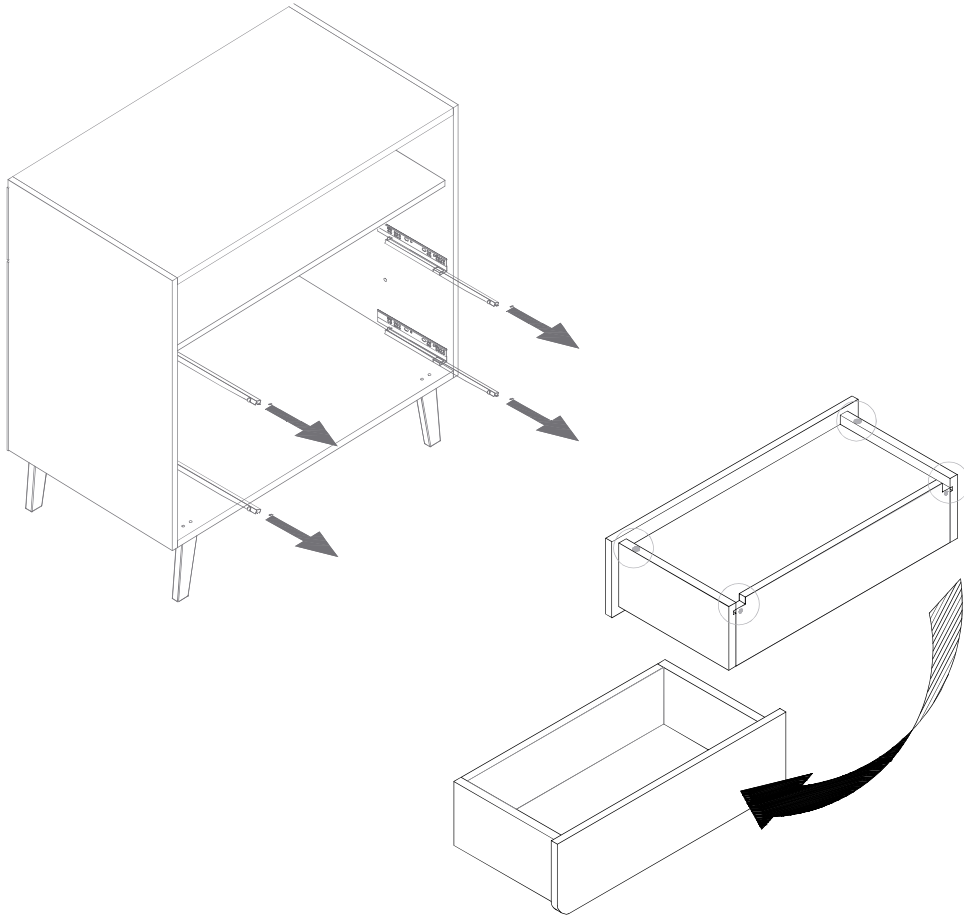


10

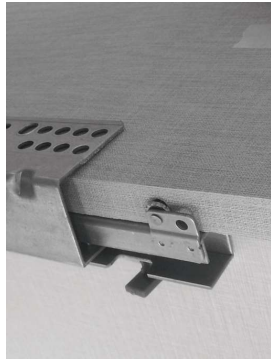


OK

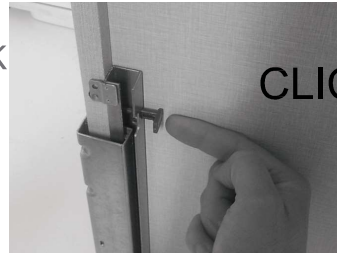


CLICK!

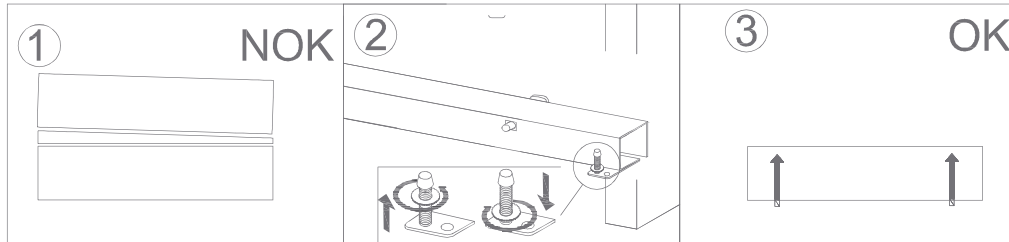

11




C00329 x1




C04790 x6

C04790 x4

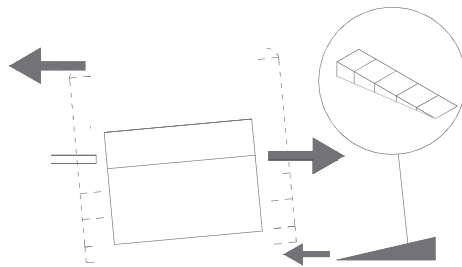


OK

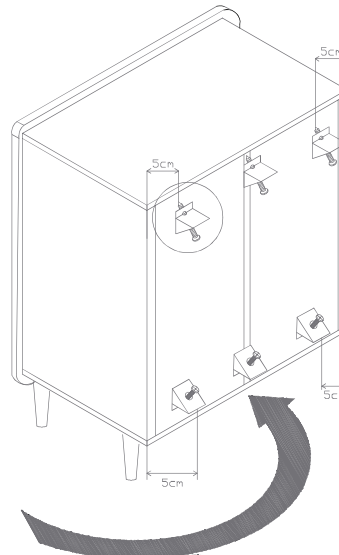


12





C11092 x1



C10392 x1



C00326 x1

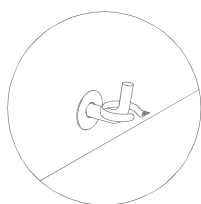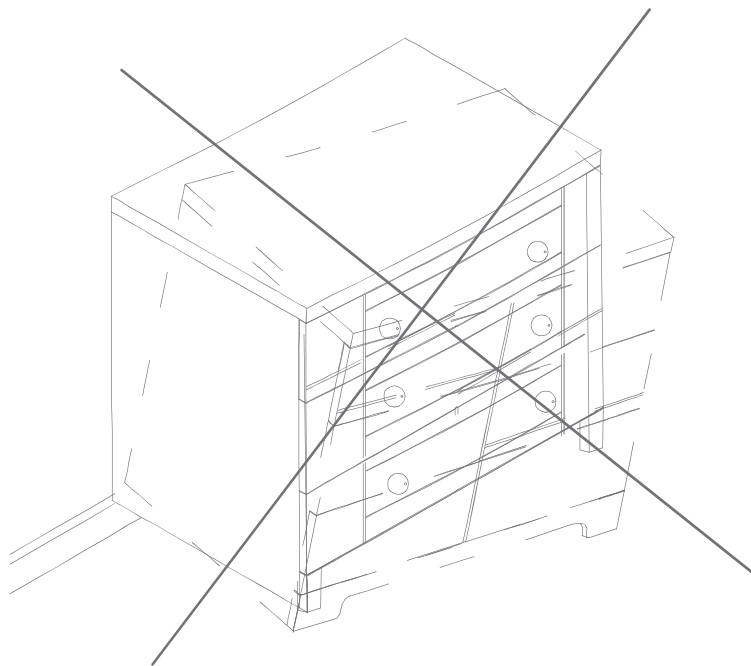

OK