




## HOW TO CRIMP METRI-PACK SERIES PULL-TO-SEAT TERMINALS

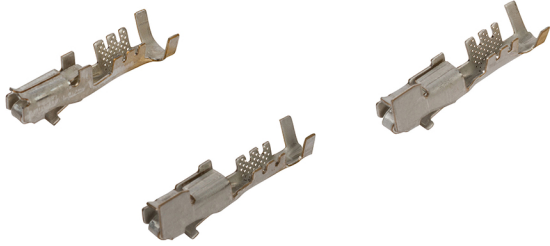


- 1 Thread your un-stripped wire through the connector's cable seal and out the other side of the connector housing.

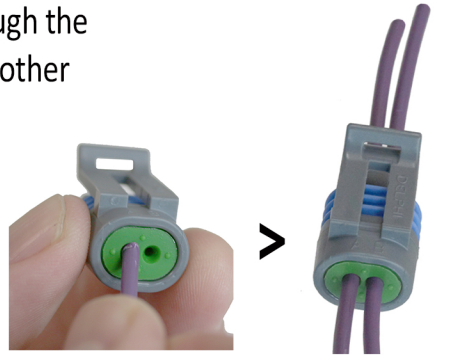


- 2 Strip 3/8" of wire. Ensure there are no stray strands.

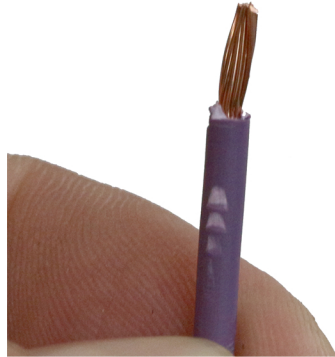


- 3 Set the stripped wire strands inside of the terminal's inner straps. Make sure the wire's insulation sits inside of the outer straps.

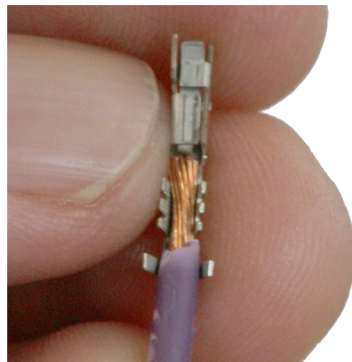

- 4 Crimp the inner and outer straps with an appropriate crimp tool. Gently pull on each terminal to ensure the crimp is secure.

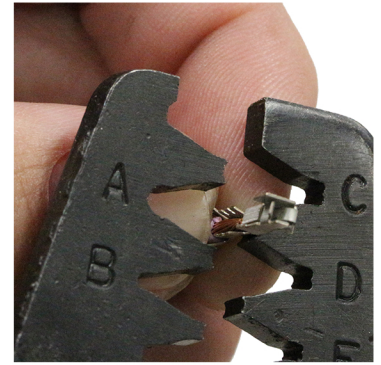

- 5 Pull the terminated wire back into the connector housing until the terminal snaps into place.

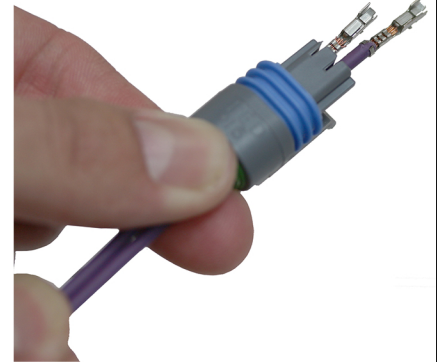

- 6 Gently slide the wire back and forth to ensure that the terminal is locked in position.

