


Tundra - Transfer Case Plate

Be sure to use lubrication on all stainless steel nuts & bolts to prevent galling.

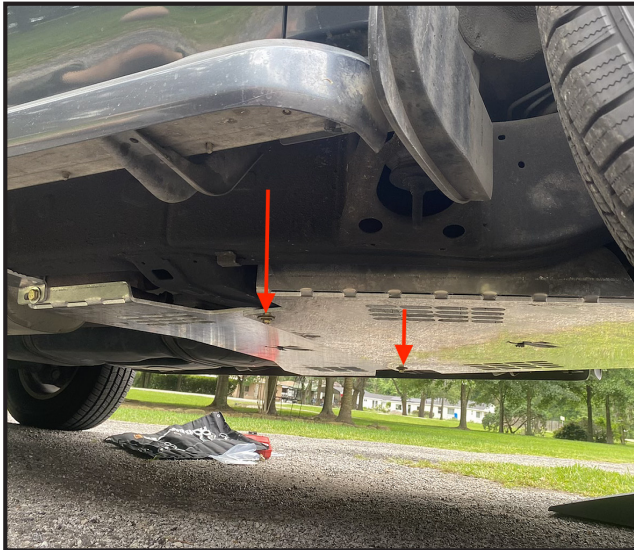


- 1. If Transmission rear bolts are not loose from install, loosen transmission rear bolts and install the square spacers above the transmission plate.



- 2. Mount Z brackets to frame. There will be a square hole about 18" from the transfer case cross member. Use this hole to mount the Z bracket.



Tundra - Transfer Case Plate

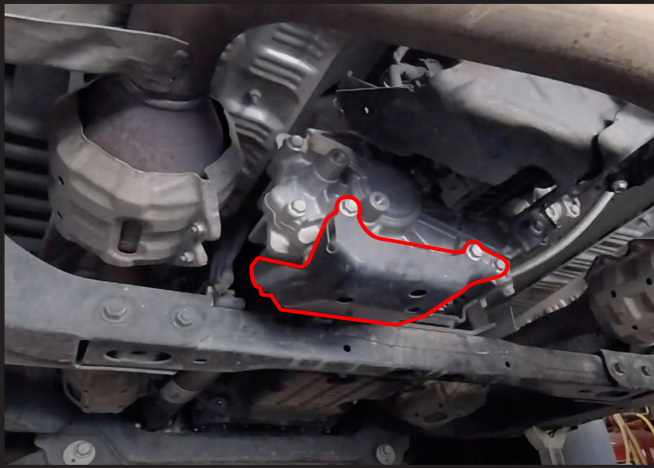

- 3. If this is a 4x4 truck, remove factory transfer case shield.



- 4. Slide transfer case plate above transmission plate. Ensure square spacers are above transfer case skid next to frame.



Tundra - Transfer Case Plate



- 5. Attach Z brackets to ½" holes on the rear of the transfer case plate.



- 6. At this point, if you are installing the transfer case plate with the transmission plate, tighten all bolts starting from the front bolt and working your way forward.