

# Viking Apex Aluminium Side Case

## Installation Guide For Suzuki V-Storm 1050:



### Parts:

|       |  |    |
|-------|--|----|
| i     | Viking Apex Side Cases                               | x2 |
| ii    | Mounting Bracket                                     | x2 |
| iii   | Footpeg Mounting Tab                                 | x2 |
| iv    | 8mm x 55mm Allenkey Bolt                             | x2 |
| v     | 8.4mm Washer   | x2 |
| vi    | 8.5mm x 20mm Washer                                  | x2 |
| vii   | Rear Mounting Tab                                    | x2 |
| viii  | 6mm x 45mm Button Head Allenkey Bolt                 | x2 |
| ix    | 6mm x 60mm Button Head Allenkey Bolt                 | x2 |
| x     | 6mm x 70mm Button Head Allenkey Bolt                 | x2 |
| xi    | 6.4mm x 8mm Spacer                                   | x4 |
| xii   | 6.4mm x 10mm Spacer                                  | x2 |
| xiii  | 6.4mm x 20mm Washer                                  | x2 |
| xiv   | 6.4mm x 31mm Washer                                  | x4 |
| xv    | Crossmember  | x1 |
| xvi   | 6mm x 20mm Allenkey Bolt                             | x2 |
| xvii  | 6.4mm x 12mm Spring Washer                           | x4 |
| xviii | 6.4mm x 18mm Washer                                  | x2 |
| xix   | 6mm Nuts   | x2 |
| xx    | $\frac{3}{8}$ " x $\frac{3}{4}$ " Allenkey Head Bolt | x8 |
| xxi   | $\frac{3}{8}$ " Spring Washer                        | x8 |


### Tools Needed:

- i Hex Driver Set
- ii Thread Locktite
- iii Wrench

### Tip:

- i Apply Loctite to ensure proper installation of bolts.
- ii Read the installation instructions carefully and make sure that all parts under the parts list are included.

### Parts Diagram:

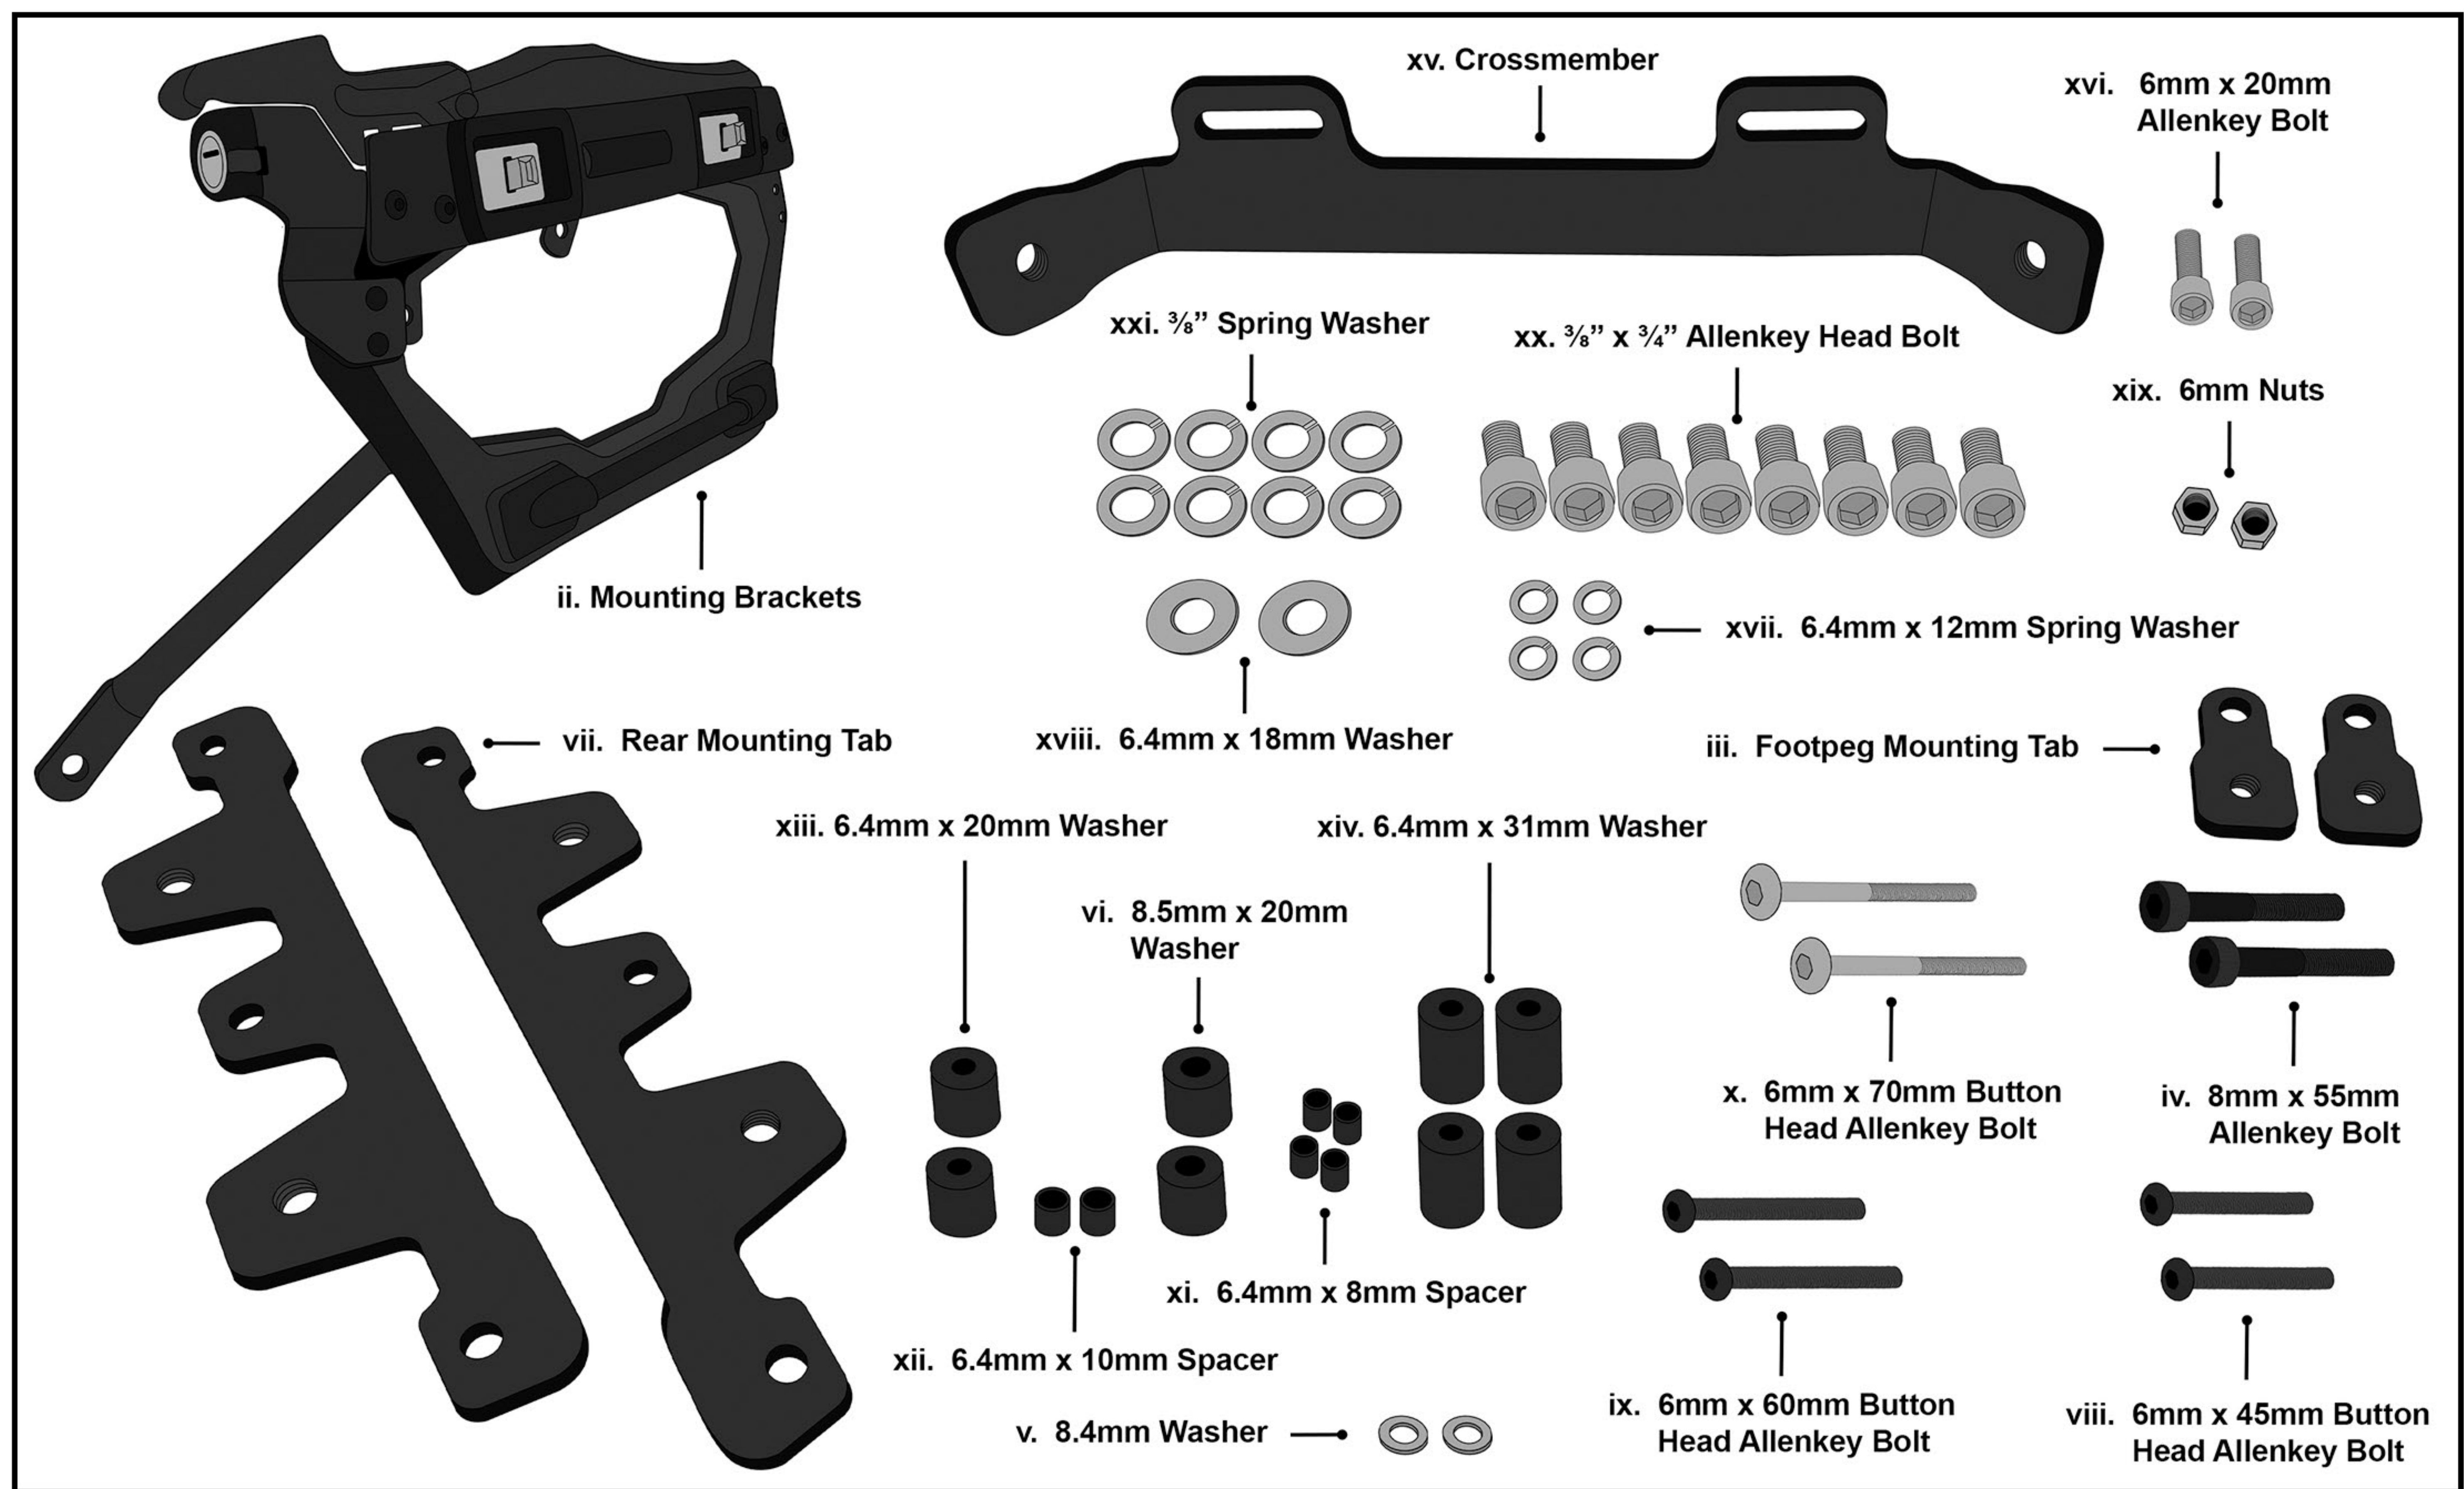

# Instructions:

## Step 1:

Remove the OEM bolts and install the rear mounting tabs(VII) and footpeg mounting tabs (III) on both sides of the bike using Fig.1 and Fig. 2

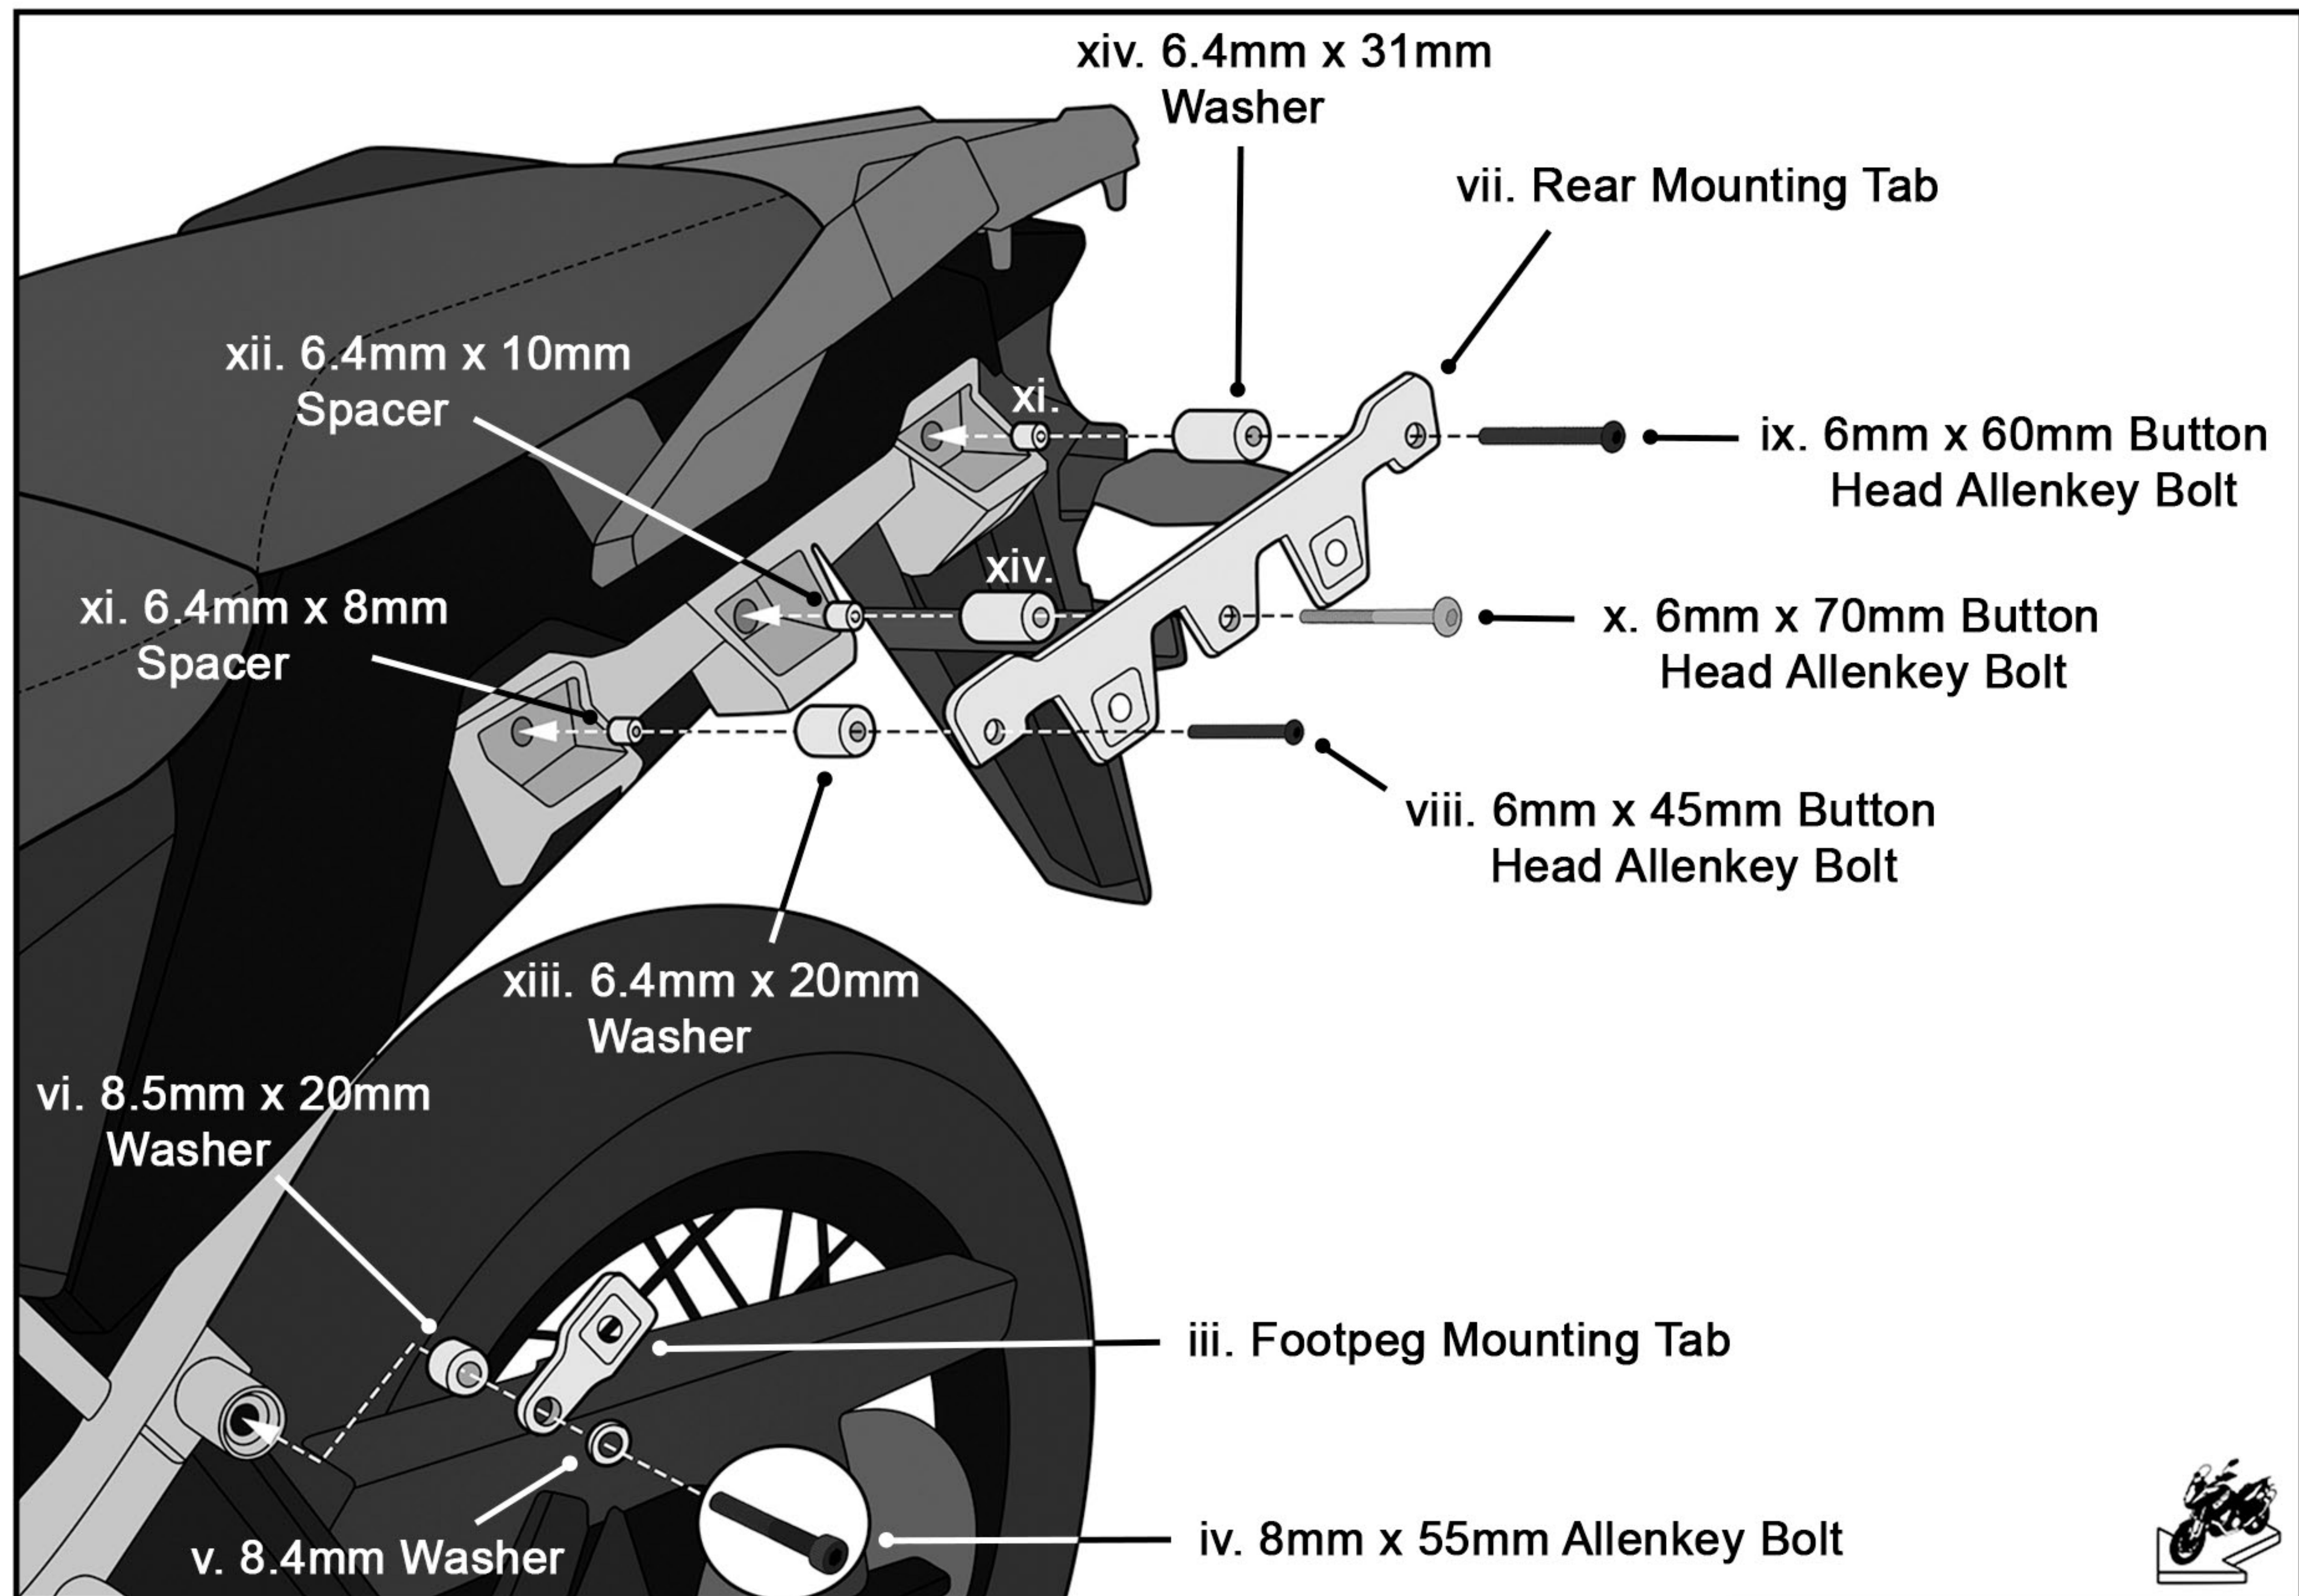


Fig 1. Installing mounting tabs to the left fender and left footpeg

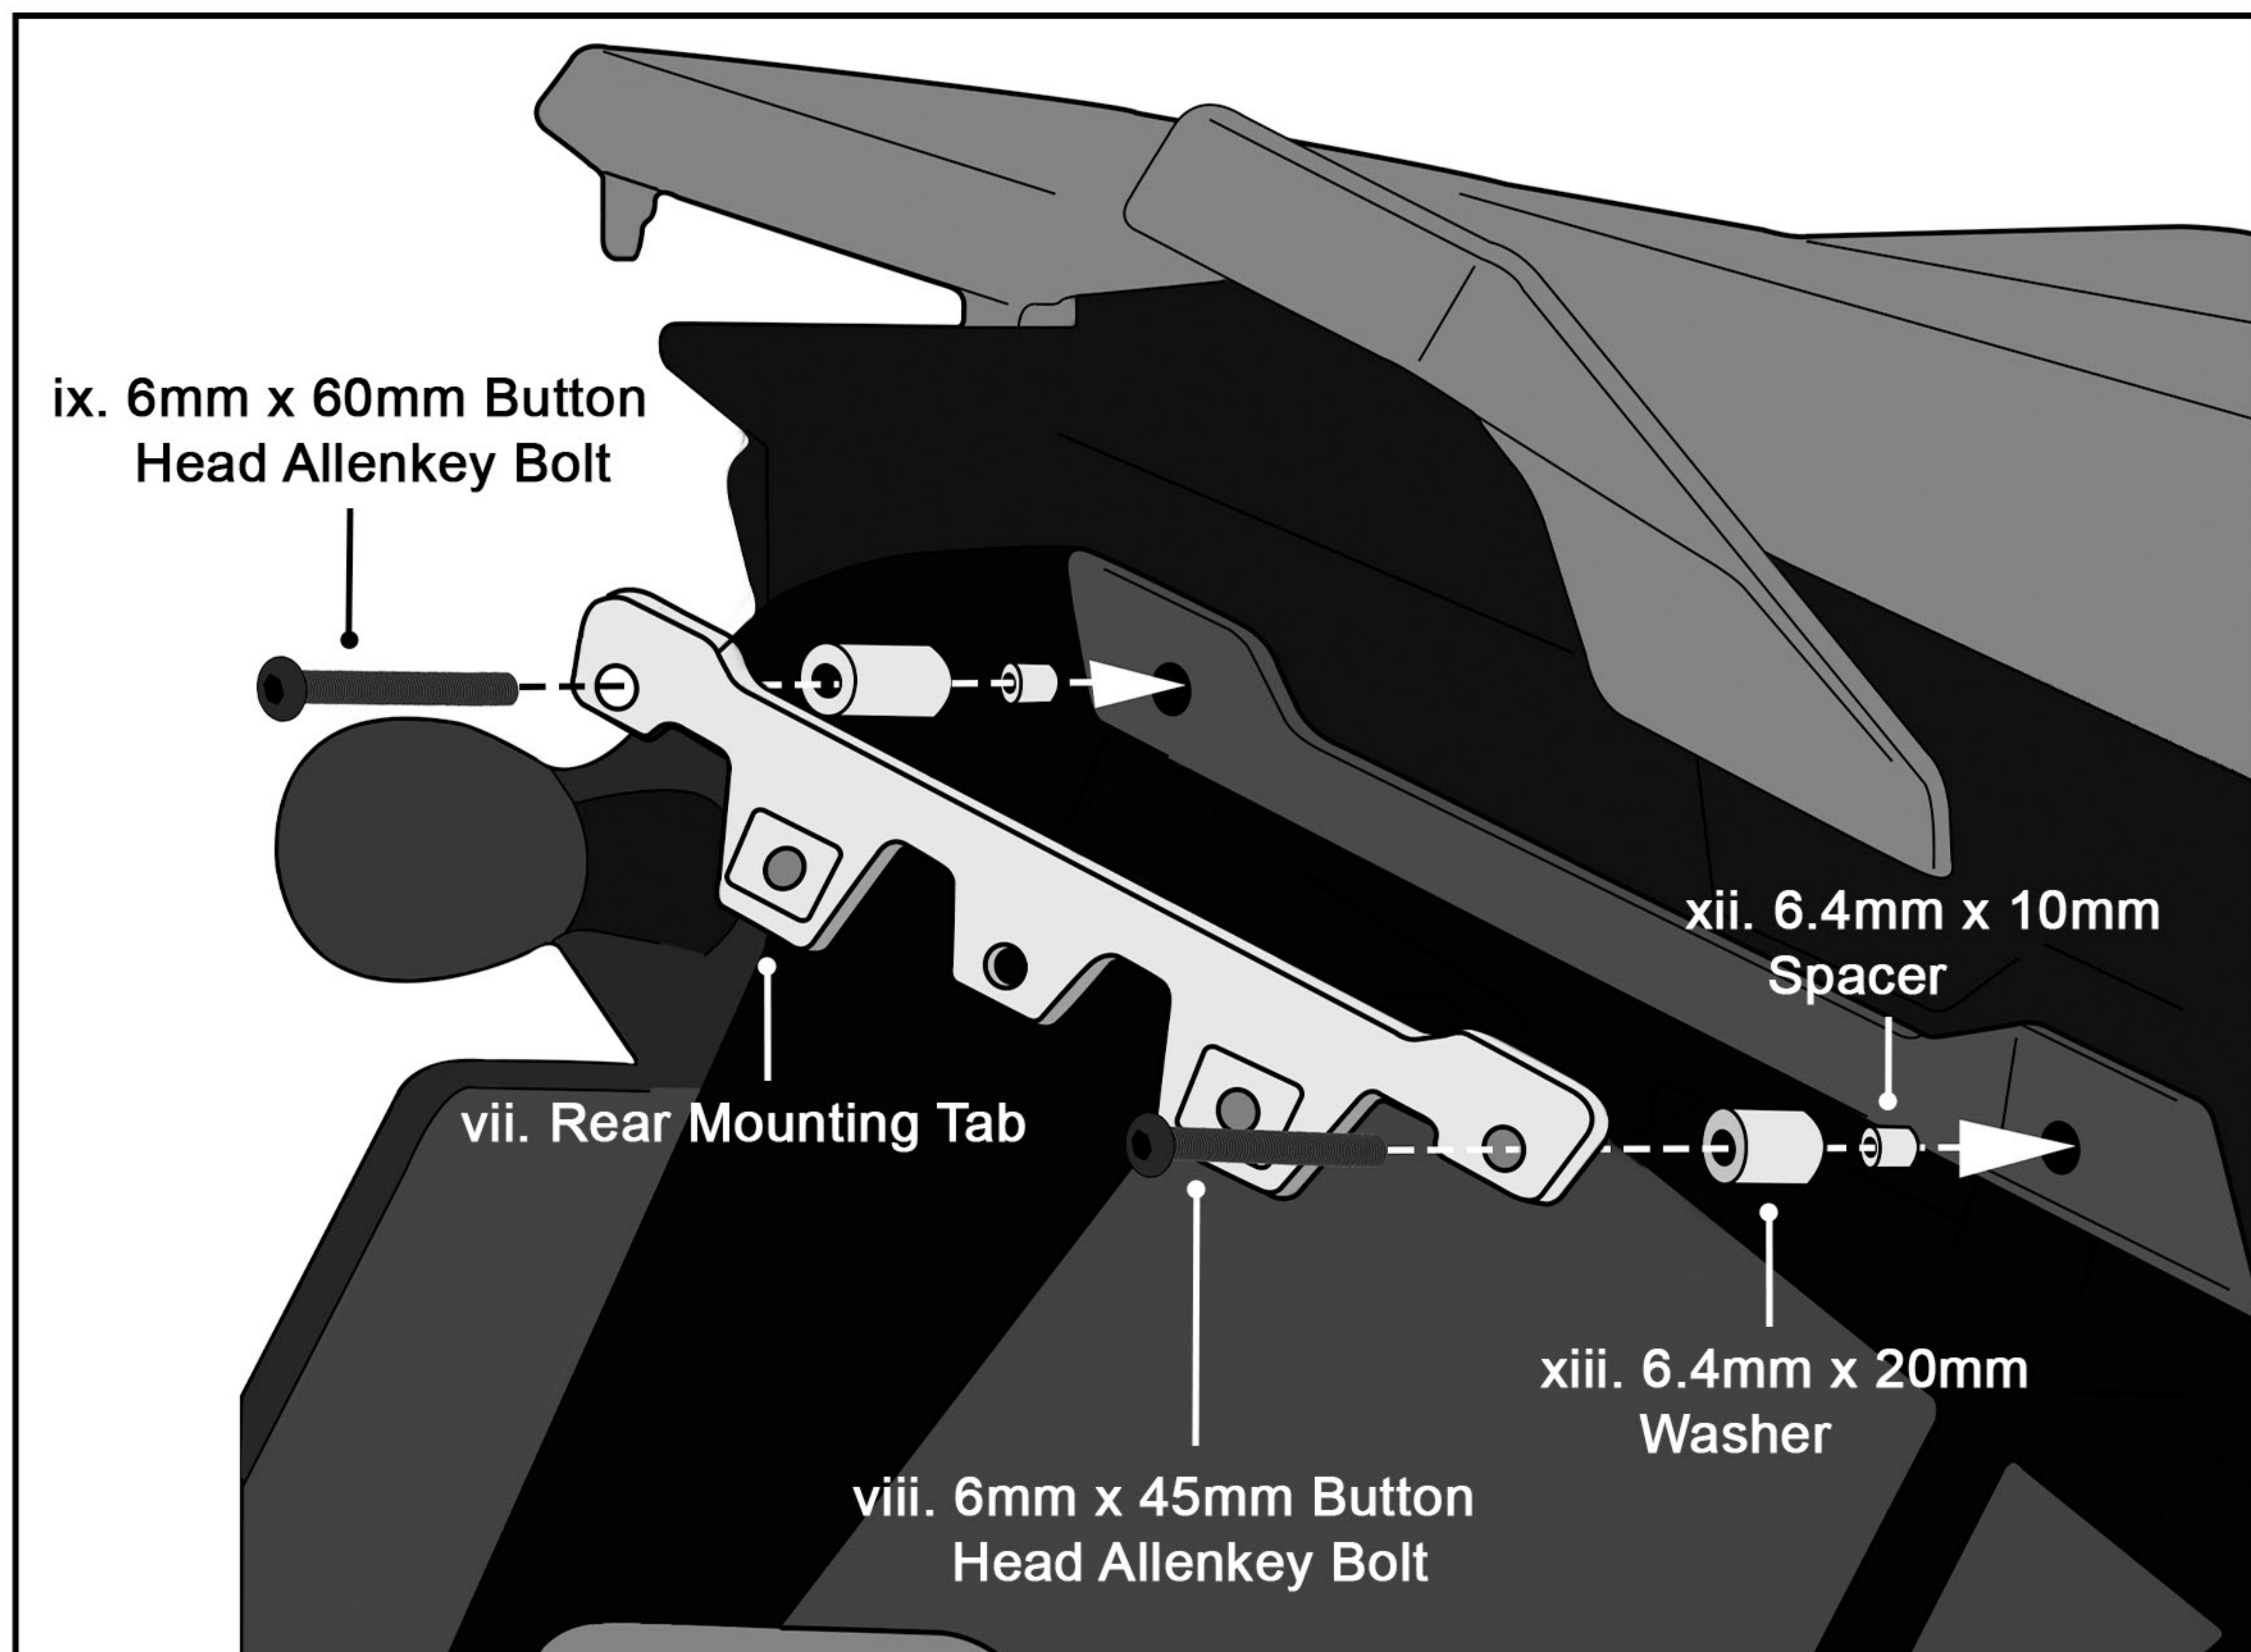


Fig 2. Installing mounting tabs to the right fender and right footpeg

## Step 2:

Install the crossmember(XV.) to the motorcycle license plate as shown in Fig 3.

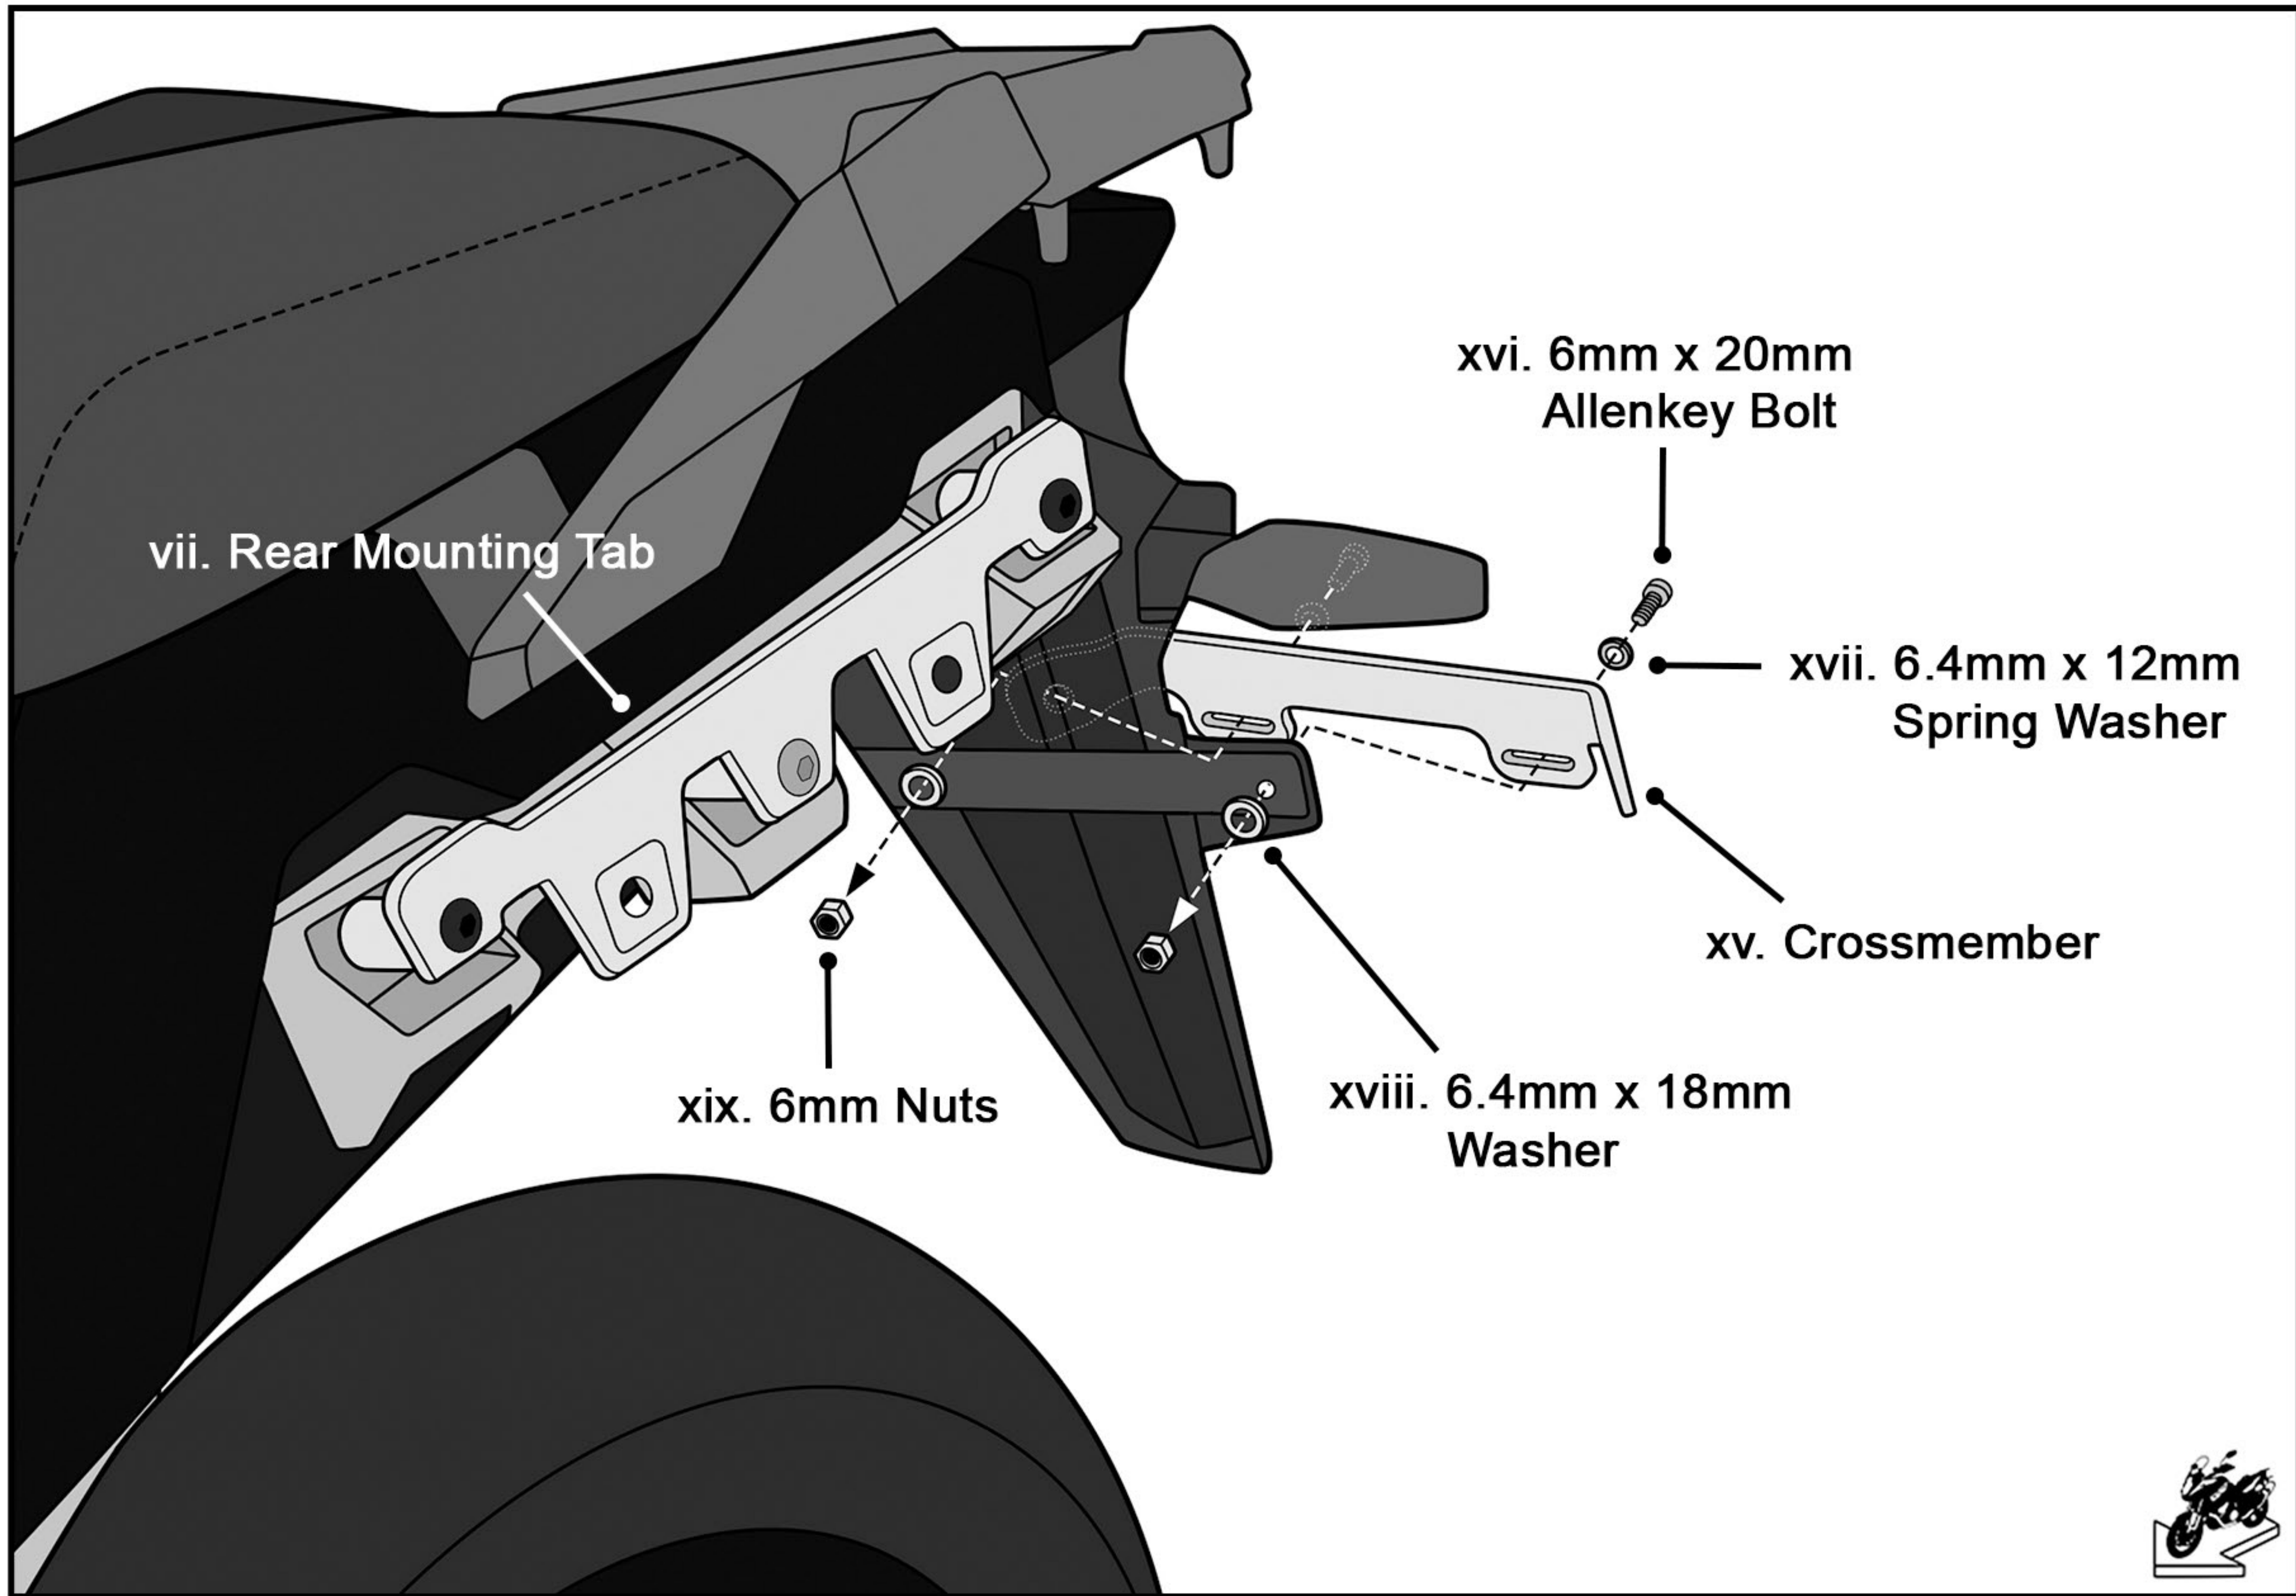


Fig 3. Installing the crossmember

## Step 3:

Attach the mounting brackets(II) to the Rear Mounting Tab(VII), Footpeg Mounting Tab(III), and Crossmember(XV) using  $\frac{3}{8}$ " x  $\frac{3}{4}$ " Allenkey Head Bolt(XX). See Fig 4.

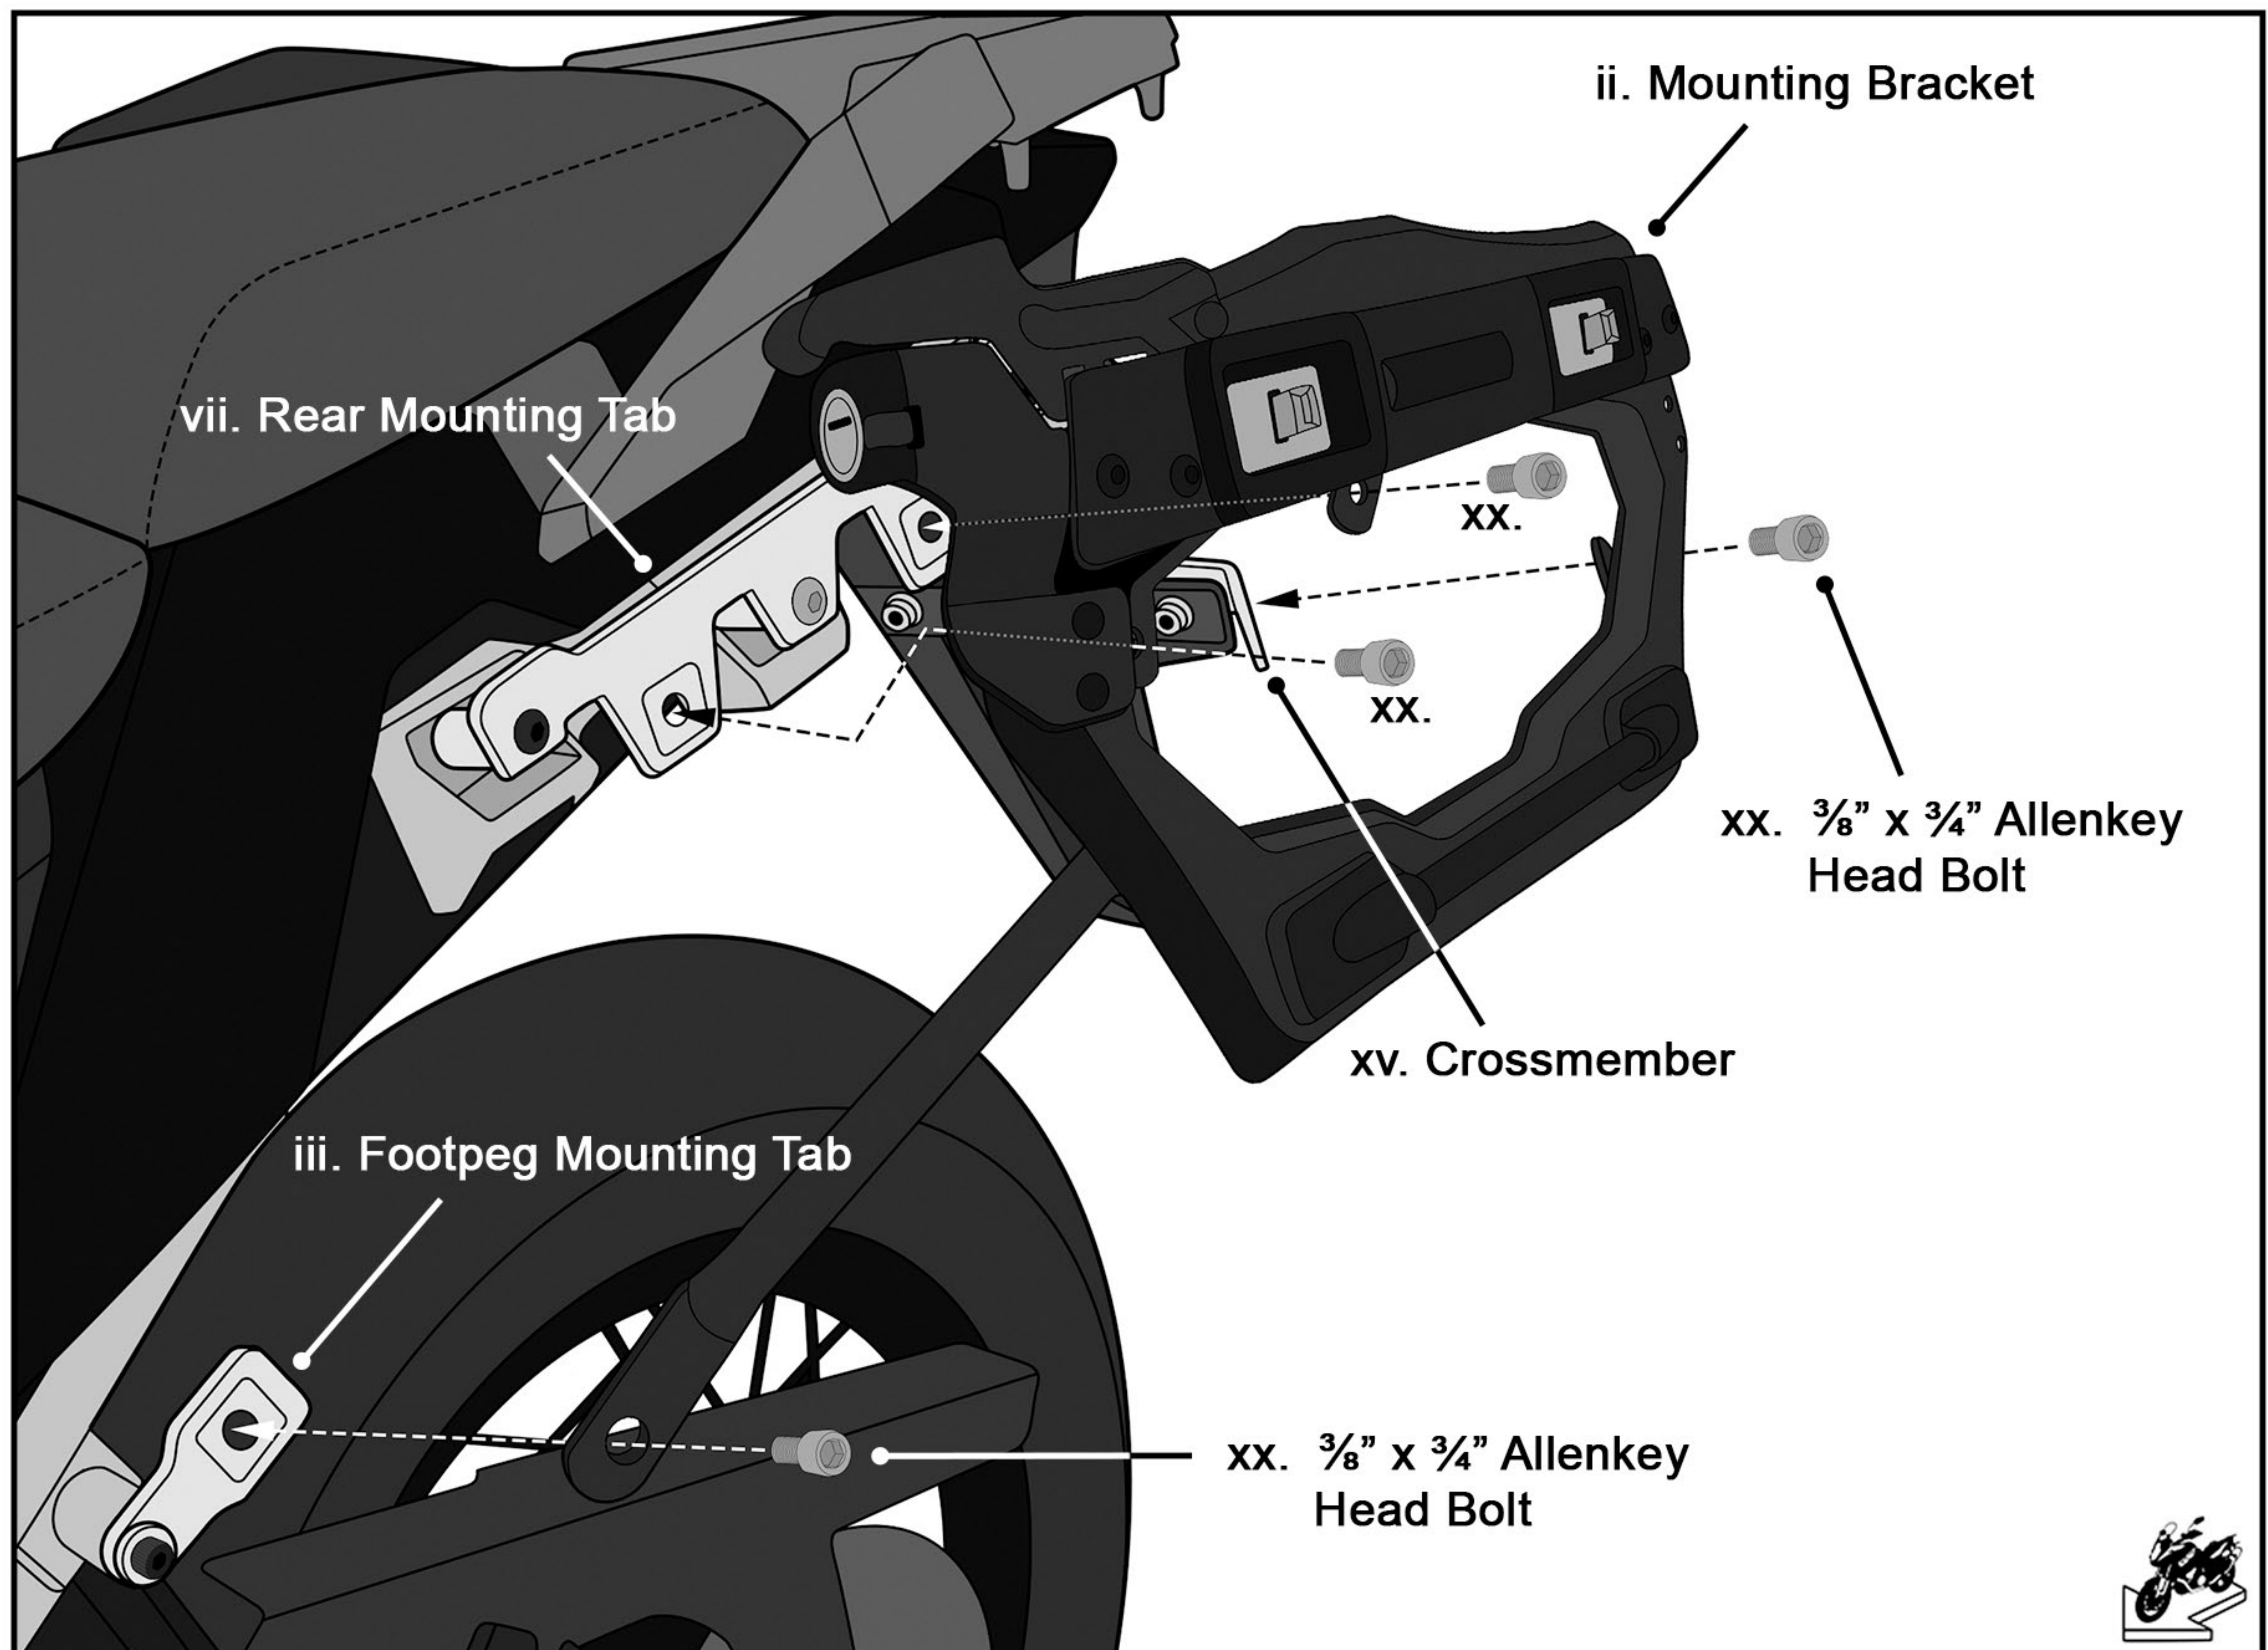


Fig 4. Attaching the mounting brackets

## **Step 4:**

Once all the hardware is in place without excess tension, tighten all the provided bolts and the OEM bolts.

Finally, attach the side cases to the mounting bracket. Pull the lever on the bracket and align the back of the side case to the hooks. Once in place push the lever down to lock the case to the bracket. Repeat the same for the other side.

**Congratulations! You have successfully installed the Viking Apex Aluminium Side Cases and now you are ready to ride.**

### **Warnings!**

- Do not install if any of the mounting hardware is damaged or impaired.
- If you have any questions or concerns about the installation, call Viking Bags or consult your local mechanic
- Ensure no part of the bag constructs any of the moving parts of the bike
- Viking Bags is not liable for any damage or malfunctions caused to your motorcycle during the installation process
- Improper loading can cause vehicle handling problems leading to death or severe injury.
- Periodically check the bolts on your bike for tightness.