

INSTALLATION INSTRUCTIONS

www.vikingbags.com





888-208-1949 | Support@vikingbags.com

LICENSE PLATE & TURN SIGNAL RELOCATION KIT FOR SOFTAIL

Parts Included			
Relocation Bracket	x 1	1/4" Nylon Lock Nuts	x 5
Mounting Strap	x 1	#8 Black Screws w/ Nylon Lock Nuts	
Black Lighted License Plate Frame	x 1	Electrical Wire	
Countersunk Head	x 4	Butt Connectors	
1/4" Button Head Bolts	x 2		

Instructions

- 1. Place the motorcycle on a secure jack before beginning installation.
- 2. Remove the seat and unplug the tail light and turn signal plugs as well as the license plate light.
- 3. Unclip the ECM from the ECM mount.
- 4. Remove the four fender bolts holding the fender to the motorcycle frame and place the fender upside down on a smooth surface. We recommend that you lay a cloth under the fender to prevent any paint damage.
- 5. Remove the fender struts from the fender by unbolting the turn signal bolts from under the fender. You will need to cut the wire to remove the turn-signals completely. Make sure you do not cut too close to the plugs. We recommend cutting the wires at least 10 inches from the plugs.
- 6. Once removed, install the turn signals on the relocation bracket using the OEM turn signal bolt and stand-offs.
- 7. Install the license plate onto the bracket using the four #8 screws and lock nuts.
- 8. For next step, it might be easier to remove fender support from under the fender before installing the bracket onto the fender support.
- 9. Now install the bracket onto the fender support (see figures below) using the metal strap and 1/4" bolts and nvlon nuts.
- 10. Once assembled, reattach the fender support to the fender and replace the fender struts.
- 11. Using the provided butt-connectors and extra wire, attach the wire at the previously cut points.
- 12. Install the fender back onto the motorcycle frame ensuring there is no loose wire hanging at any point and all excess wire is tucked away using zip-locks or notches.
- 13. Plug the turn signal, license plate and tail light plug back in and reinstall the ECM.
- 14. Check to ensure the turn signals and tail light is working properly.
- 15. Congratulations! You have successfully relocated the turn signal and license plate.

Metal Strap

Bracket Mounted




INSTALLATION INSTRUCTIONS

www.vikingbags.com





888-208-1949 | support@vikingbags.com

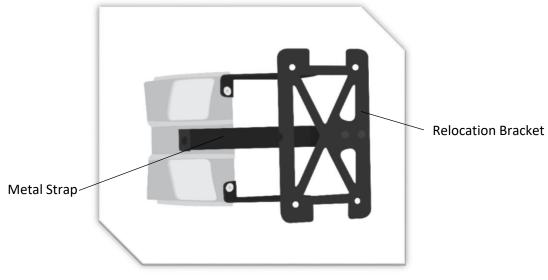

Bracket Mounted (Top View)

You will need to cut the wires in order to extend them to reach the new position of turn signals and license plate. Make sure that no wire hangs lose as they may get caught up in the wheel while riding which can result in accidents.

∧ Warnings

- It is highly recommended that you seek guidance from a professional mechanic before installation.
- Before cutting any wires, make sure that the bike is switched off. It is recommended that you remove or disconnect battery while working with the wires.