


# Viking Incognito Quick Disconnect Saddlebag for Sportster S:



## Parts:

i	Mounting Bracket	x1
ii	Docking Post	x3
iii	Locking Nut	x1
iv	Socket Head Screw - M6 x 20	x1
v	Flat Head Screw - M6 x 20	x2
vi	Socket Head Screw - M8 x 25	x2
vii	Washer	x2


## Parts Diagram:

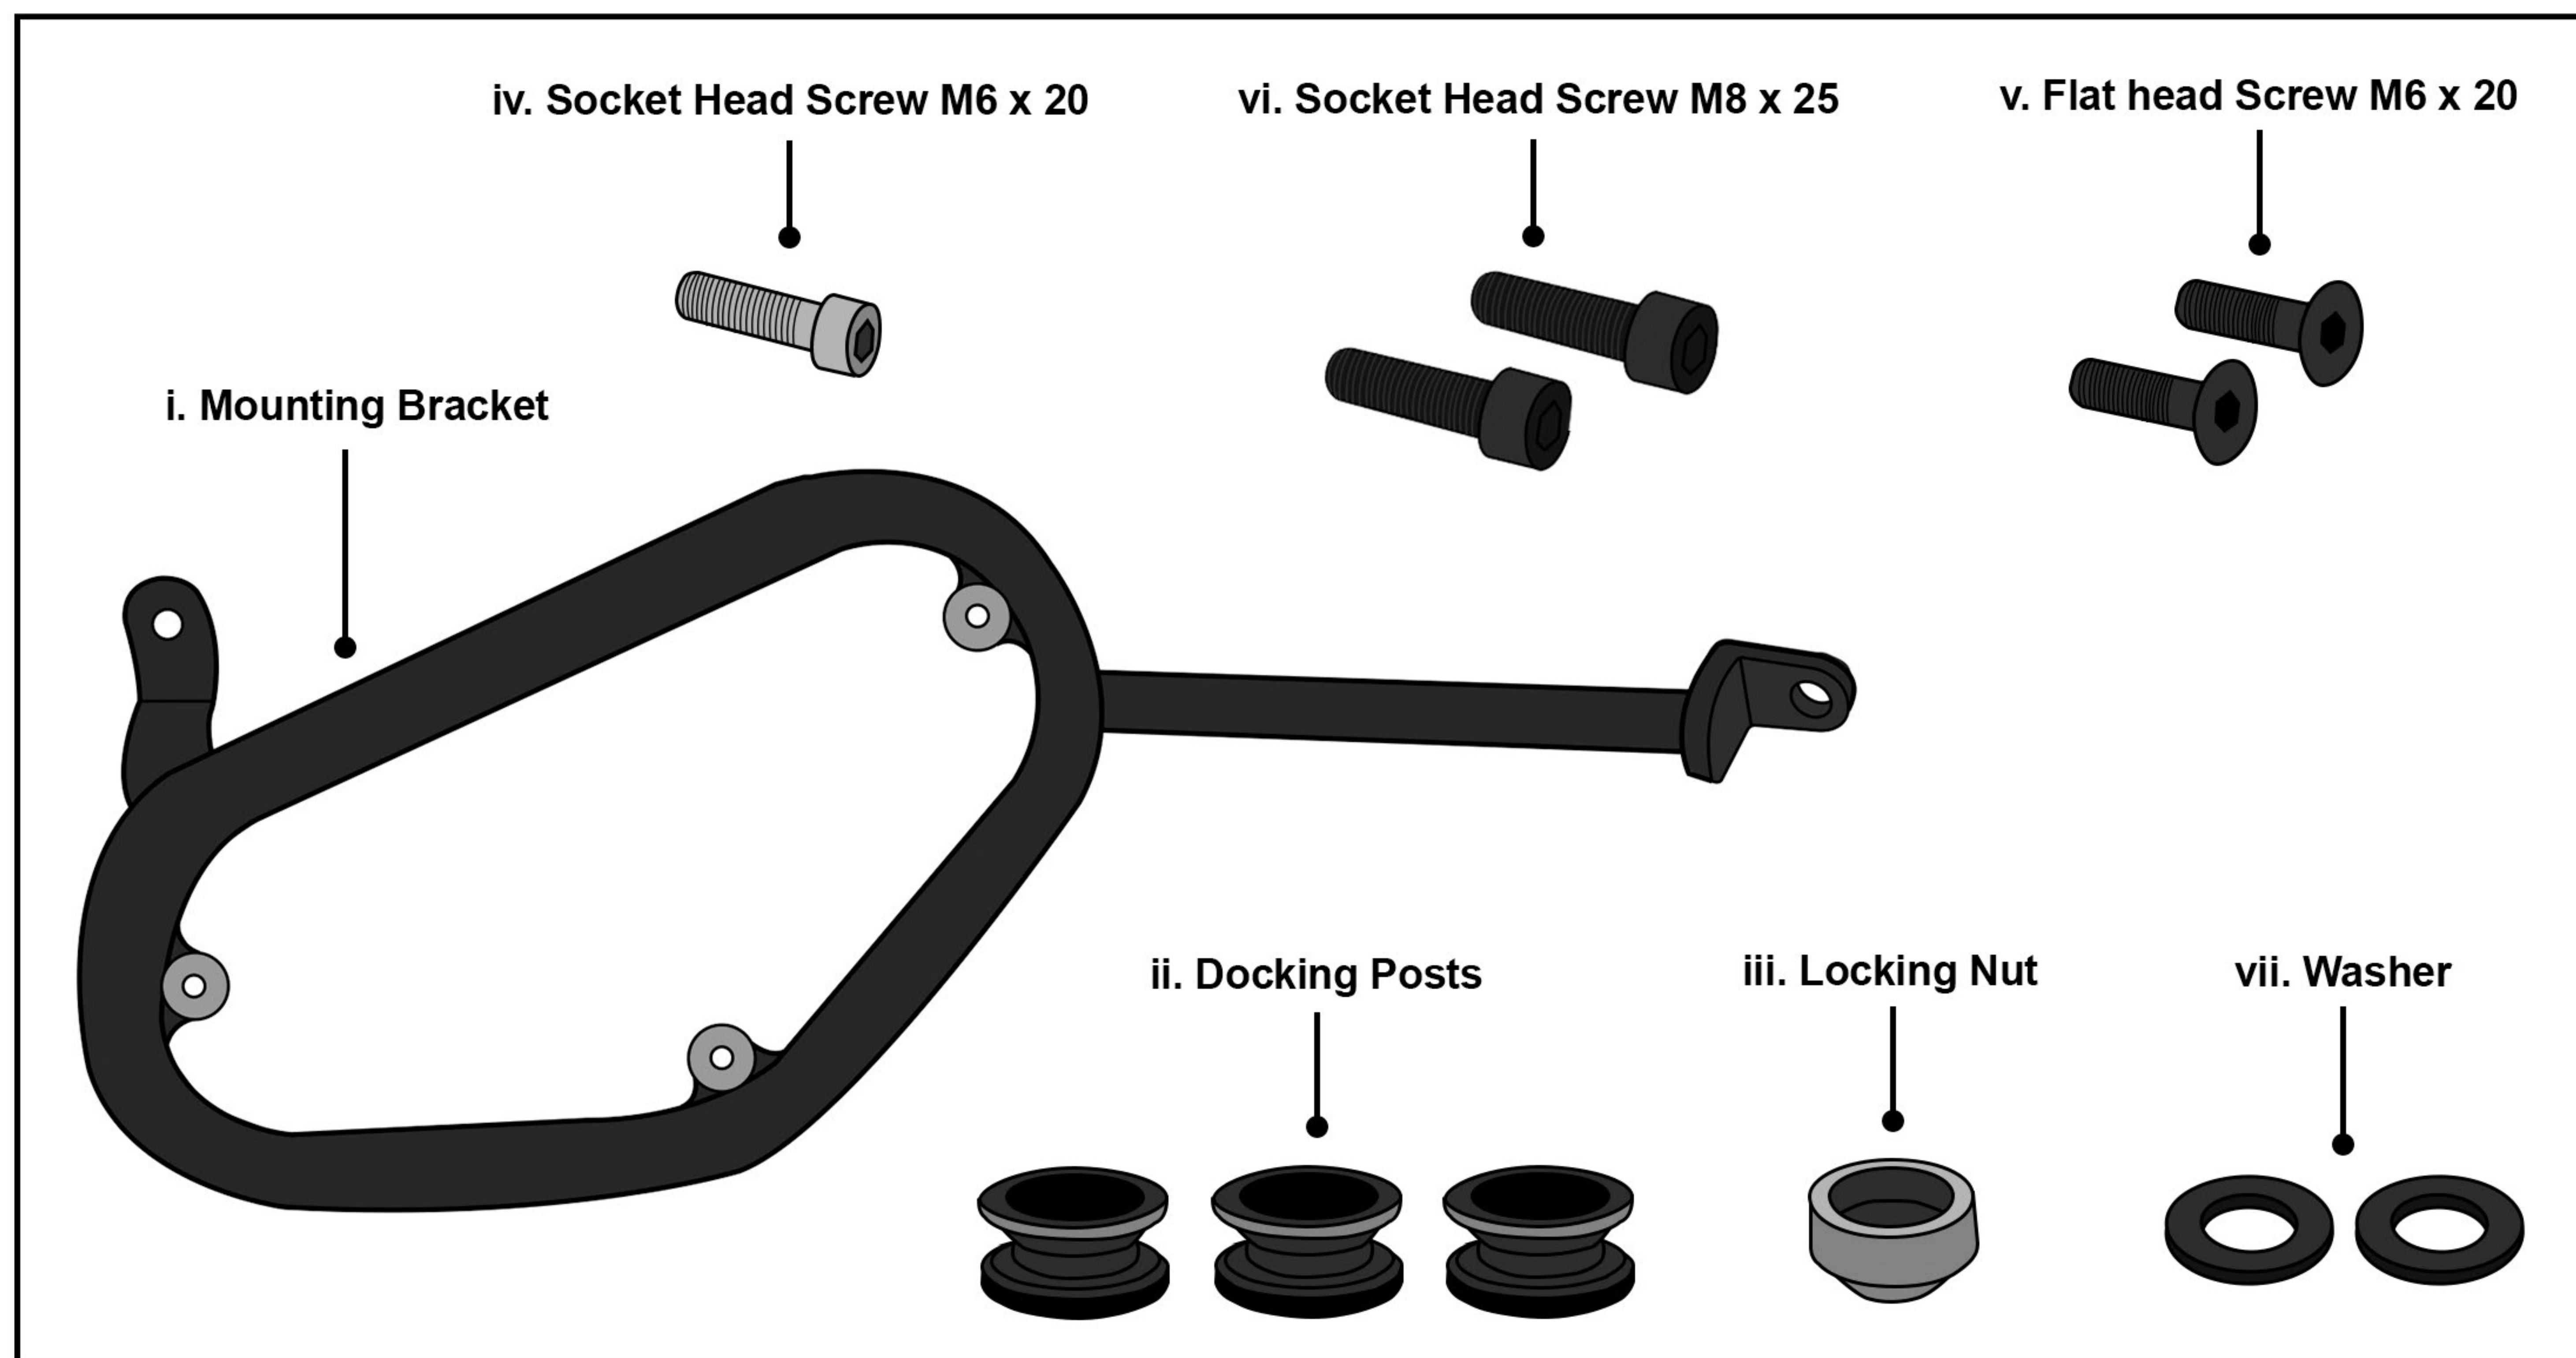

## Instructions:

### Step 1:


Install the 3 Docking Posts (ii) and the locking Nut (iii) to the Mounting Bracket as shown in Fig 1.

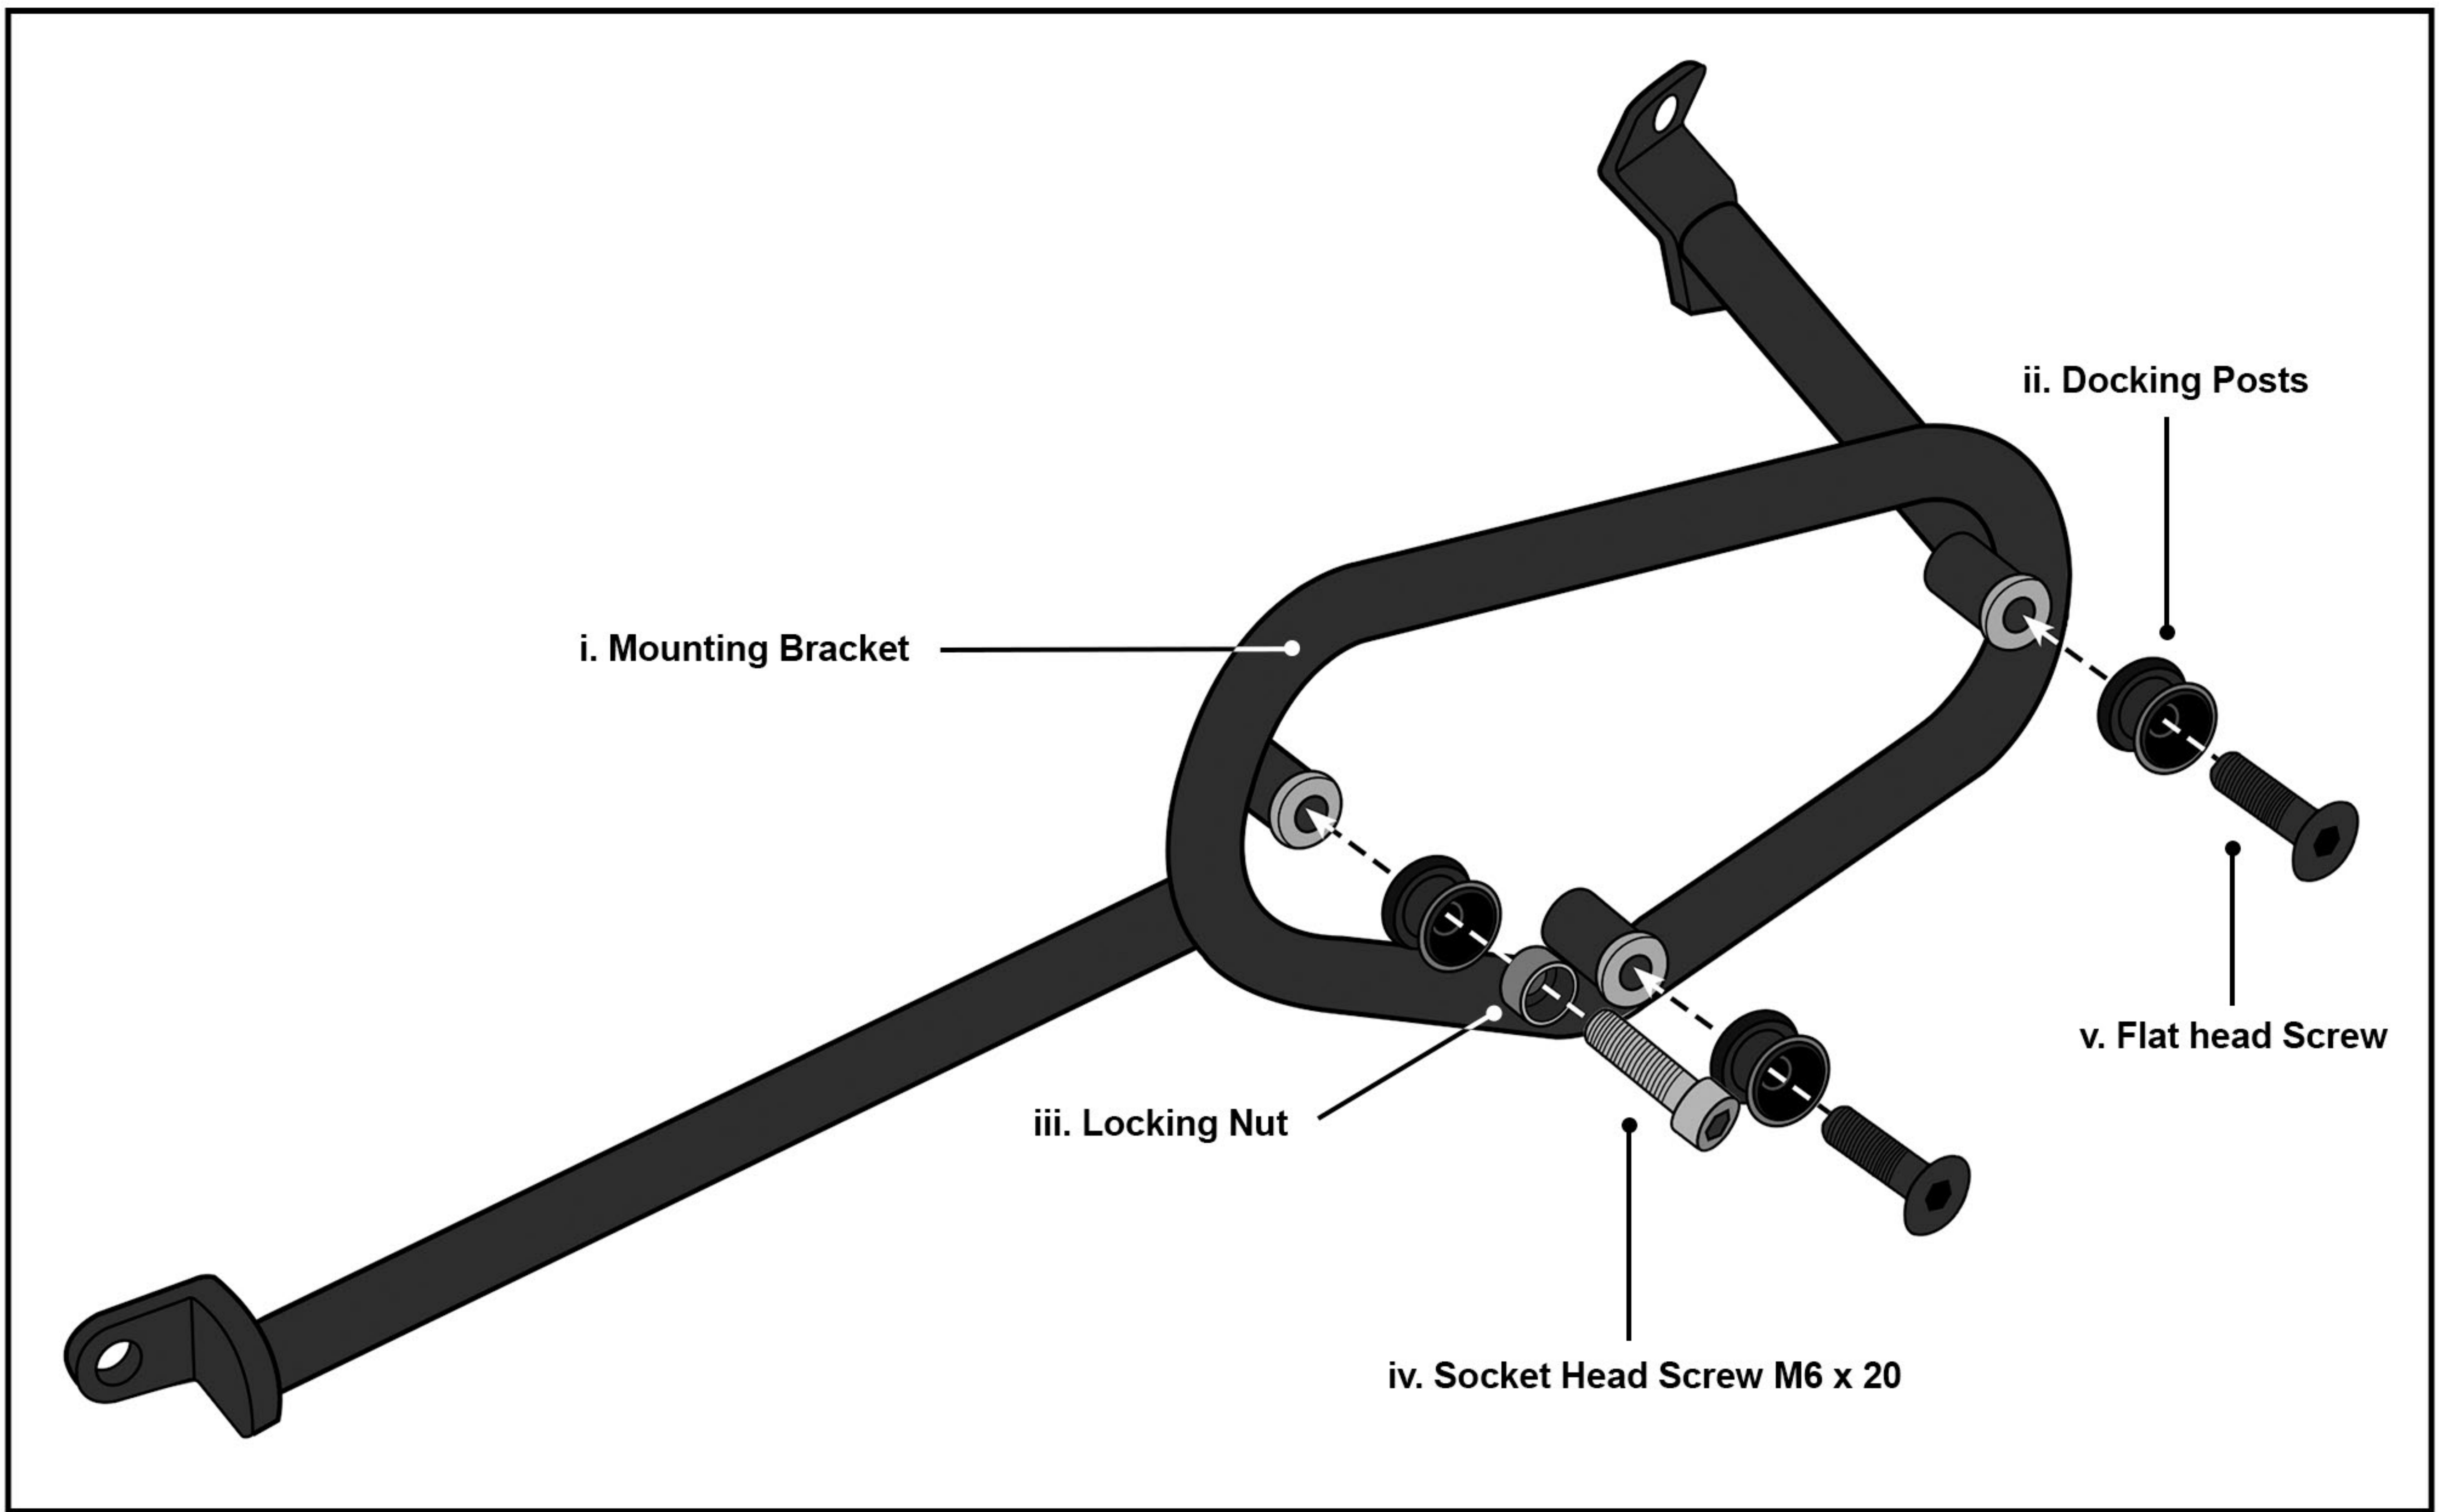

**Fig 1. Assembling the Mounting Bracket**

**Step 2:**

Remove the seat and the plastic housing as shown in figure 2.

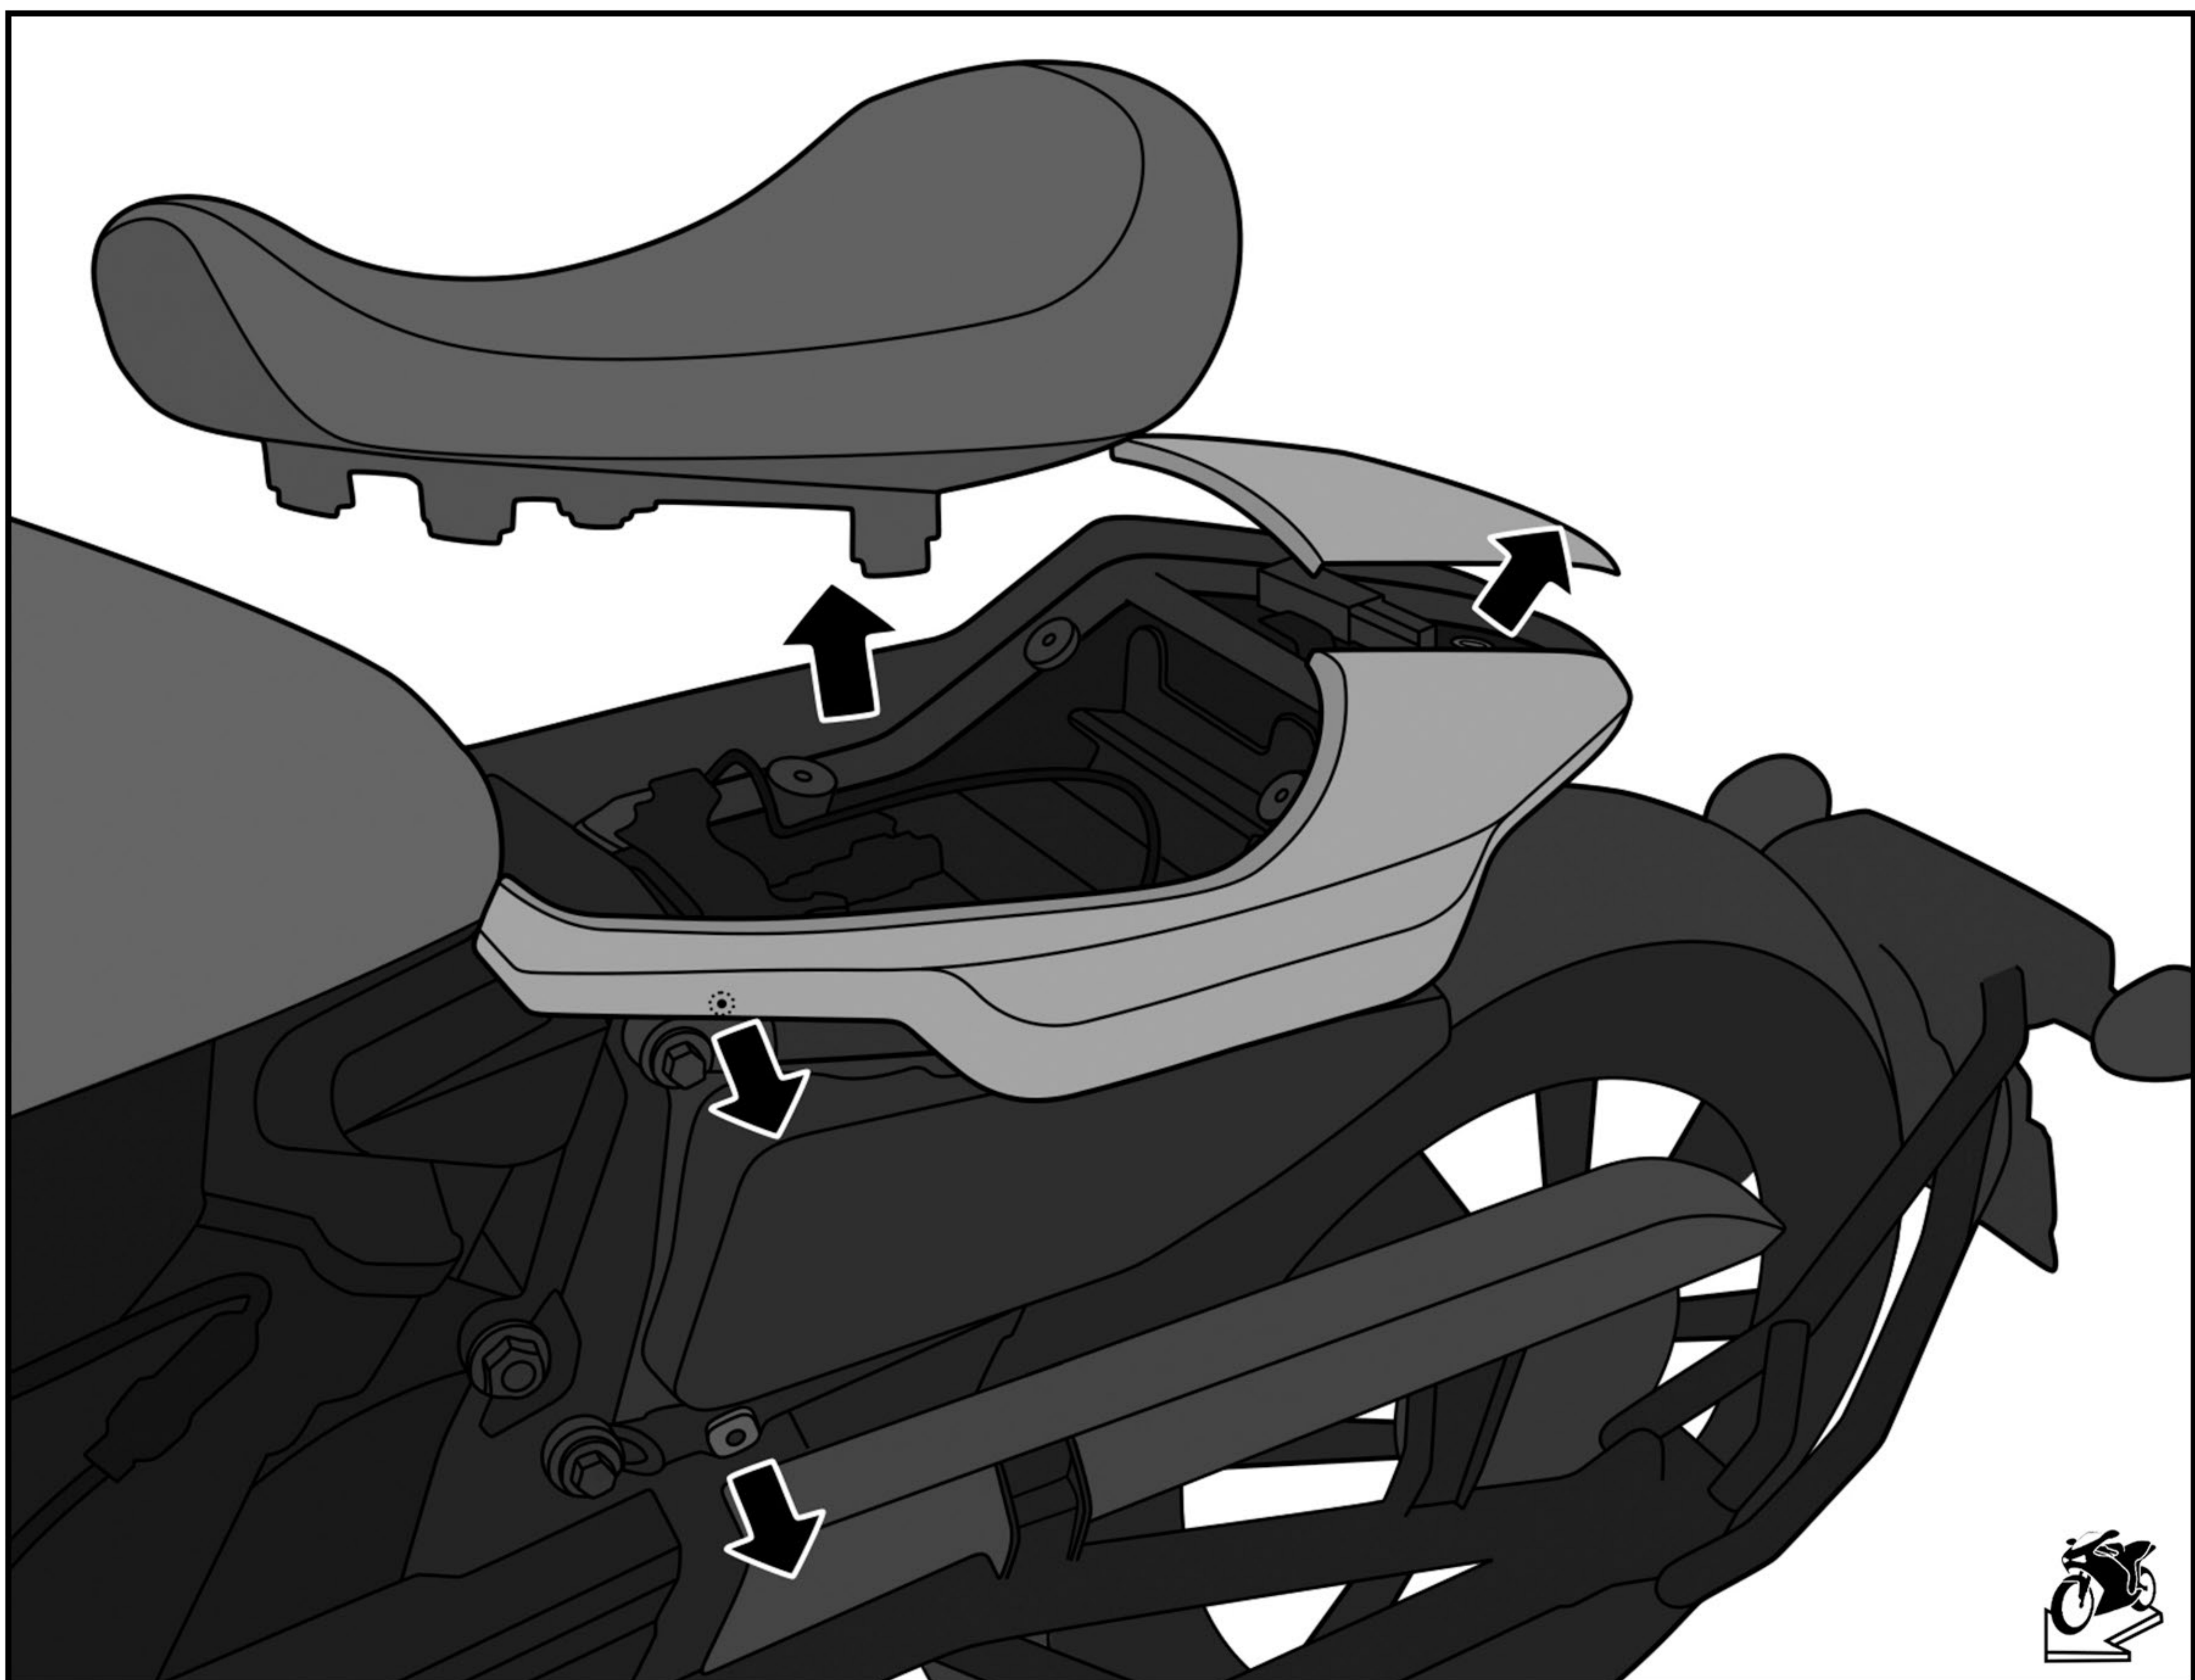

**Fig 2. Removing the seat and plastic housing**

### Step 3:

Install the Mounting Bracket (i) to the motorcycle using the 2 longer socket head screws (vi) and 2 washers (vii). Apply medium-strength thread locker and tighten. See Figure 3.

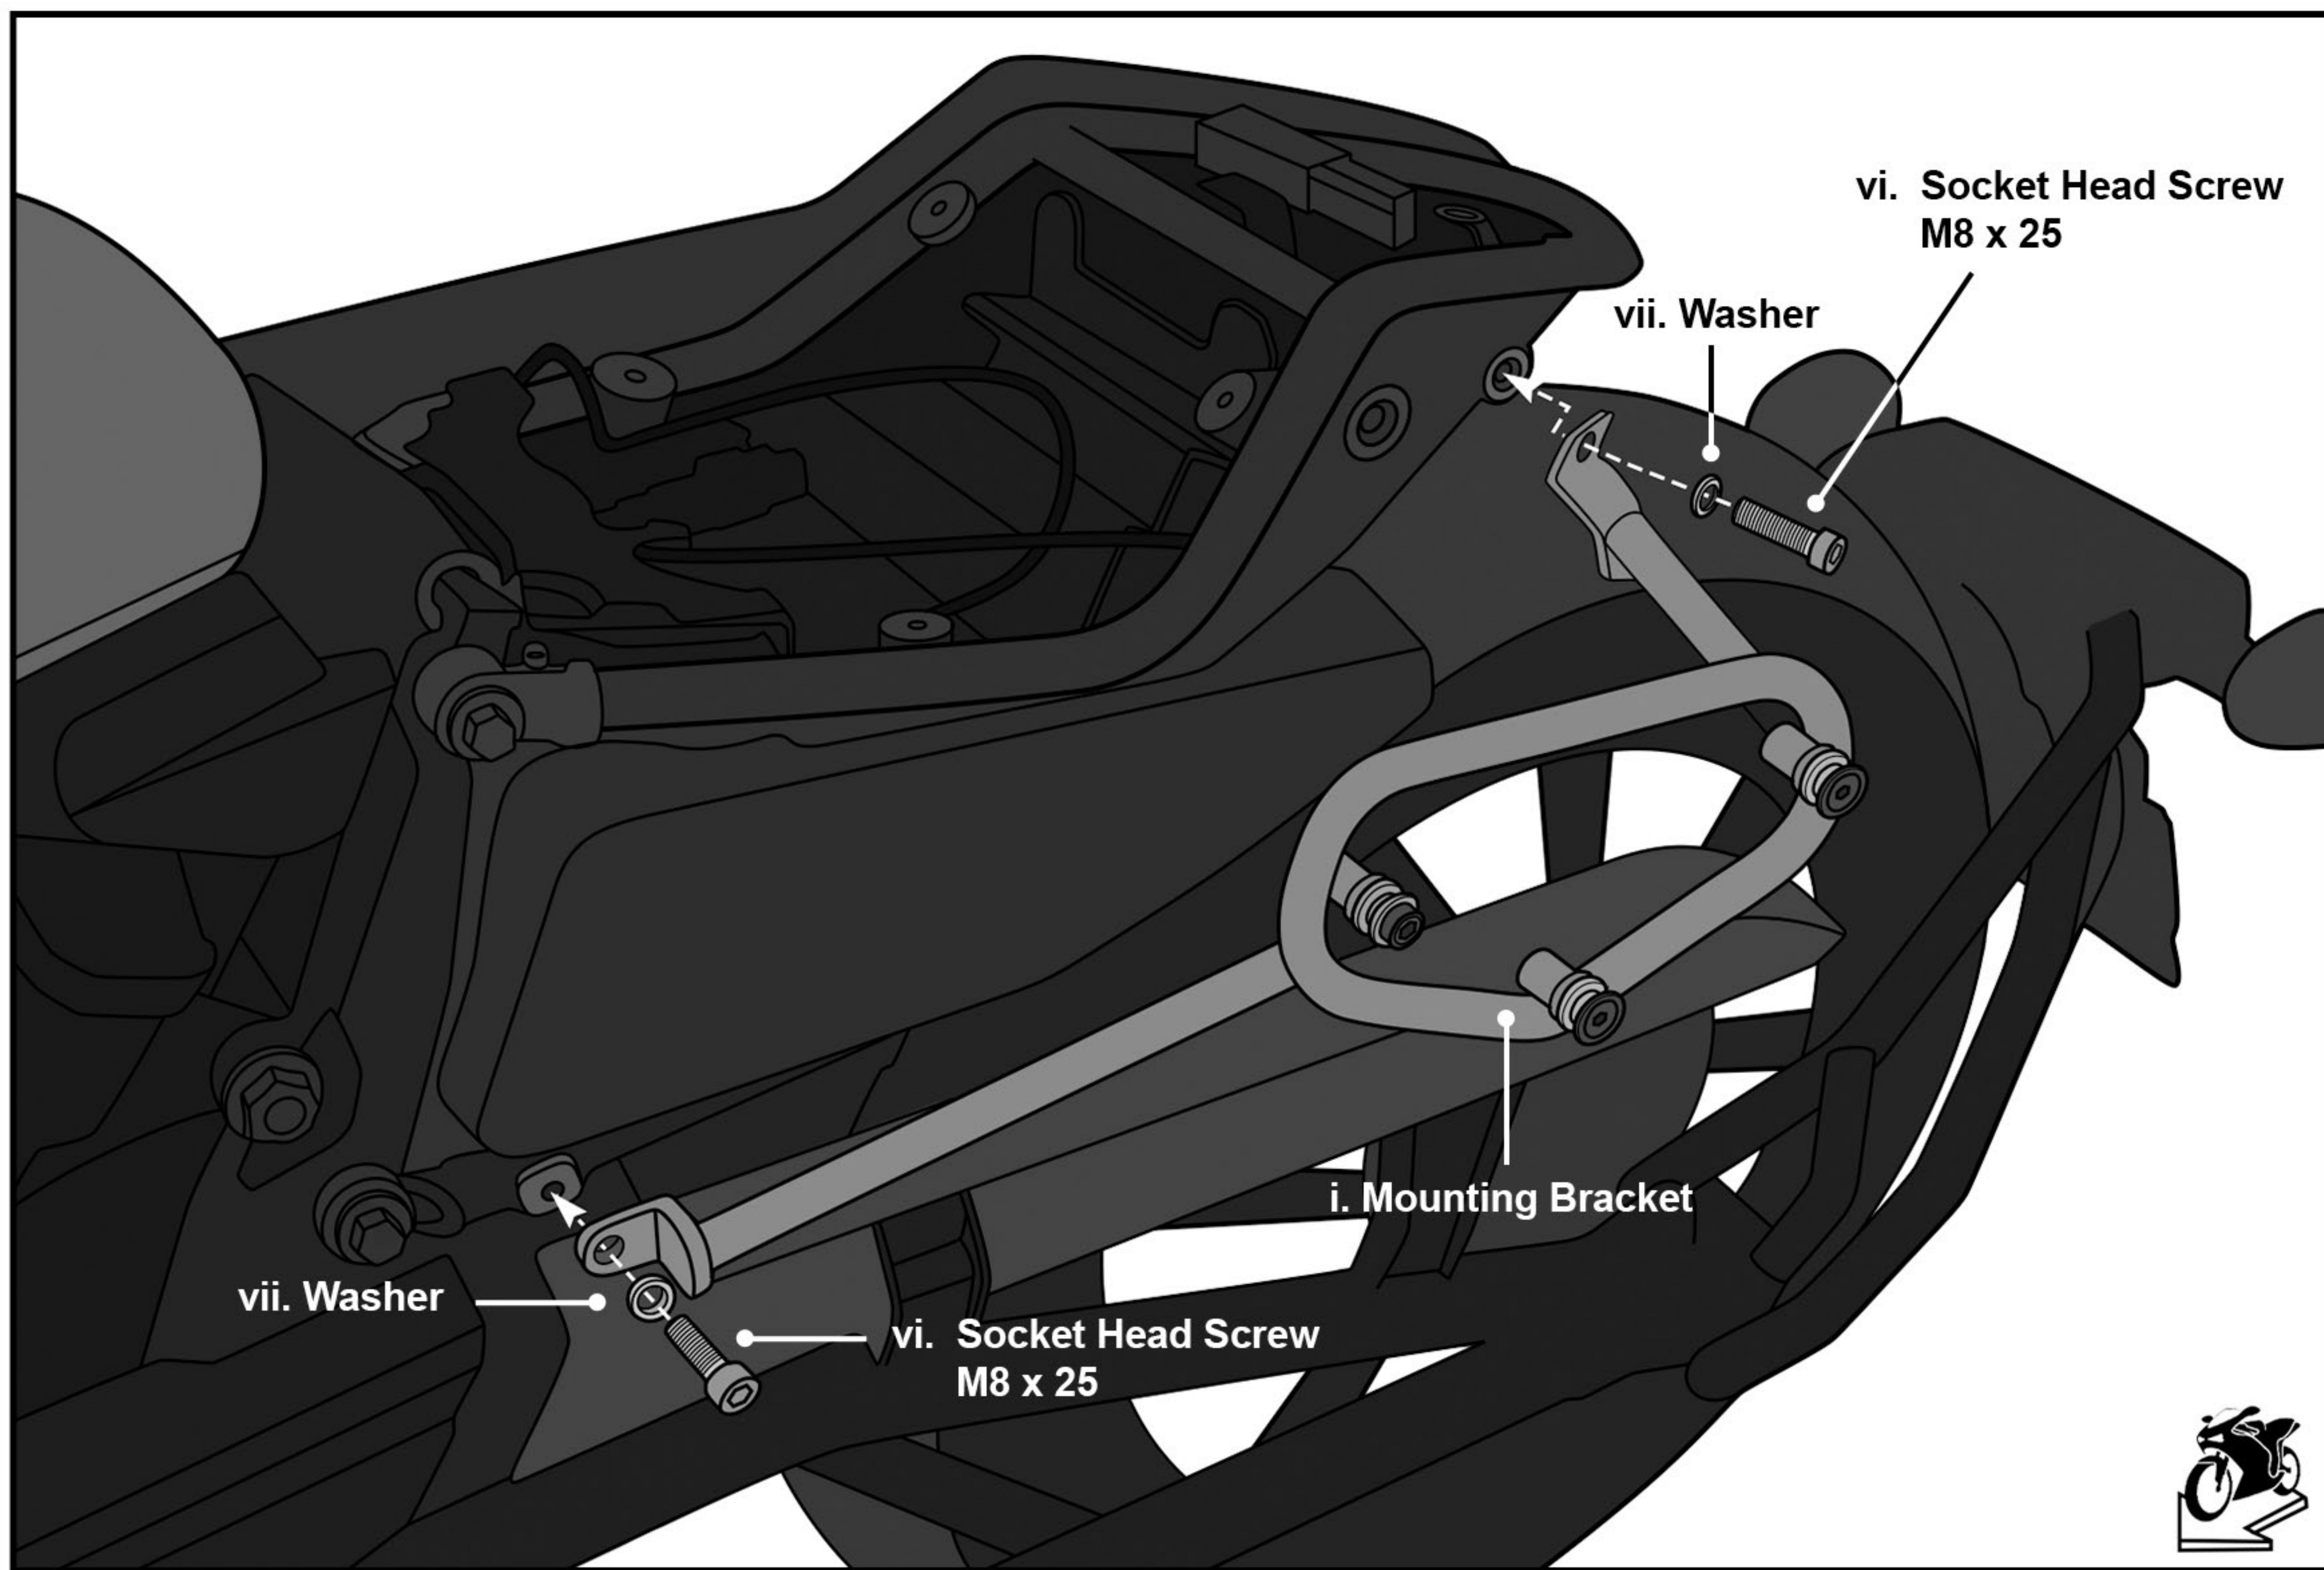


Fig 3. Installing the mounting bracket

### Step 4:

Reinstall the housing and the seat.

### Step 5:

The back of the bag comes equipped with a quick disconnect bracket.

Attach the bag to the Mounting Bracket by aligning the holes in the quick disconnect bracket with the 3 docking posts. Push the bag downwards so that the docking posts engage with the grooves in the bracket and the bag locks in. See Figure 4.

Pull the lever to disengage the lock and remove the bag.


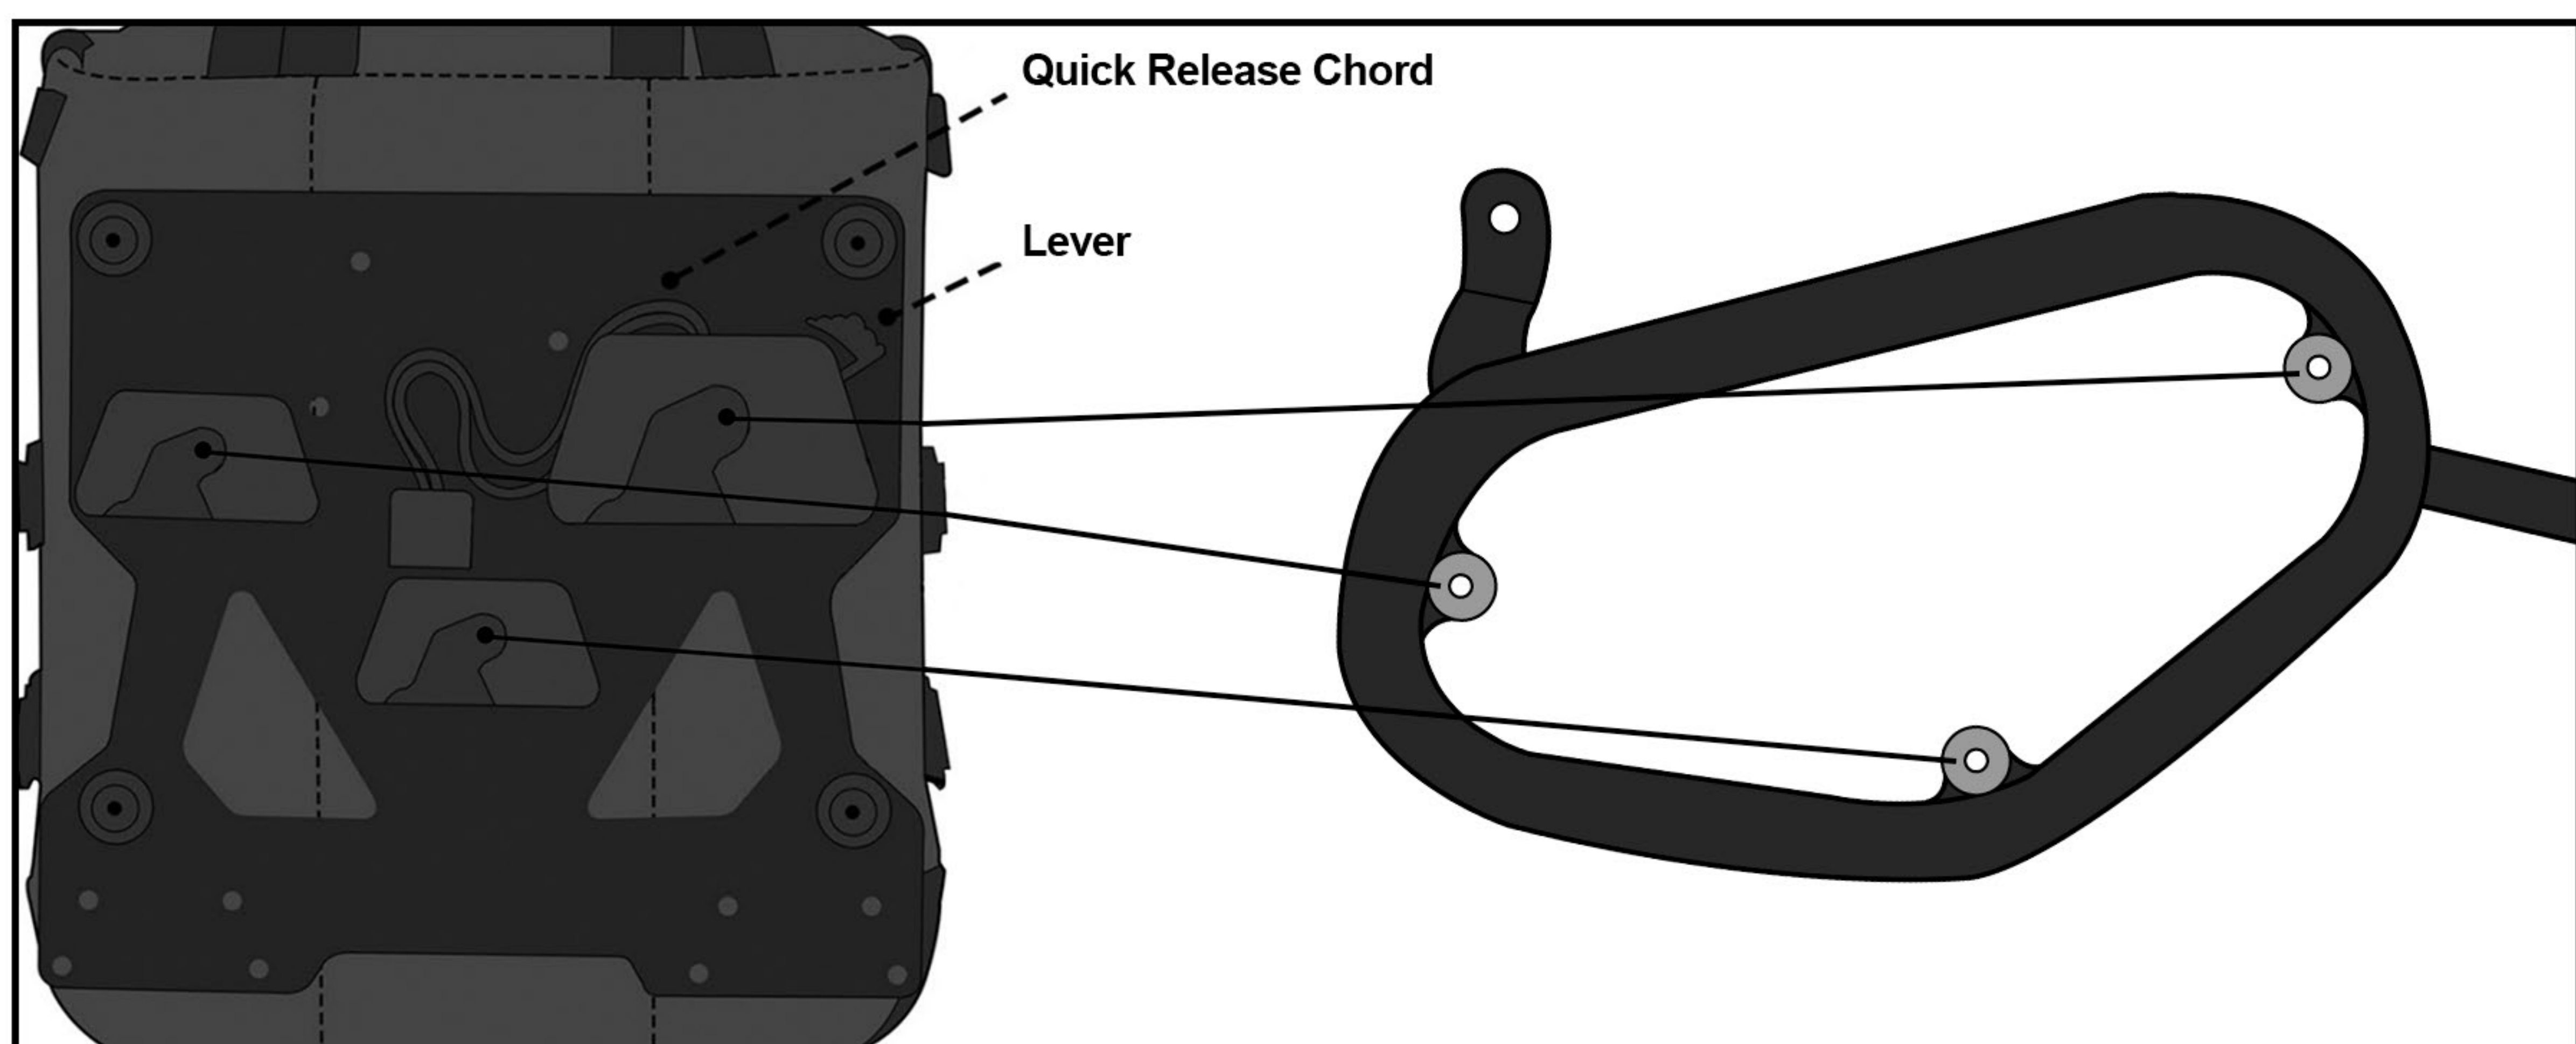


Fig 4. Attaching the bag to the bracket

## Tip:

The quick disconnect system is key lockable. Lock / unlock the quick disconnect system from inside the bag to secure your bag against theft.

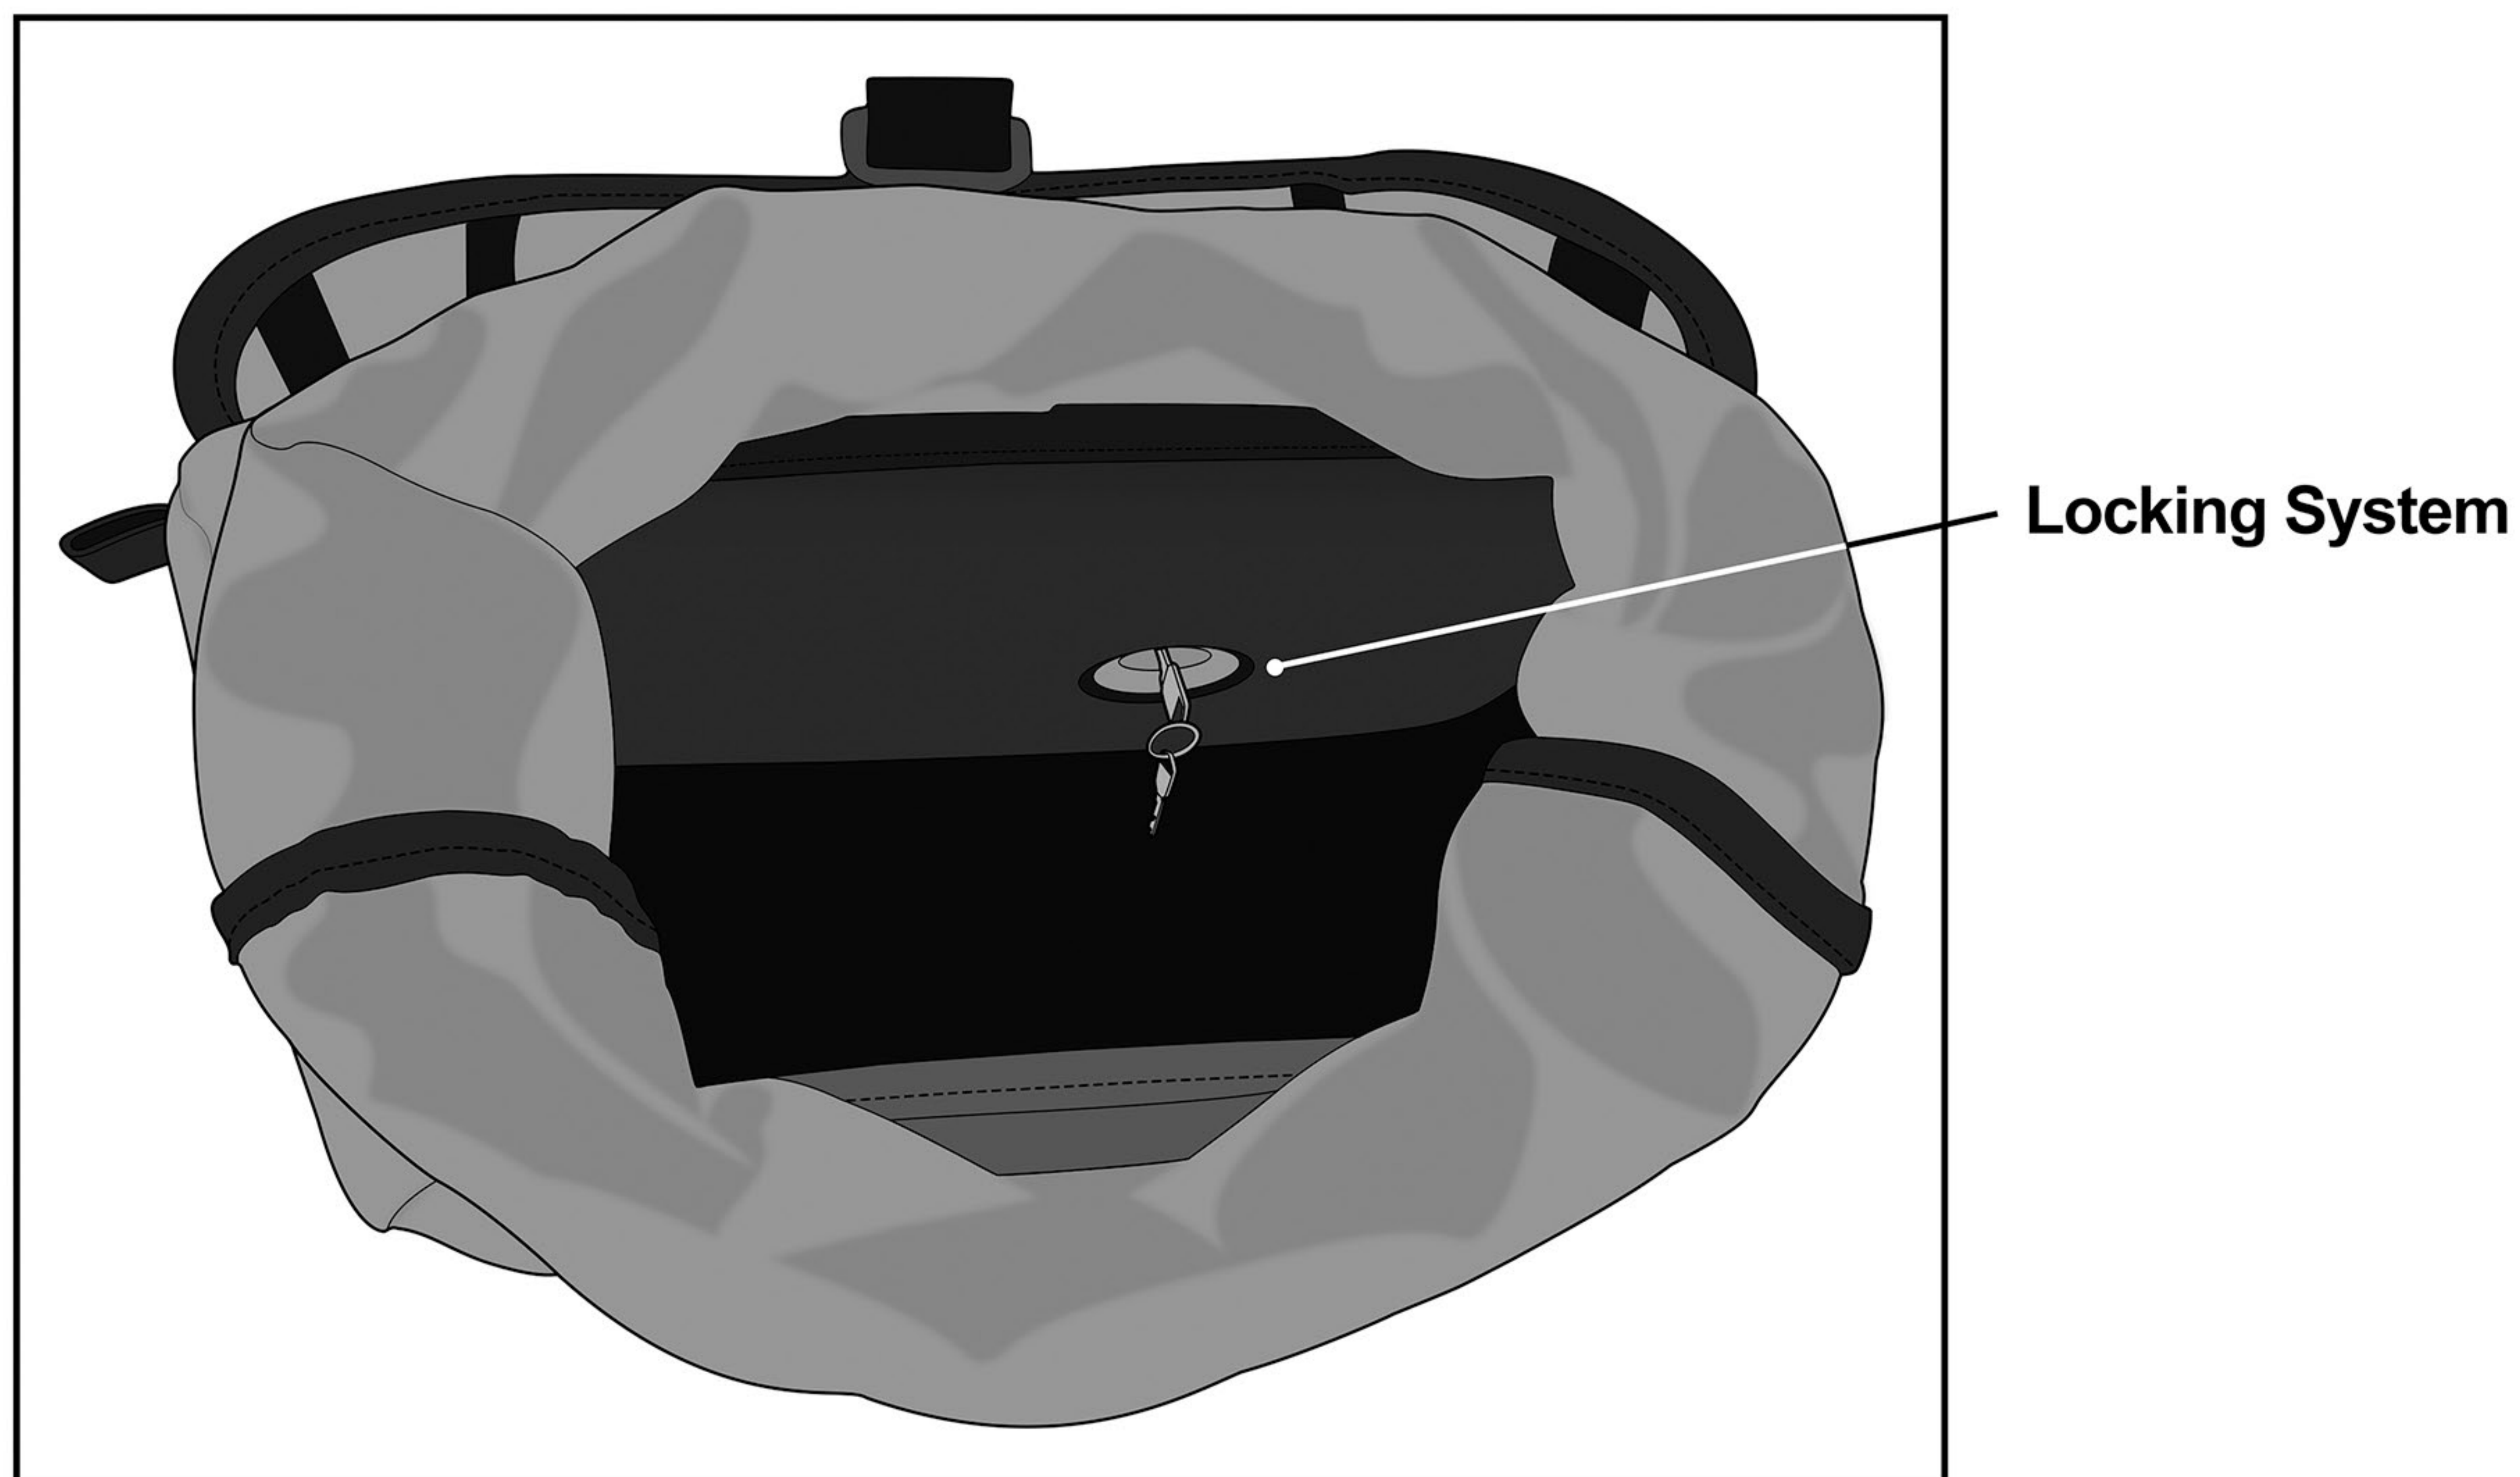

**locking system located below the waterproof liner**

**Congratulations, your Viking Incognito Solo Bag is installed and you are ready to ride!**

## Warnings!

- Do not install if you are unsure about any of the installation steps.
- No part of the bag or side rack should obstruct any of the moving parts of the bike such as the wheels or drive-train.
- Viking Bags is not responsible for any damage or injury caused by improper installation or use of the product.
- Periodically check to ensure all the screws are securely fastened.