

# Viking Apex Panniers Installation Guide For Suzuki V-Storm 1050 :



## Parts:

i	Viking Apex Panniers	x2
ii	Mounting Bracket	x2
iii	Footpeg Mounting Tab	x2
iv	8mm x 55mm Allenkey Bolt	x2
v	8.4mm Washer	x2
vi	8.5mm x 20mm Washer	x2
vii	Rear Mounting Tab	x2
viii	6mm x 45mm Button Head Allenkey Bolt	x2
ix	6mm x 60mm Button Head Allenkey Bolt	x2
x	6mm x 70mm Button Head Allenkey Bolt	x2
xi	6.4mm x 8mm Spacer	x4
xii	6.4mm x 10mm Spacer	x2
xiii	6.4mm x 20mm Washer	x2
xiv	6.4mm x 31mm Washer	x4
xv	Crossmember	x1
xvi	6mm x 20mm Allenkey Bolt	x2
xvii	6.4mm x 12mm Spring Washer	x4
xviii	6.4mm x 18mm Washer	x2
xix	6mm Nuts	x2
xx	$\frac{3}{8}$ " x $\frac{3}{4}$ " Allenkey Head Bolt	x8
xxi	$\frac{3}{8}$ " Spring Washer	x8


## Tools Needed:

- i Hex Driver Set
- ii Thread Locktite
- iii Wrench

## Tip:

- i Apply Loctite to ensure proper installation of bolts.
- ii Read the installation instructions carefully and make sure that all parts under the parts list are included.

## Parts Diagram:

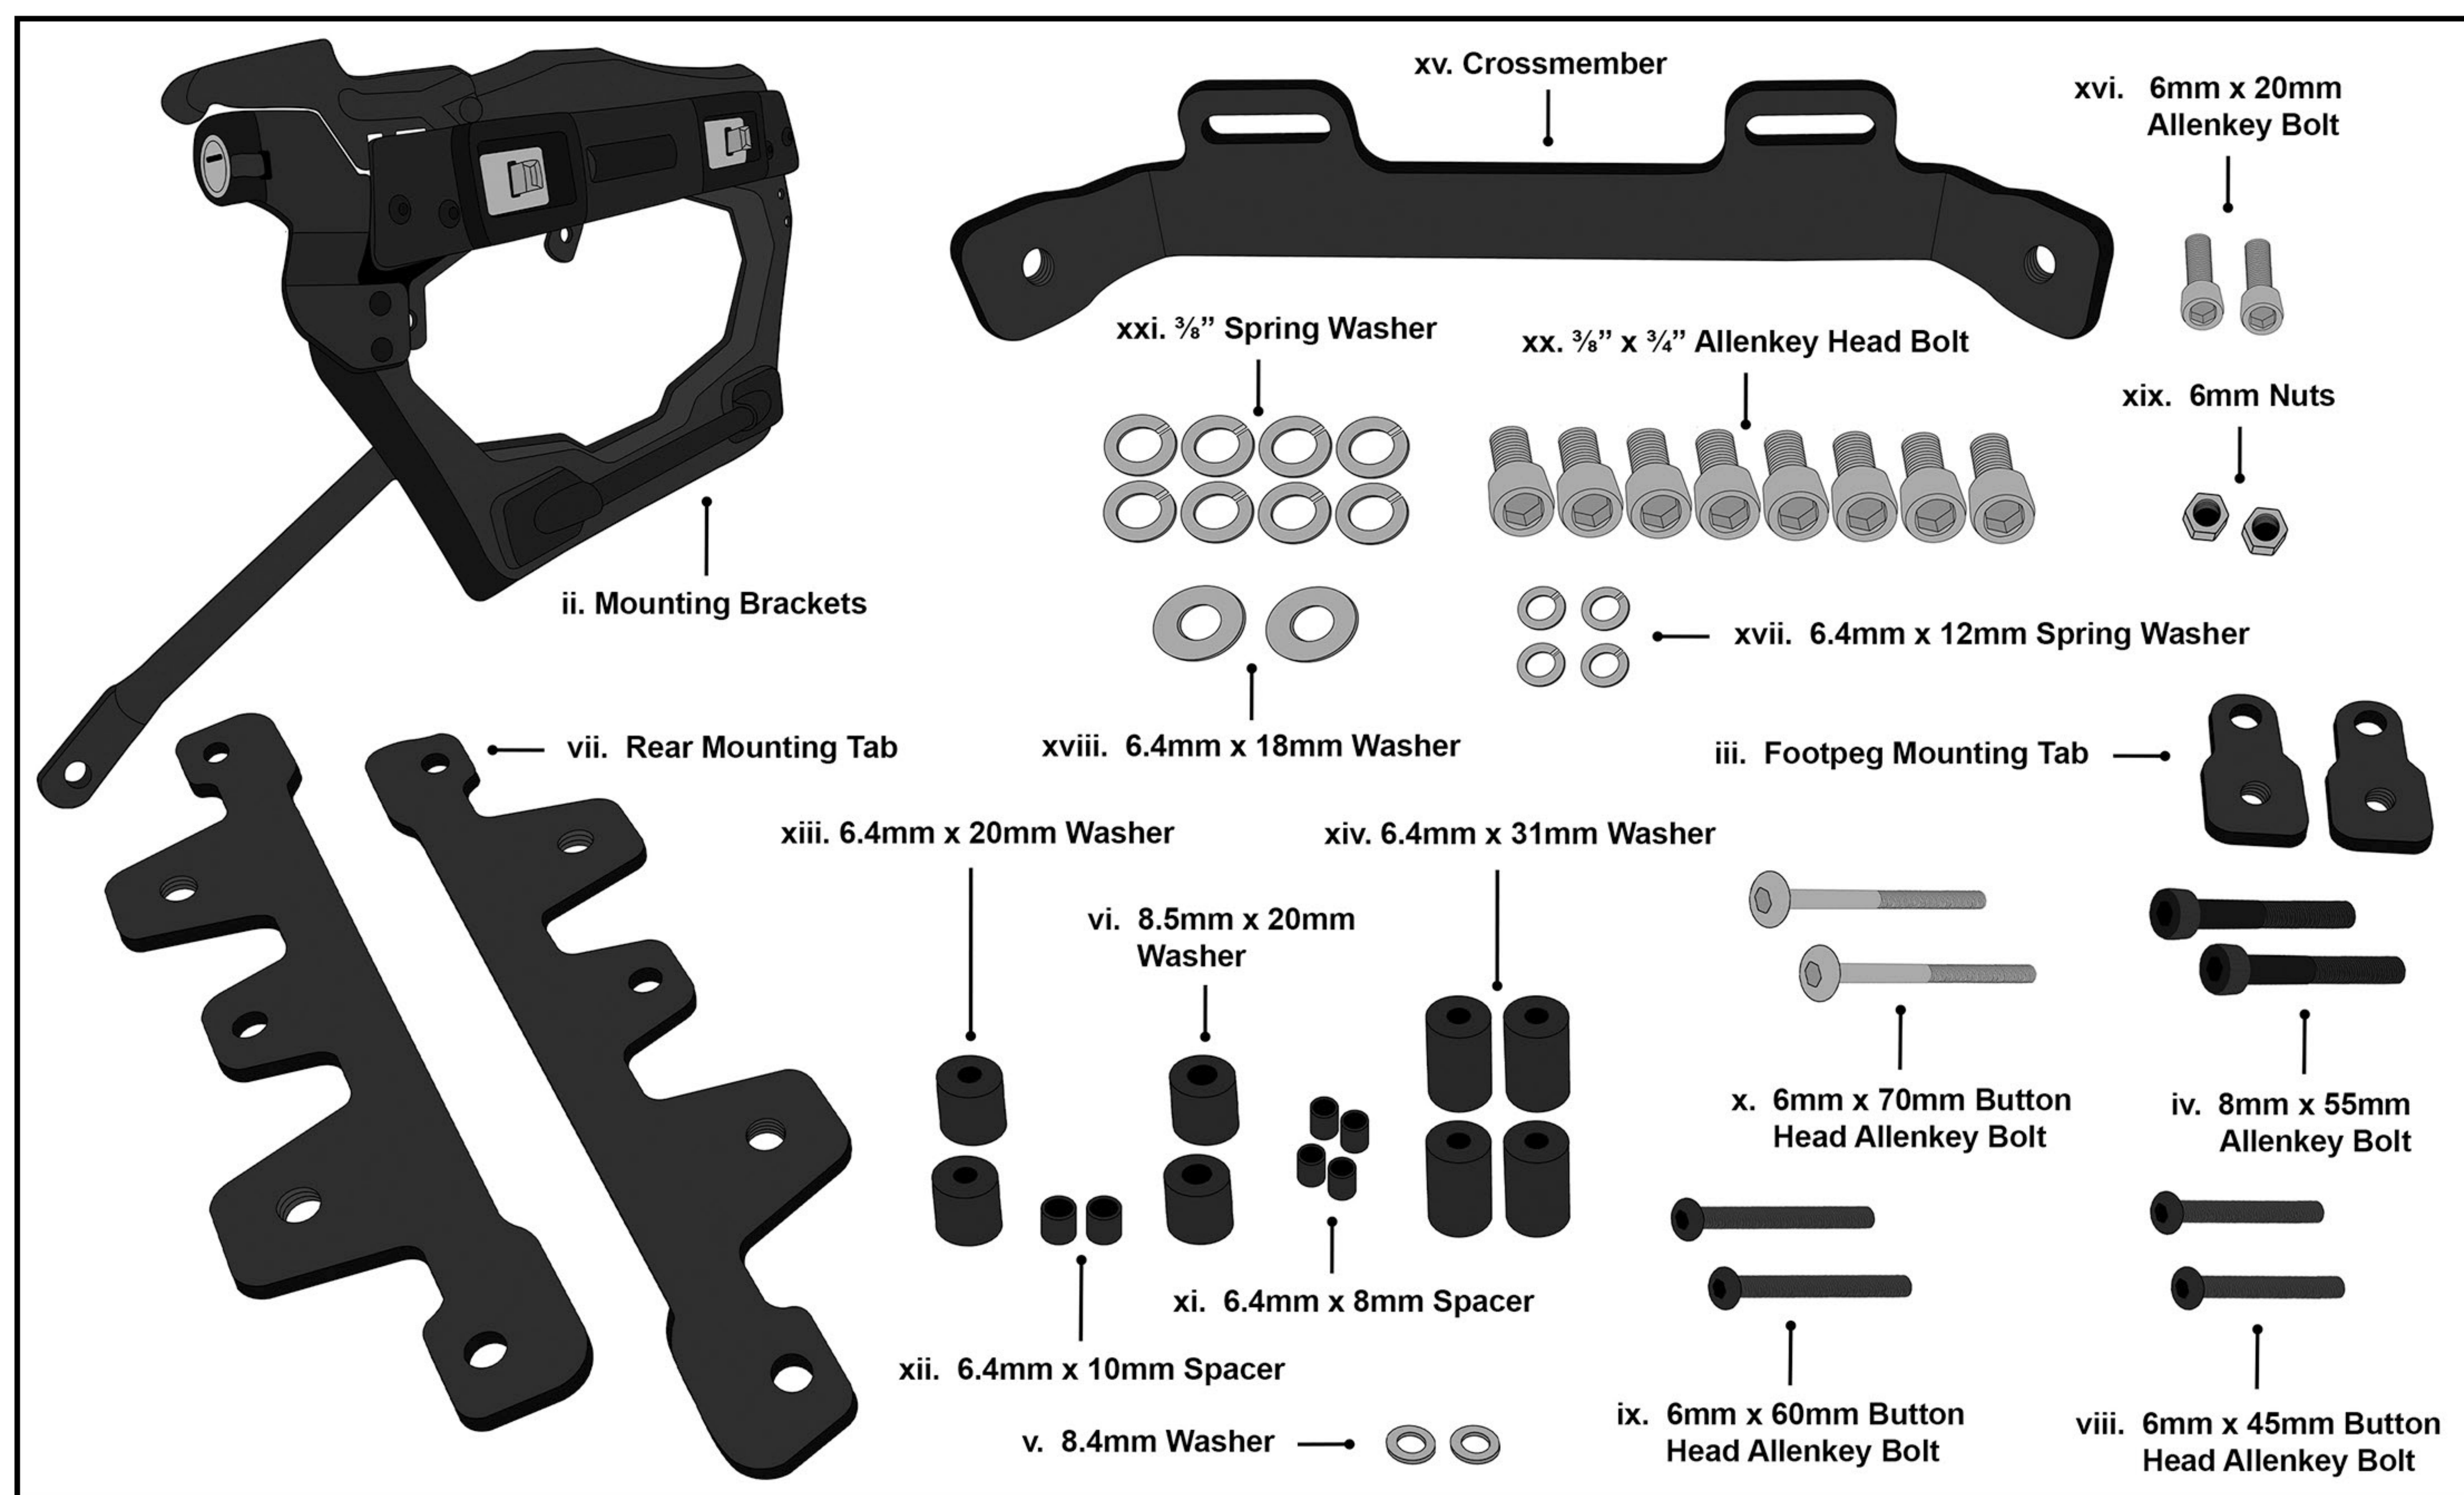

# Instructions:

## Step 1:

Remove the OEM bolts and install the rear mounting tabs(VII) and footpeg mounting tabs (III) on both sides of the bike using Fig.1 and Fig. 2

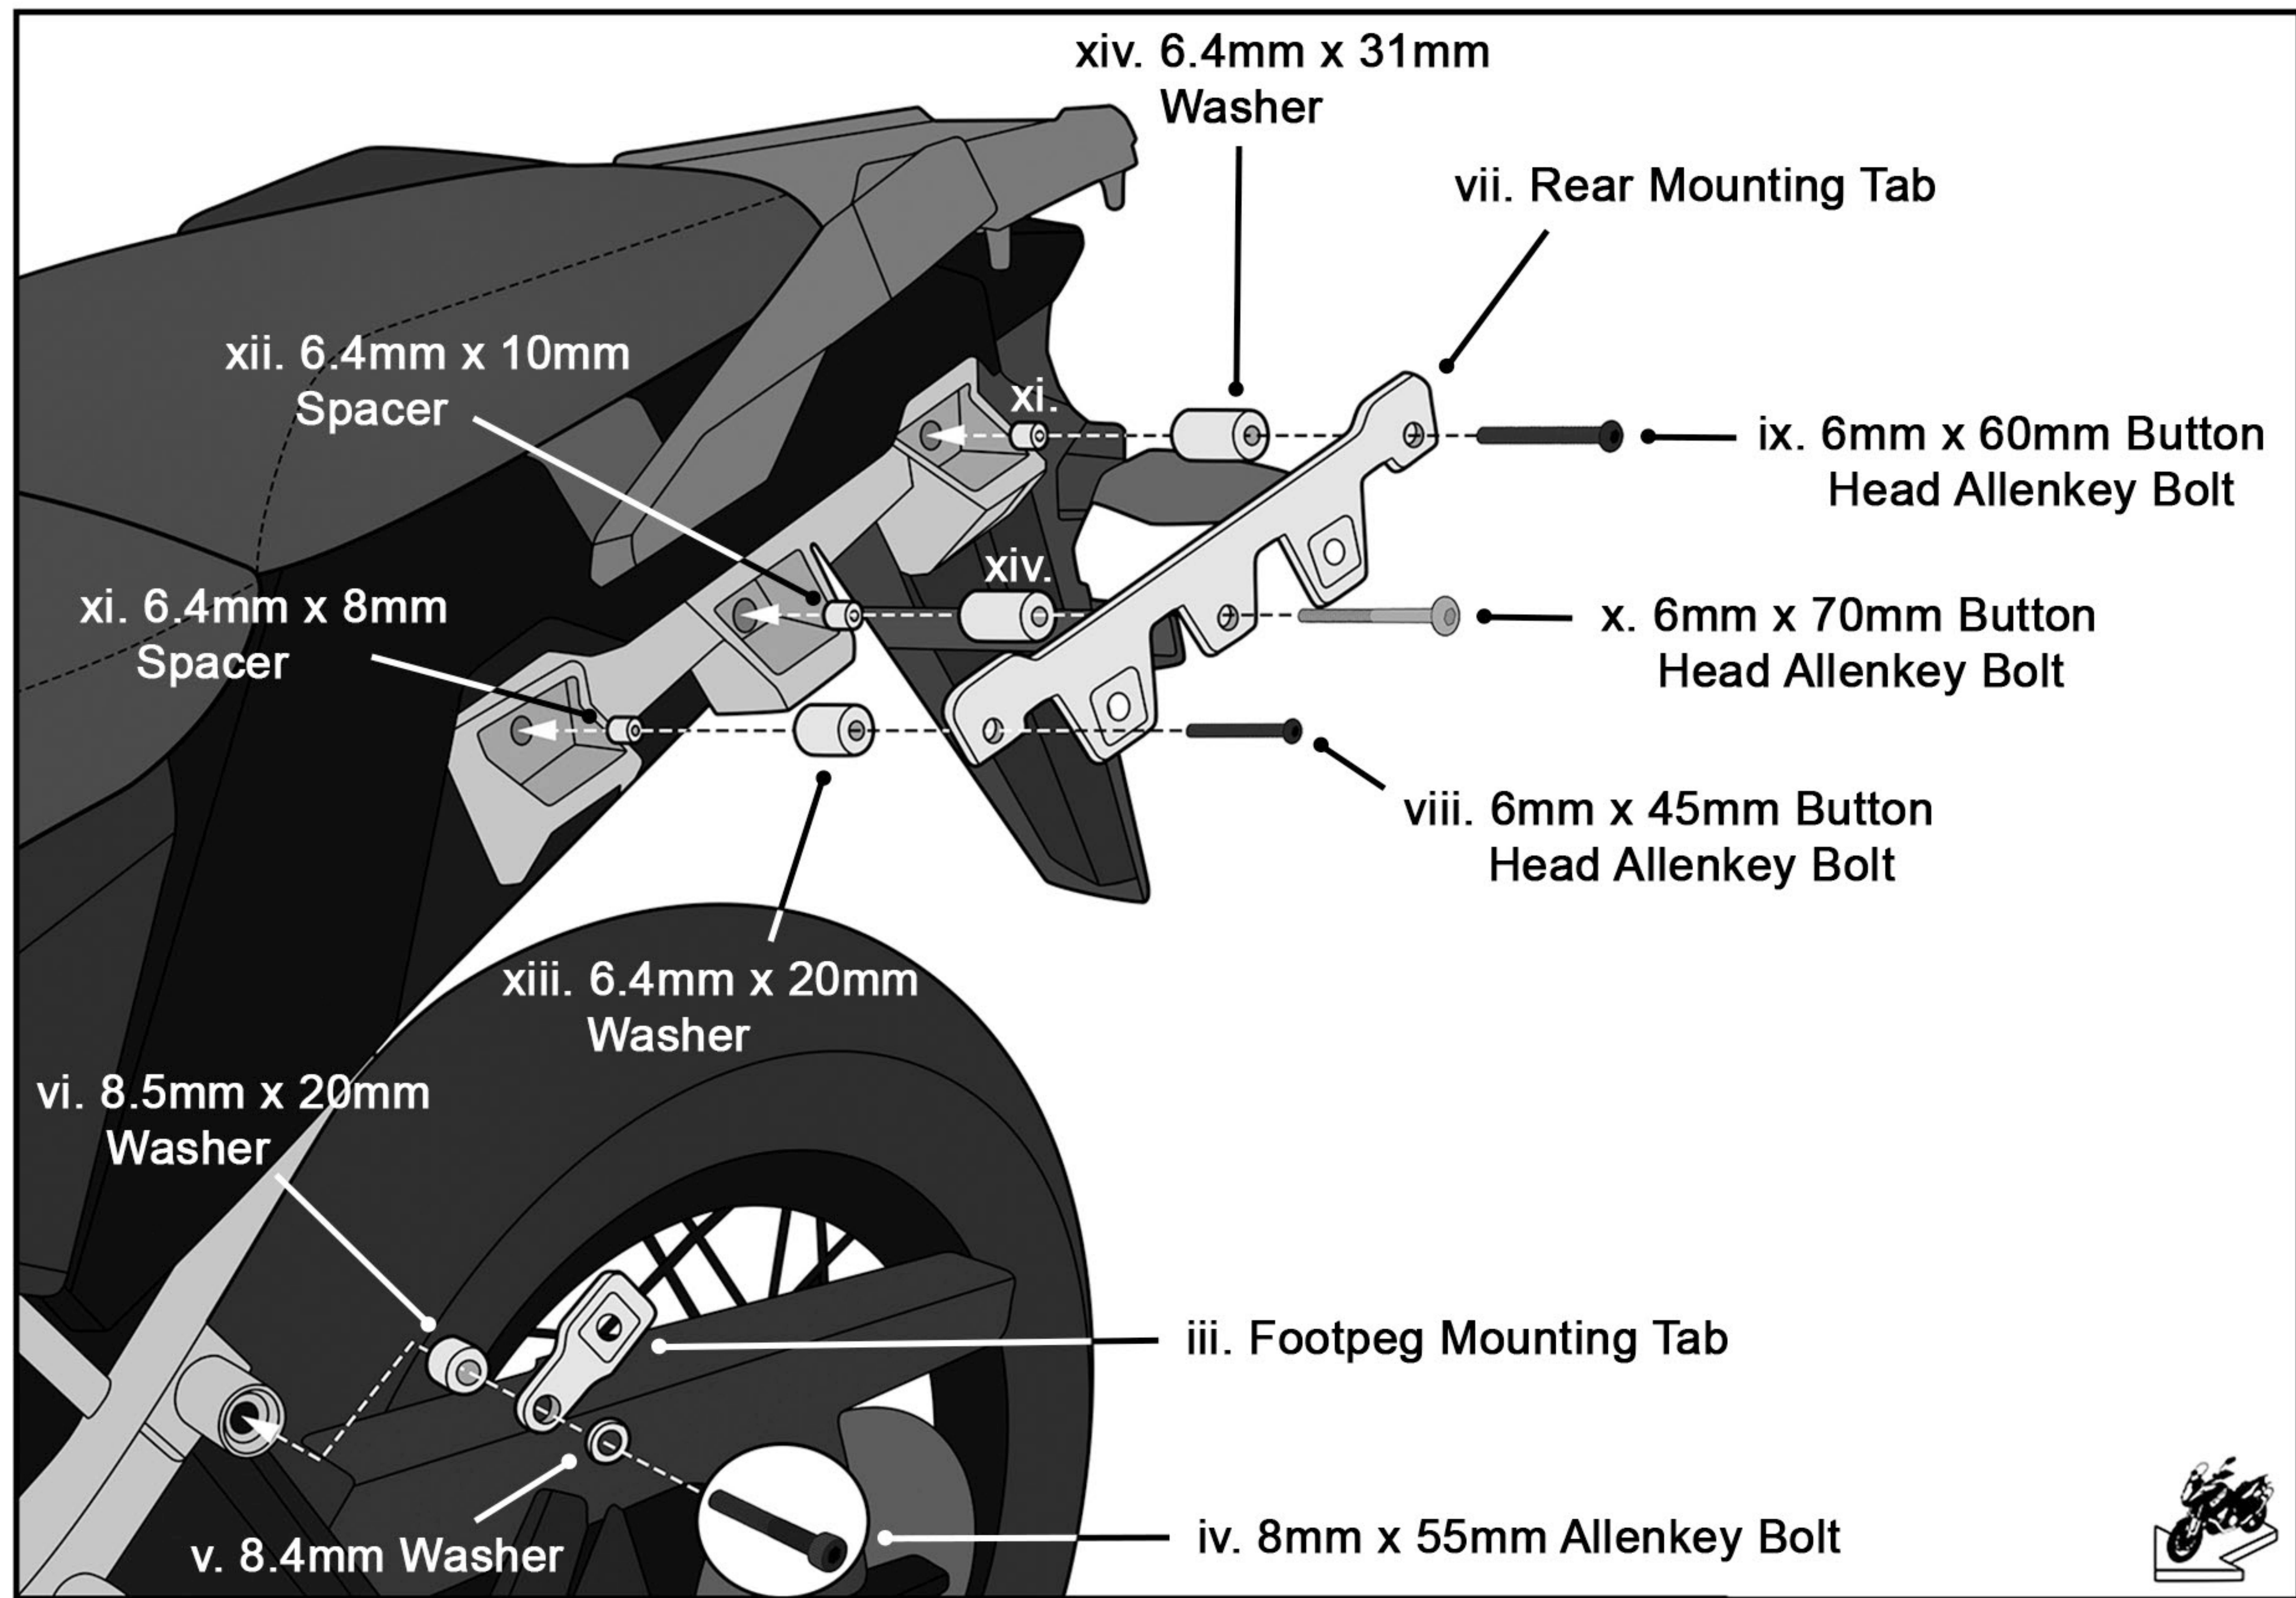


Fig 1. Installing mounting tabs to the left fender and left footpeg

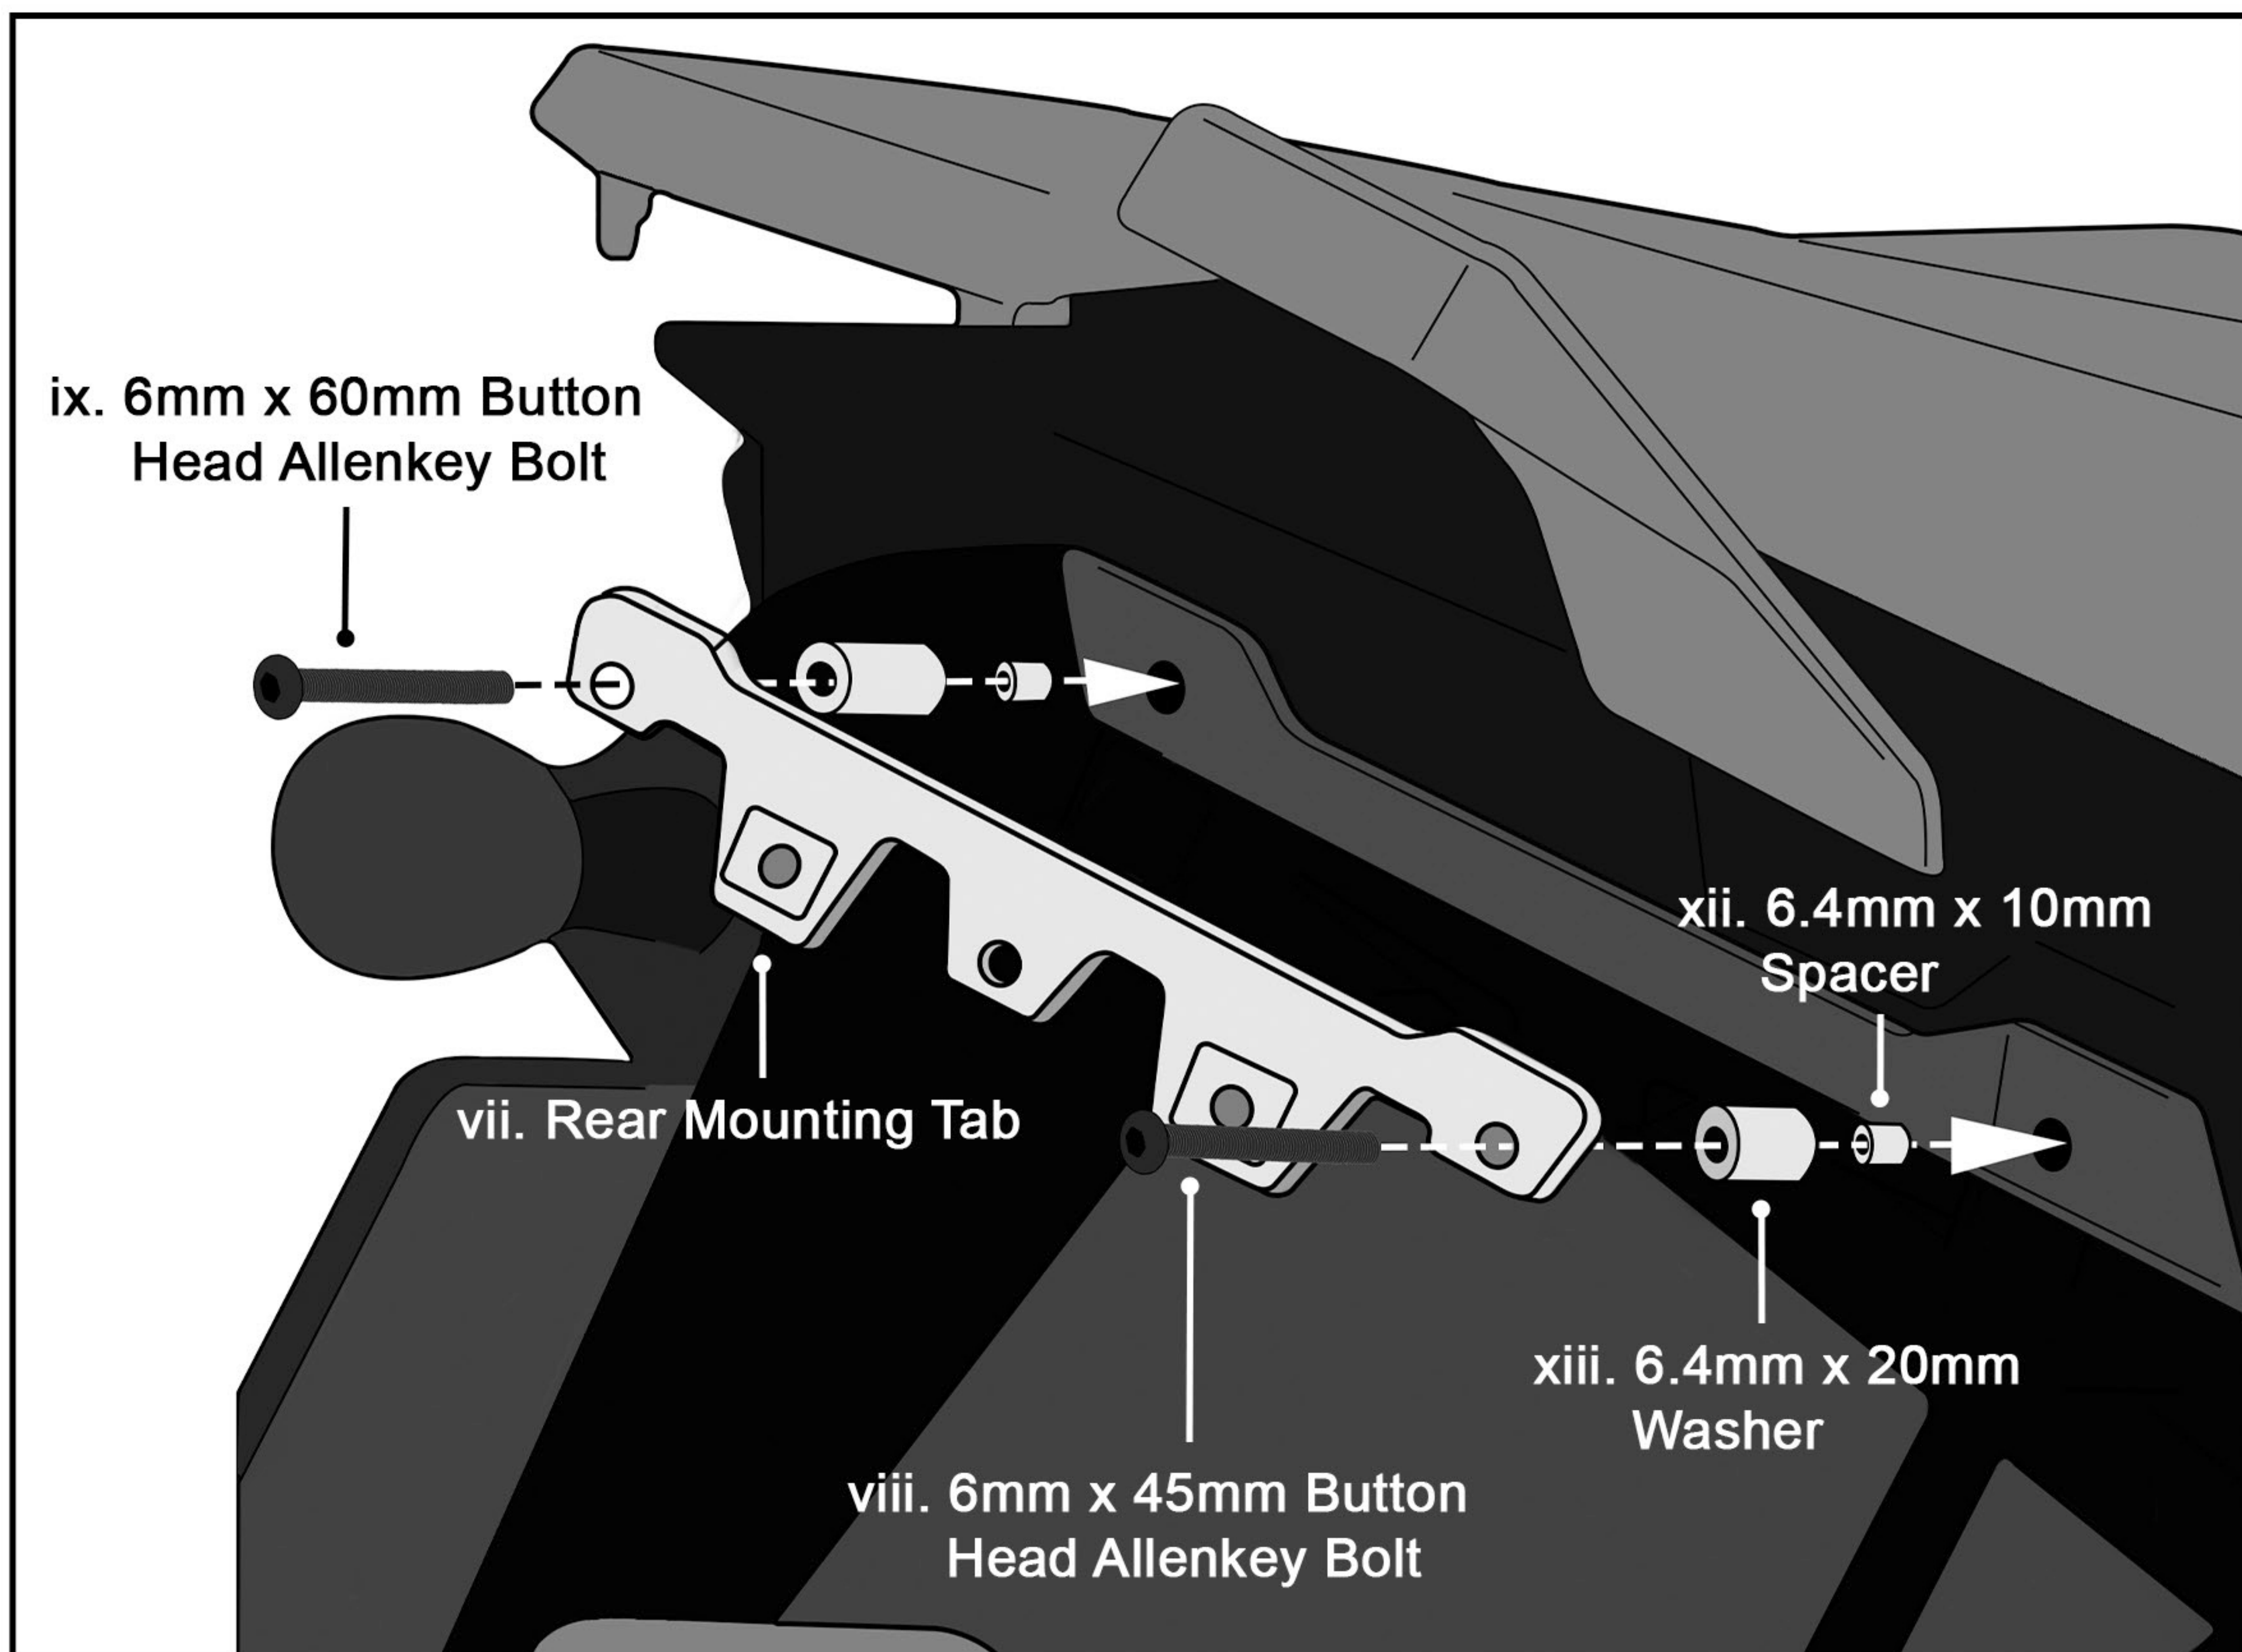


Fig 2. Installing mounting tabs to the right fender and right footpeg

## Step 2:

Install the crossmember(XV.) to the motorcycle license plate as shown in Fig 3.

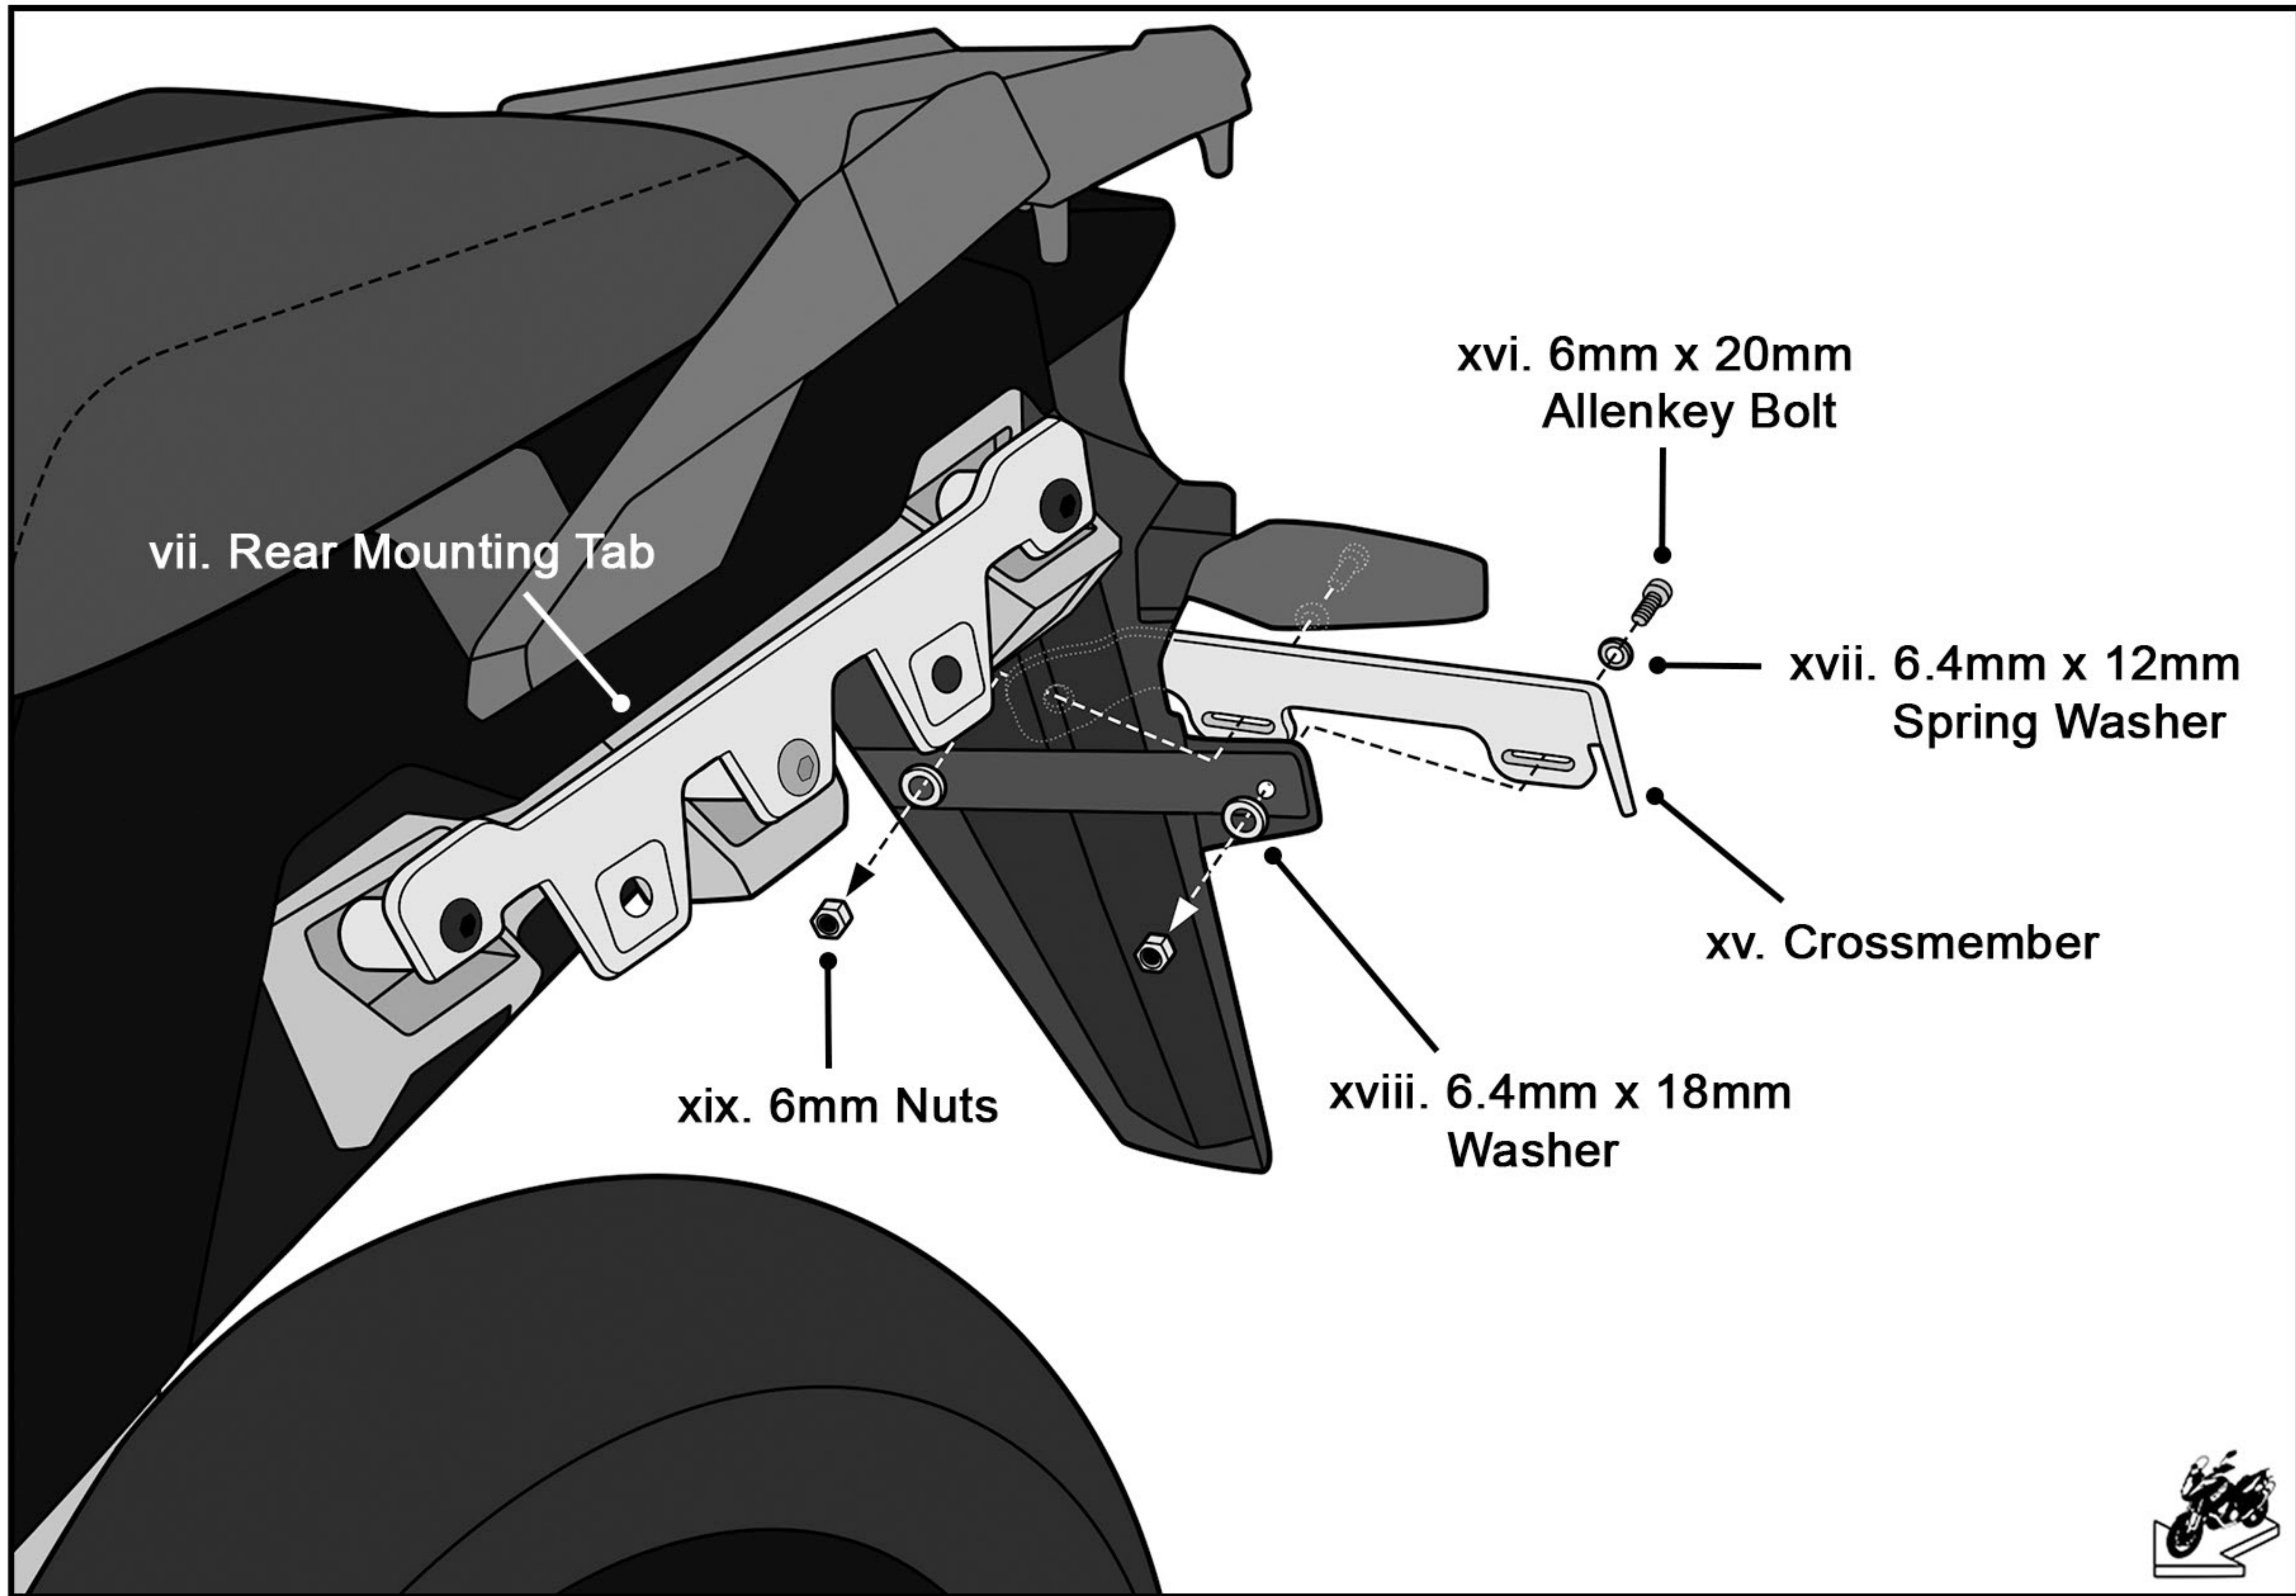


Fig 3. Installing the crossmember

## Step 3:

Attach the mounting brackets(II) to the Rear Mounting Tab(VII), Footpeg Mounting Tab(III), and Crossmember(XV) using  $\frac{3}{8}$ " x  $\frac{3}{4}$ " Allenkey Head Bolt(XX). See Fig 4.

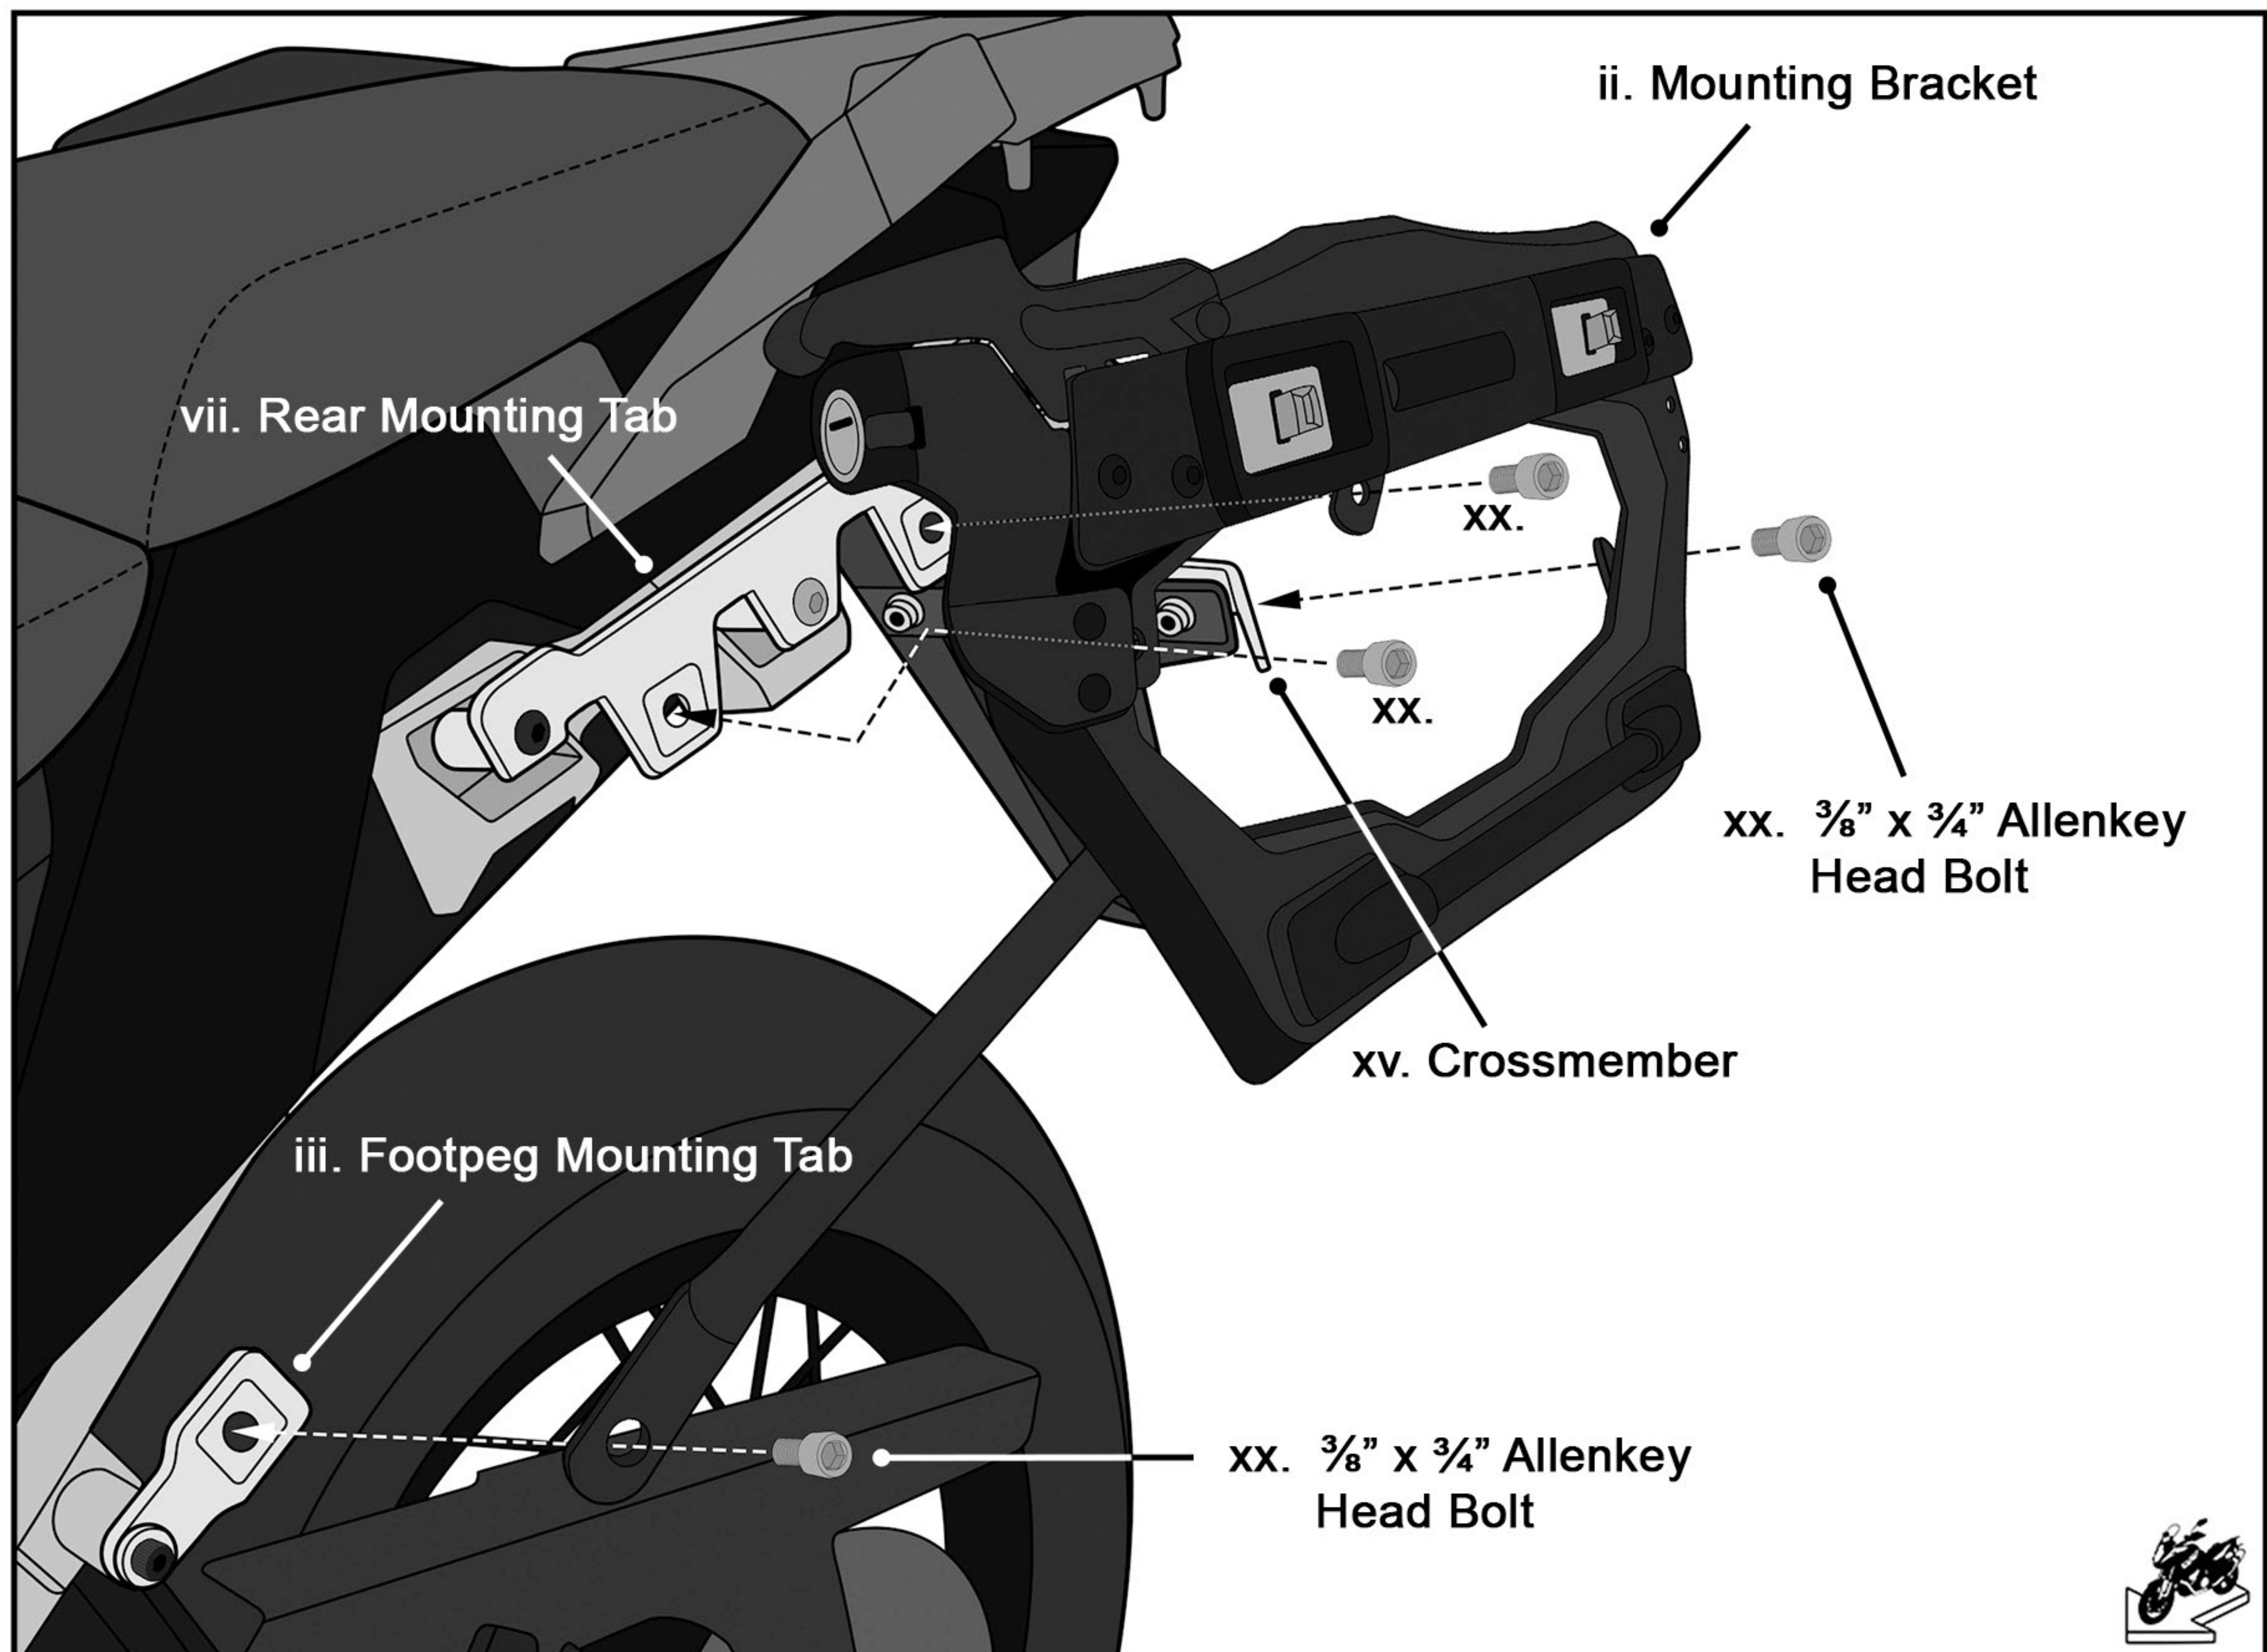


Fig 4. Attaching the mounting brackets

## **Step 4:**

Once all the hardware is in place without excess tension, tighten all the provided bolts and the OEM bolts.

Finally, attach the pannier bags to the mounting bracket. Pull the lever on the bracket and align the back of the pannier bags to the hooks.

Once in place push the lever down to lock the bag to the bracket. Repeat the same for the other side.

**Congratulations! You have successfully installed the Viking Apex Panniers and now you are ready to ride.**

### **Warnings!**

- Do not install if any of the mounting hardware is damaged or impaired.
- If you have any questions or concerns about the installation, call Viking Bags or consult your local mechanic
- Ensure no part of the bag constructs any of the moving parts of the bike
- Viking Bags is not liable for any damage or malfunctions caused to your motorcycle during the installation process
- Improper loading can cause vehicle handling problems leading to death or severe injury.
- Periodically check the bolts on your bike for tightness.