

# Solo Bag For Indian Scout Bobber:



## Parts:

- i Solo Bag (Right Side) with Bracket
- ii Hardware Kit
- iii 2 Socket Head Mounting Bolts
- iv 2 Washers

## Note:

The front mounting point is behind the liner inside the bag. It may help to remove the inner liner in order to access the front hole.


## Tools Needed:

- i Allen/Hex Key Set

## Instructions:

### Step 1

Remove & discard the 2 rear fender bolts on the right side.

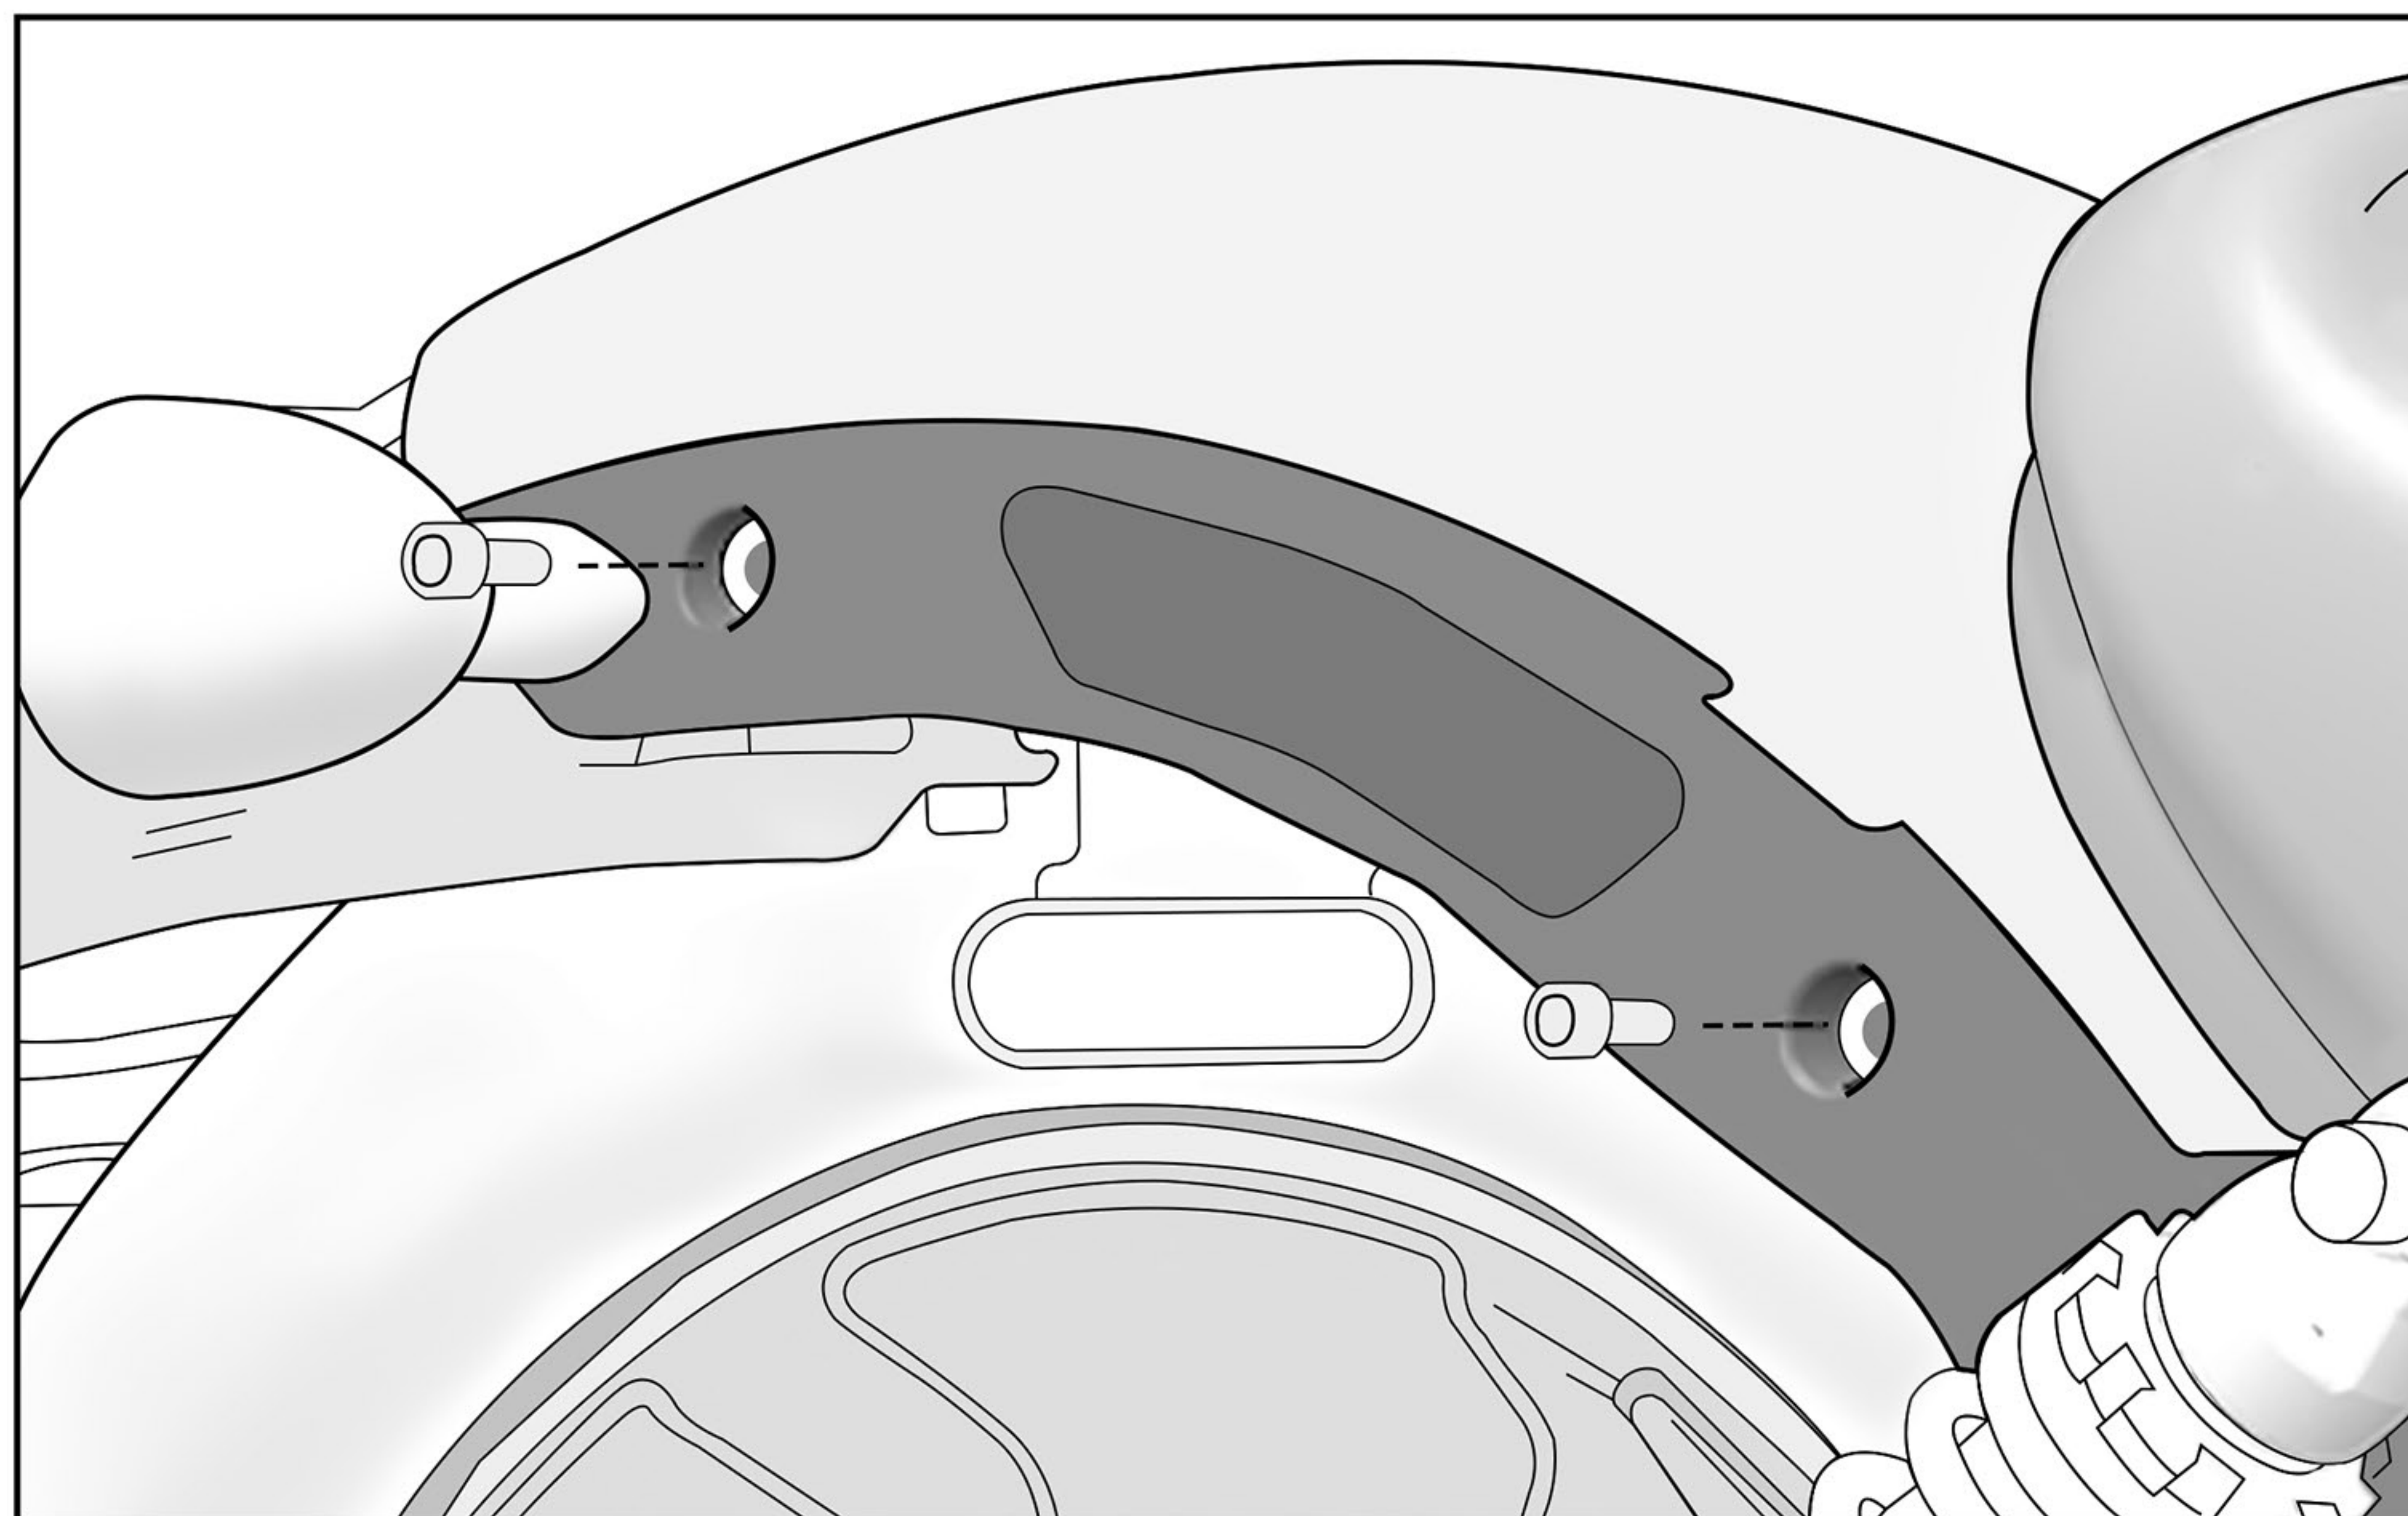


(Figure 1). Removing the 2 fender bolts (Right Side)

### Step 2

Hold the bag against the fender so that the holes in the attached bracket align with the fender holes (See figure 2).

### Step 3

Pass each of the 2 supplied fender bolts through the bracket holes and tighten to the fender (Torque: 18 ft-lbs or 24 Nm).

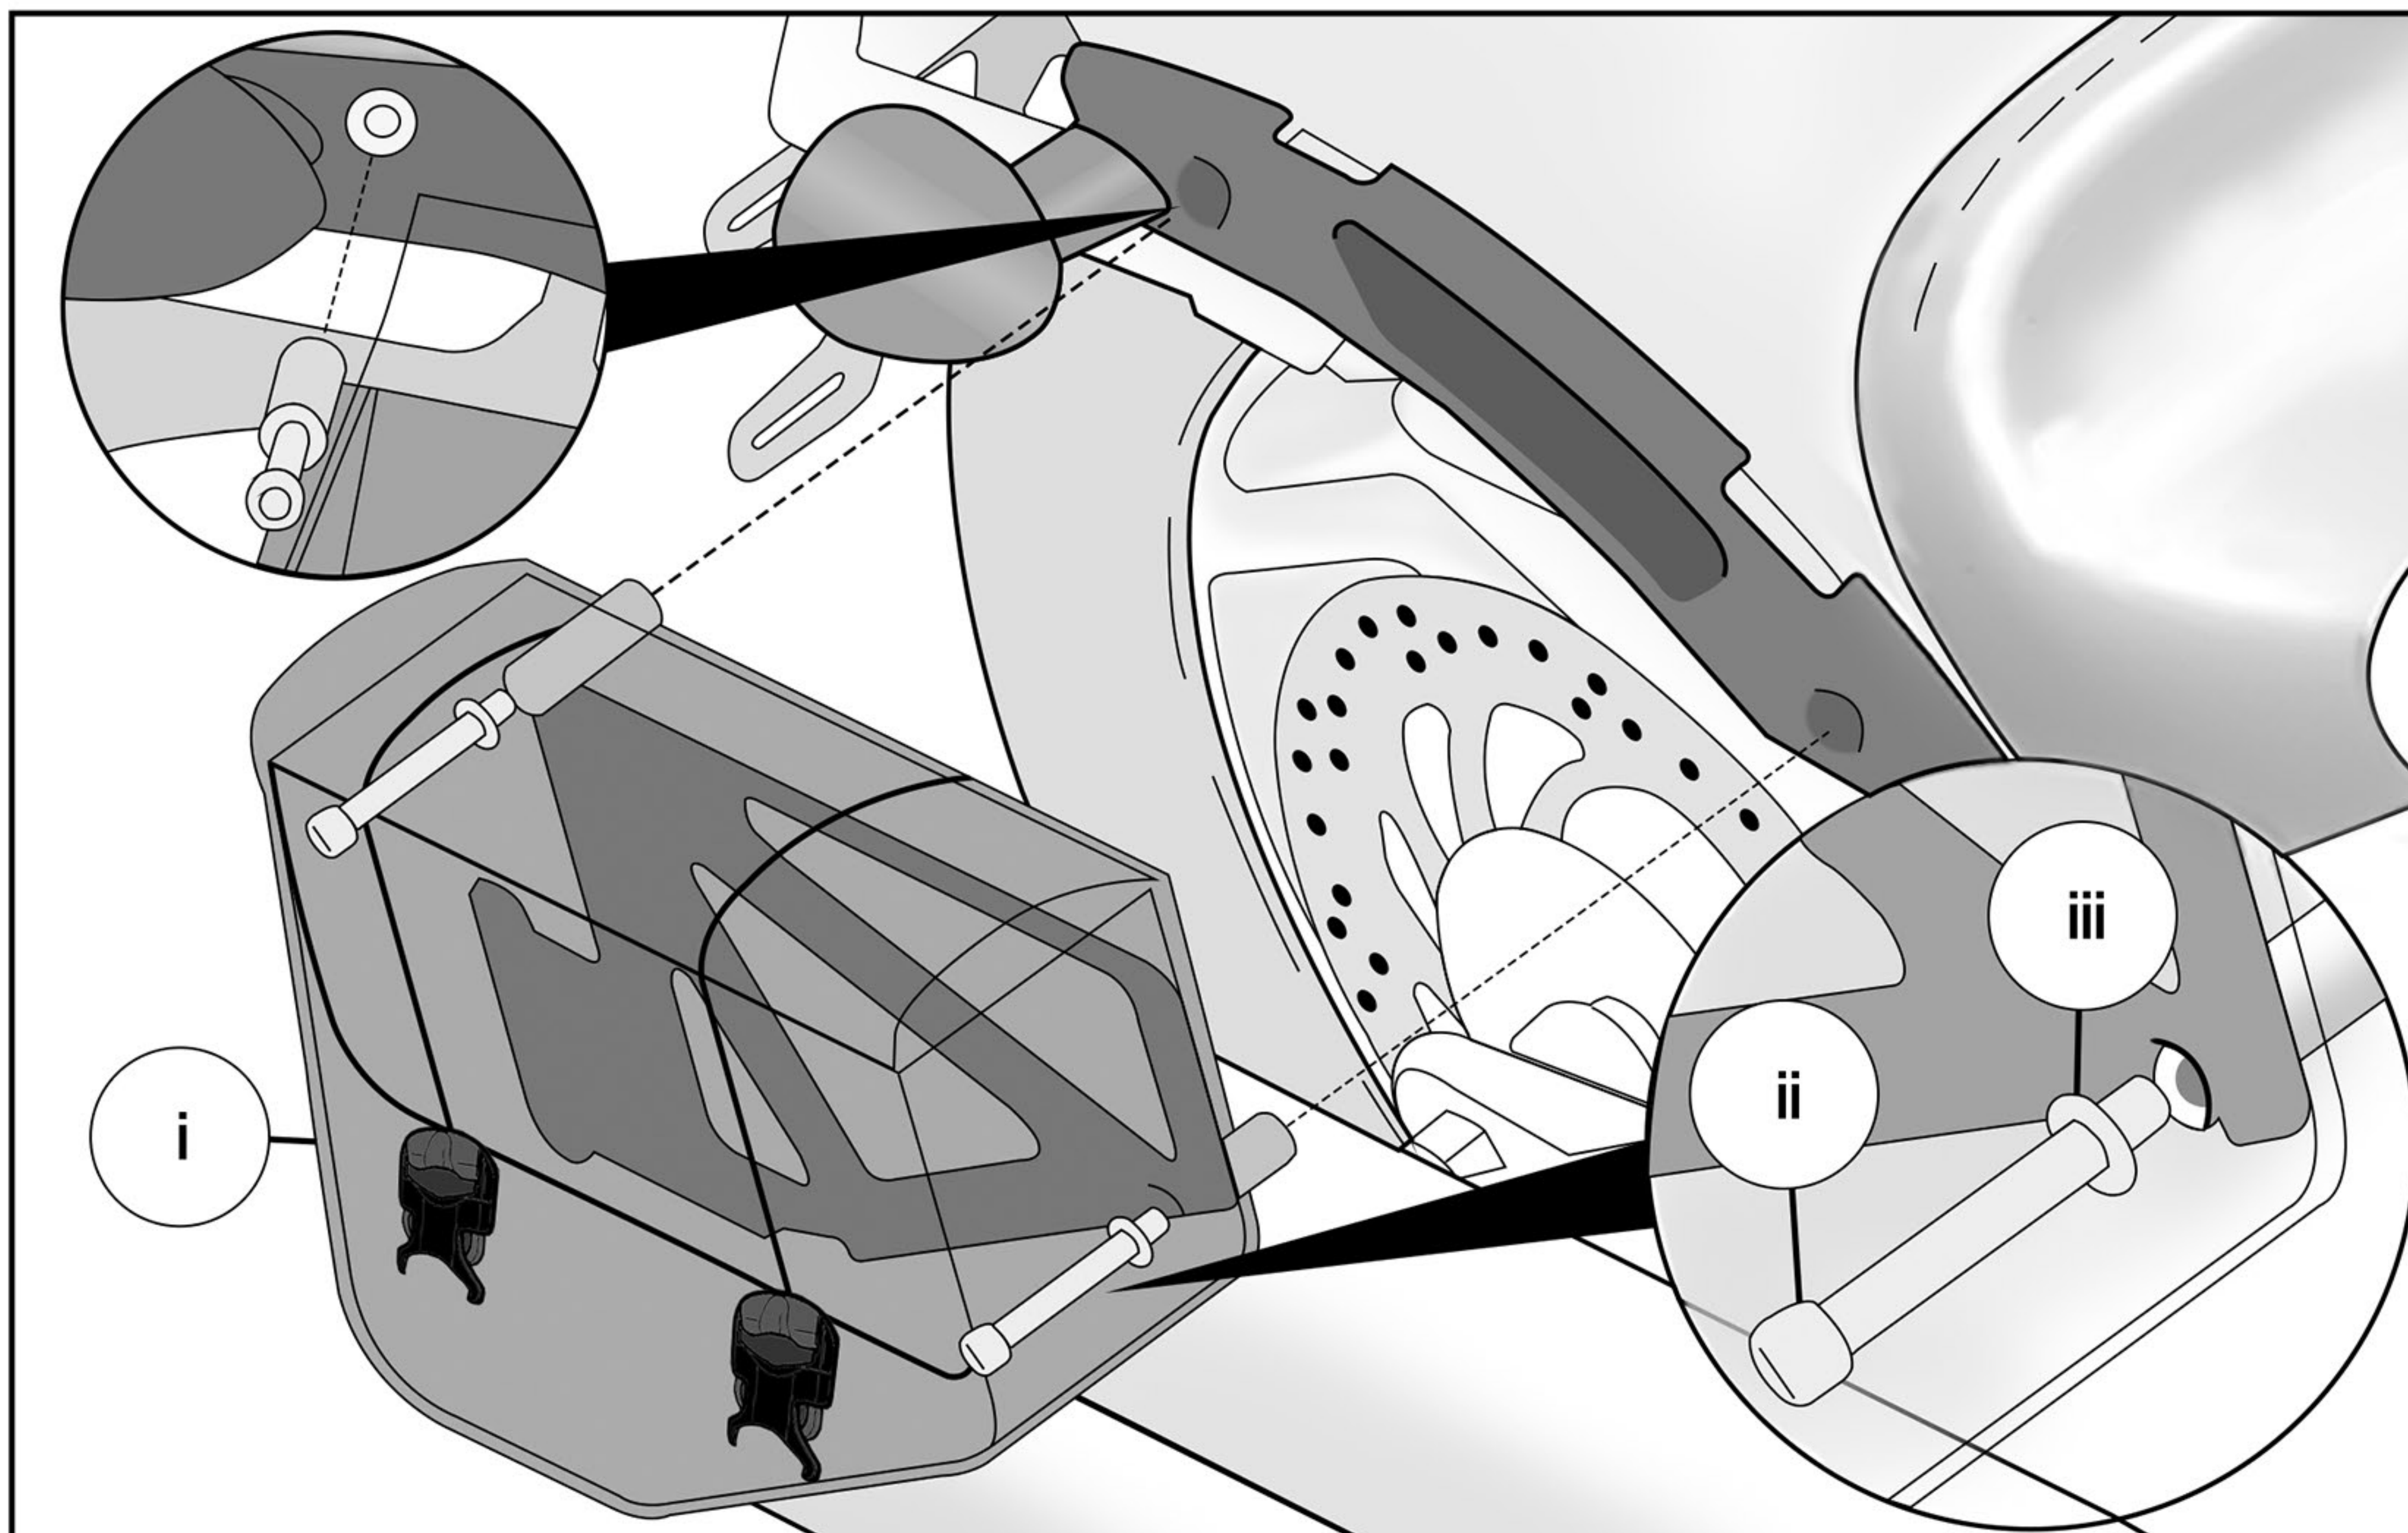

(Figure 2). Installing the bag to the fender

## Warnings !

- Do not install if unsure about any of the steps.
- In case of confusion, consult a certified mechanic.
- Viking Bags is not responsible for any damage or injury resulting from improper use of the product.
- No part of the product should obstruct the functioning of your bike.