

# Viking Tall Sissy Bar with Backrest Pad for Harley Sportster:



## Parts:

- |    |                             |    |
|----|-----------------------------|----|
| i  | Sissy bar with backrest pad | x1 |
| ii | Mounting Bolts              | x4 |

## Instructions:

### Step 1:


Clean your fender to prevent debris from getting stuck between the fender strut and sissy bar mounts.

### Step 2:

Remove all 4 OEM fender strut bolts (2 from each side)

### Step 3:

Hold the sissy bar so that the holes in the sissy bar mounts align with the fender holes on your bike.

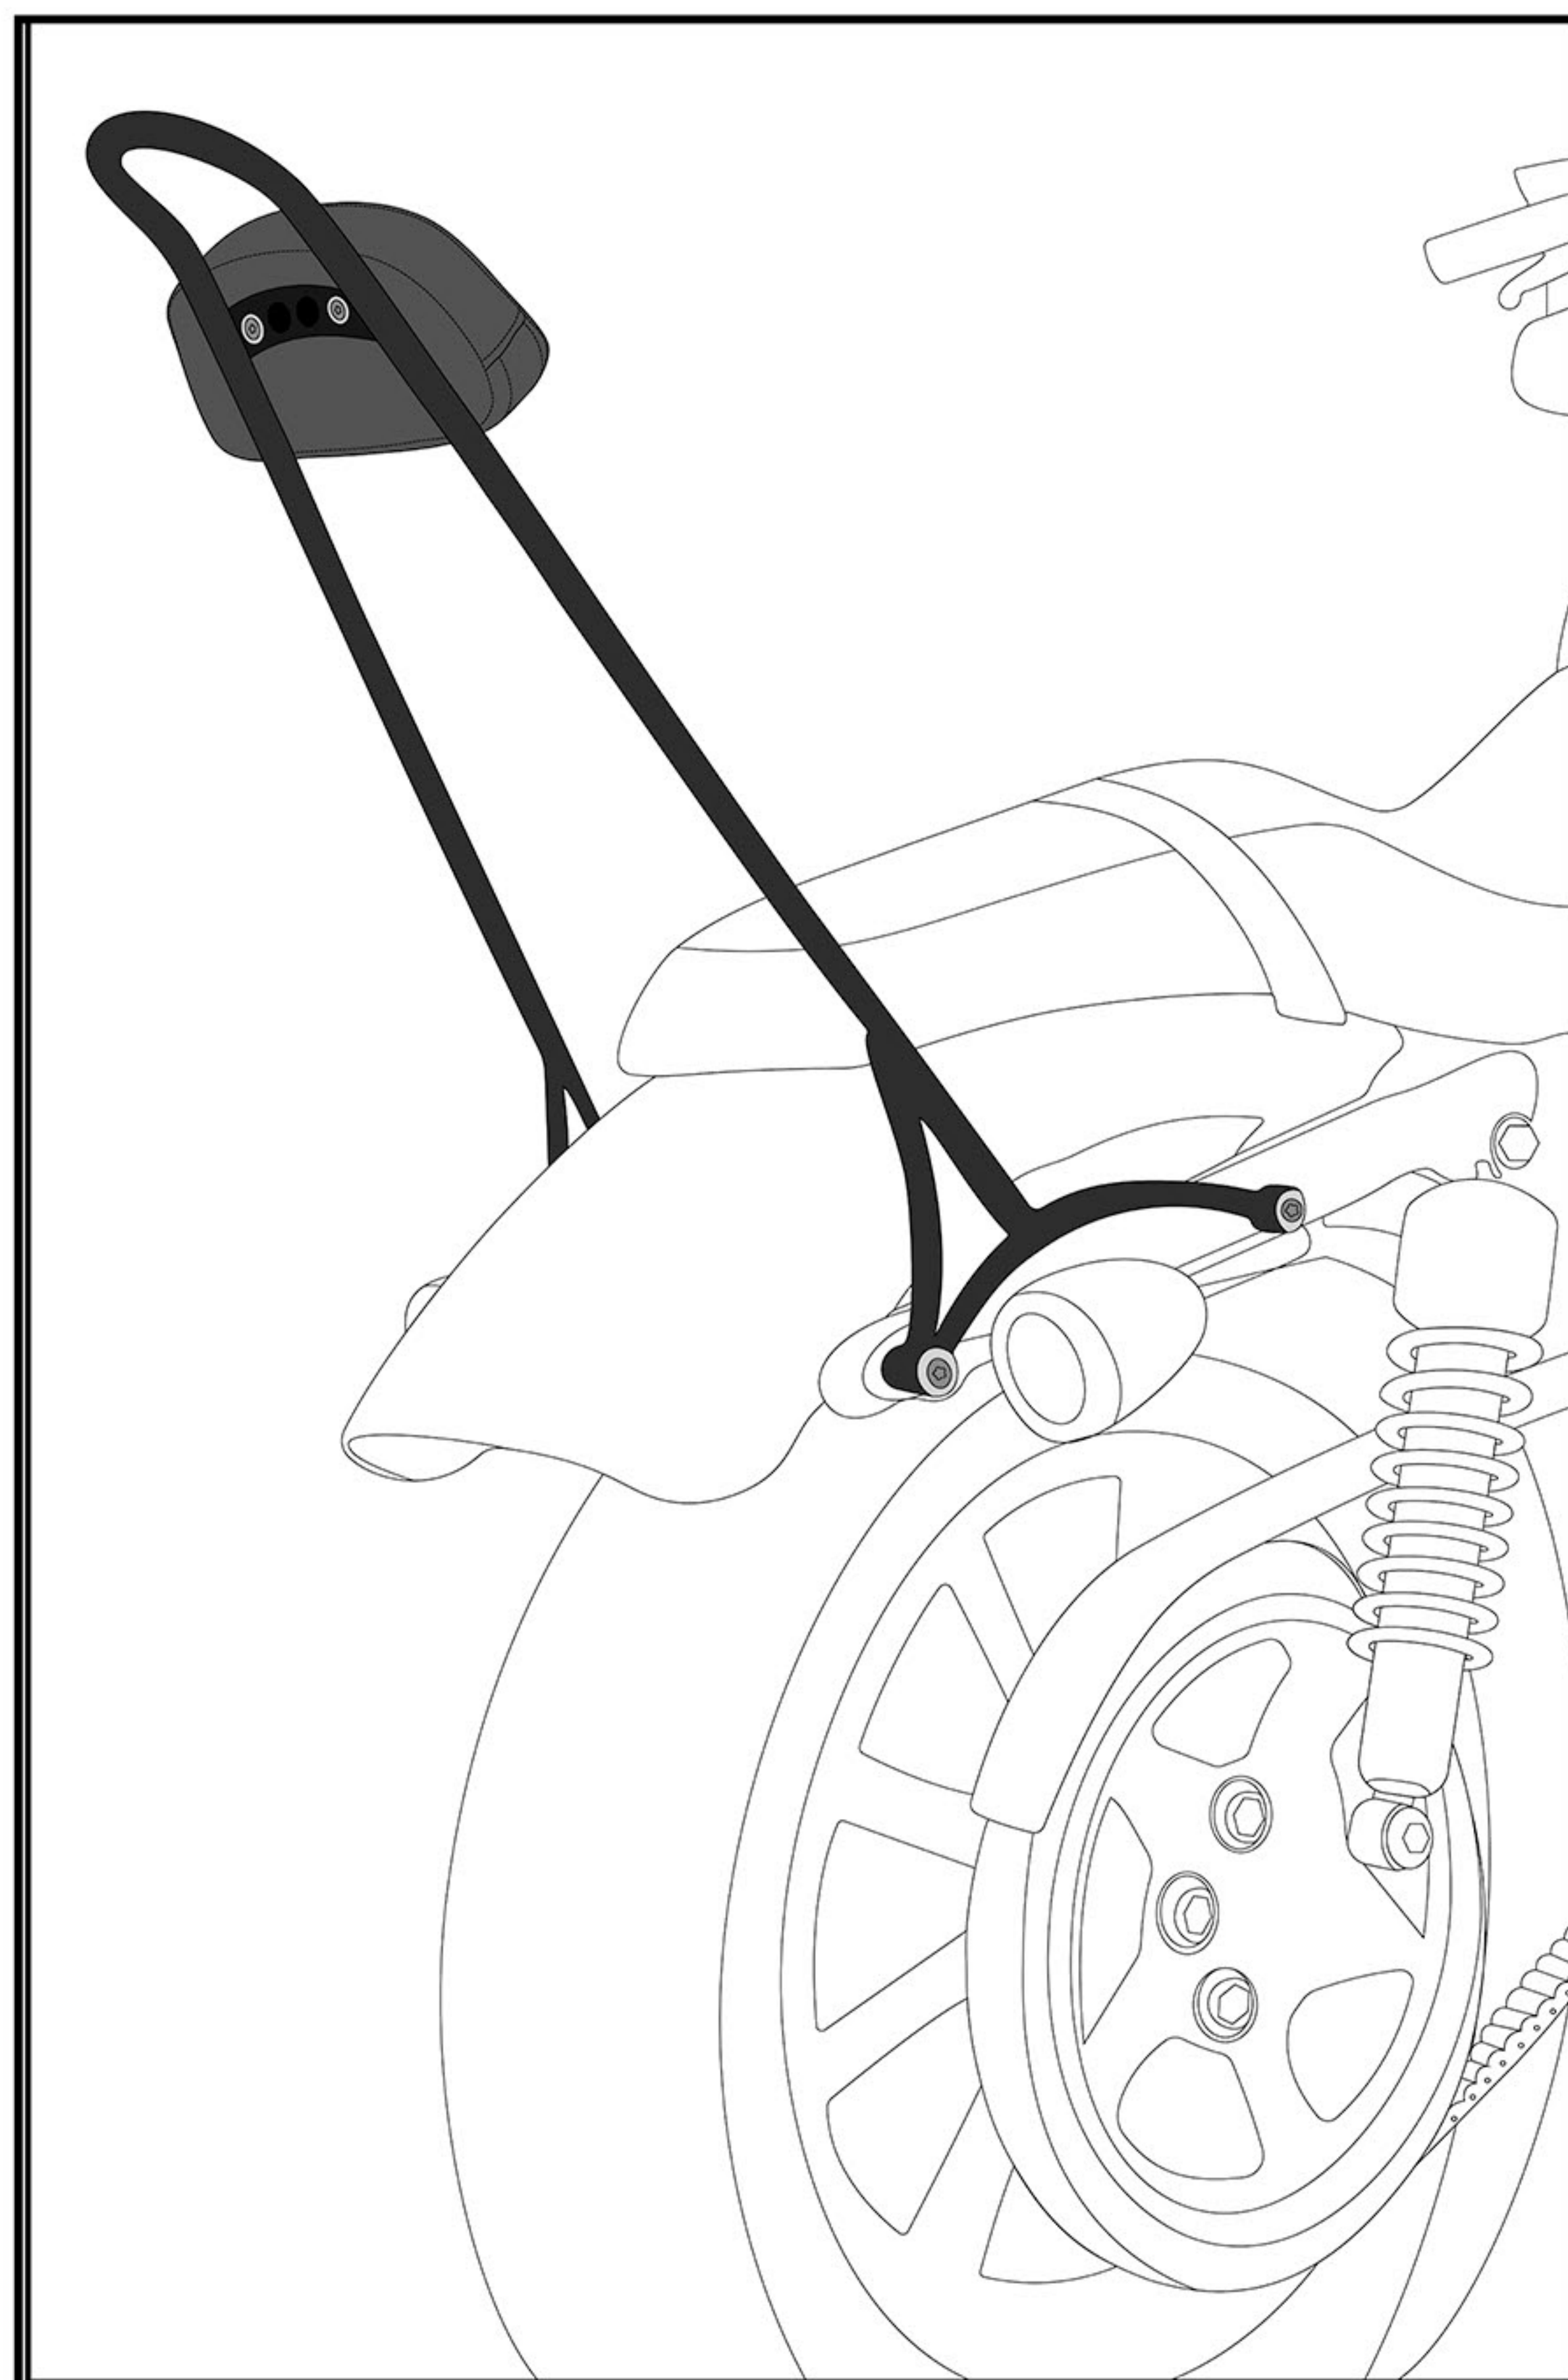

(Fig A) Sissy Bar Installed on Sportster

### Step 4:

With the holes aligned, insert included mounting bolts through the sissy bar mounting holes and then through the fender holes.

## Step 5:

Tighten all 4 bolts.

### Warnings!

- In case you need more clarification about your ability to install the saddlebags securely, please seek assistance from a qualified mechanic.
- Avoid using any mounting part that is impaired or not working correctly.
- Ensure no part of the bag obstructs any of the bike's moving parts.
- Viking Bags is not responsible for any damage or injury resulting from improper product use.
- Do not install if any of the mounting straps are damaged or impaired.
- Regularly check bolts to ensure they are firmly in place.