

Viking Premium Backrest Pad for Harley Touring Motorcycle:



Parts Included:

- i Viking Premium Backrest Pad

Installing the Backrest:

Step 1

Unscrew the 3 flange locknuts from the back of the Backrest.

Step 2


Align the 3 hex screws on the backrest with the tour pack and use a marker to mark the points to drill.

Step 3

Drill the 3 points using a 3/8-inch drill bit.

Step 3

Insert the 3 hex screws through each of the holes of the Tour Pack from the outside of the Tour Pack. Install the locknuts from inside the Tour Pack.

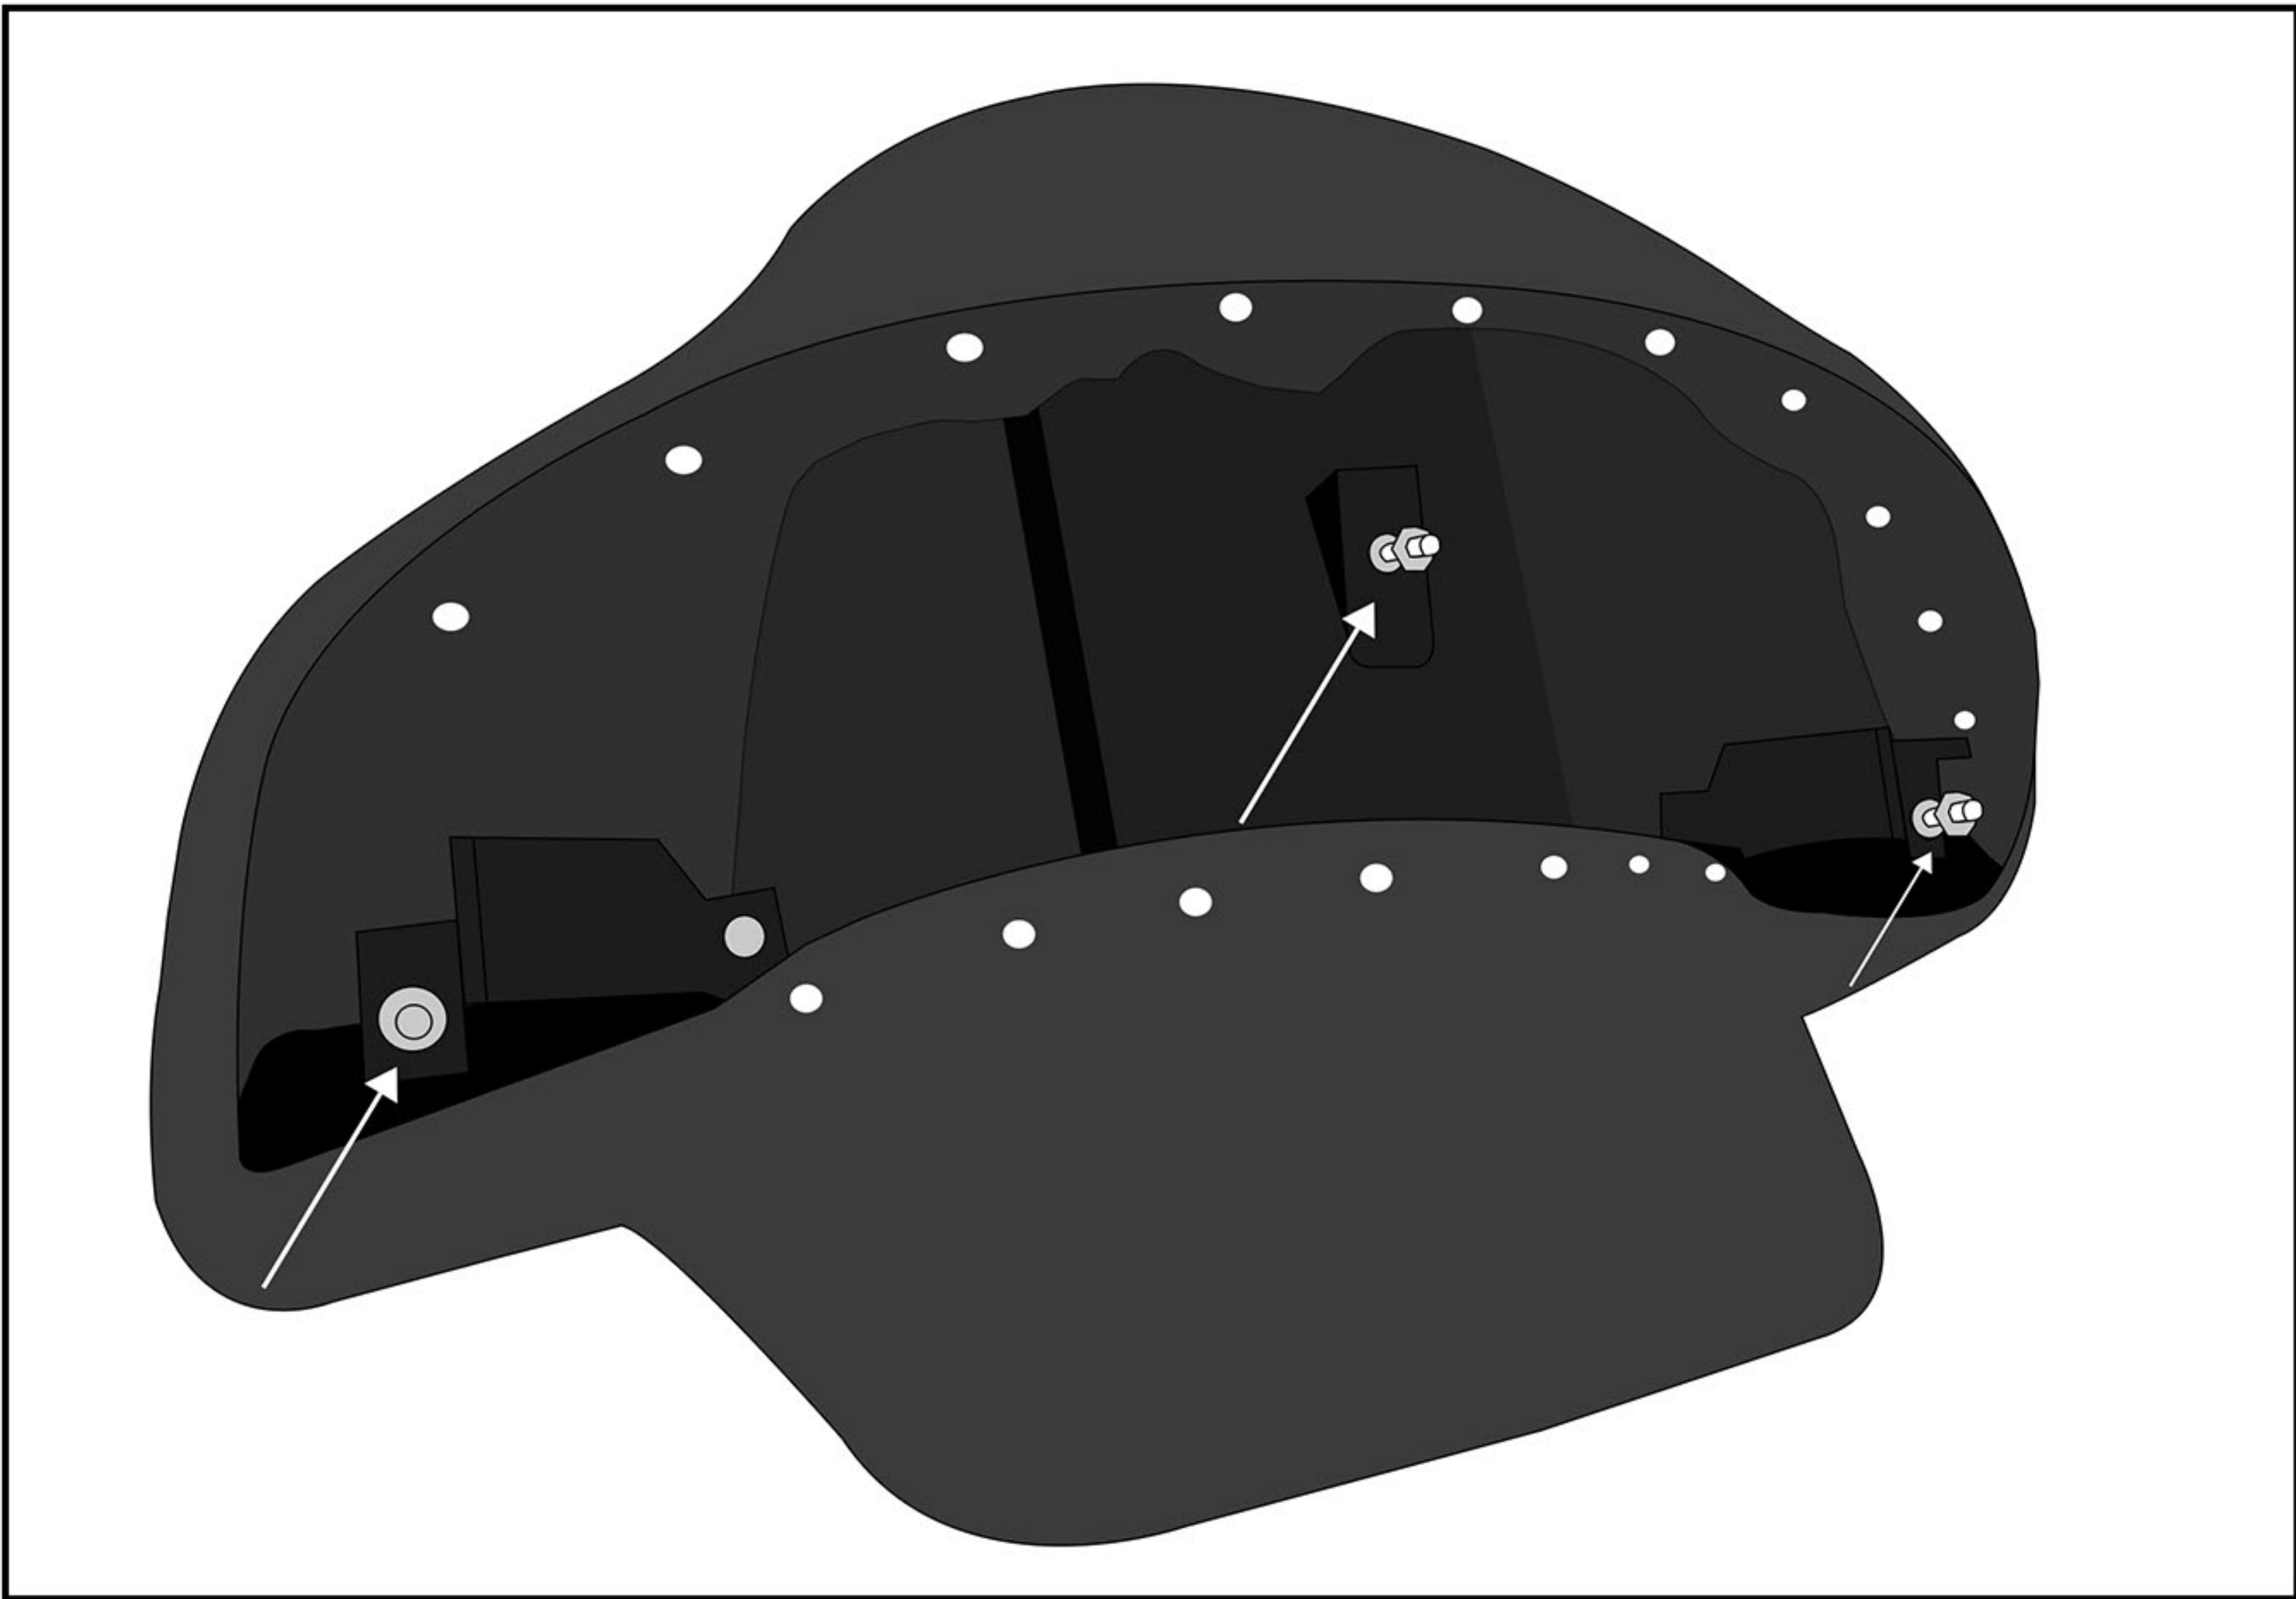

(Figure 1). Align these 3 hex screws with the drilled
holes on the Tour Pack

Step 4

Close the Tour Pack cover and check for proper backrest alignment.

**Congratulations, your Viking Premium Backrest Pad are installed
and you are ready to ride!**

Warnings !

- Avoid using any mounting part that is impaired or not working properly.
- Ensure no part of the bag obstructs any of the moving parts of the bike.
- In case you are unsure about your ability to install the saddlebags securely, please seek assistance from a qualified mechanic.
- Viking Bags is not responsible for any damage or injury resulting from improper use of the product.