

Viking Premium Small Backrest Pad for Harley Touring Motorcycle



Parts:

- i Viking Premium Small Backrest Pad

Instructions:

Step 1

Unscrew the 3 flange locknuts from the back of the Backrest

Step 2


Align the 3 hex screws on the backrest with the tour pack and use a marker to mark the points to drill.

Step 3

Drill the 3 points using a $\frac{3}{8}$ -inch drill bit

Step 4

Insert the 3 hex screws through each of the holes of the Tour Pack from the outside of the Tour Pack. Install the locknuts from inside the Tour Pack.

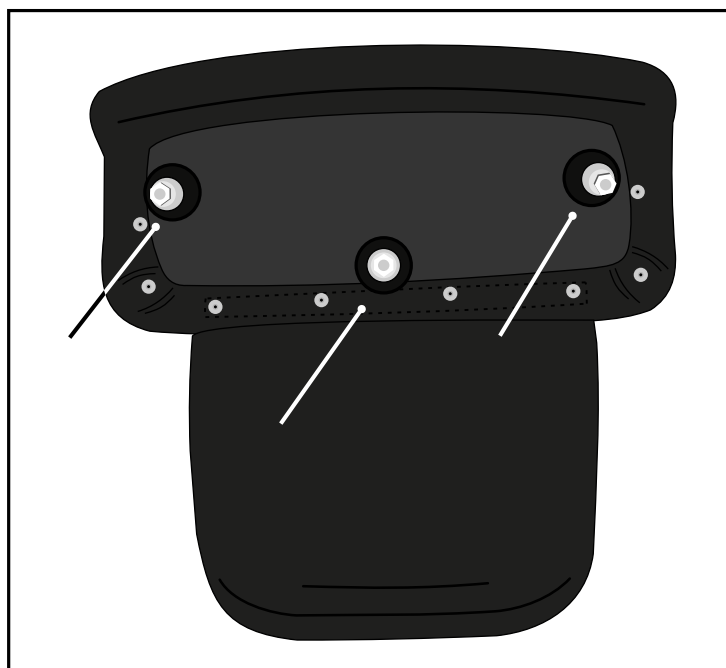

(Fig 1) Align these 3 hex screws with the drilled holes on the Tour Pack

Step 5

Close the Tour Pack cover and check for proper backrest alignment

**Congratulations! You have finished installing the
Viking Premium Small Backrest Pad for Harley Touring
Motorcycle and are ready to ride!**

Warnings !

- Do not exceed the weight capacity of the Tour Pack. Overweight can cause loss of control, serious injury, or death in severe cases.
- Avoid using any mounting part that is impaired or not working correctly.
- Ensure no part of the bag obstructs any of the bike's moving parts.
- In case you need more clarification about your ability to install the saddlebags securely, please seek assistance from a qualified mechanic.
- Viking Bags is not responsible for any damage or injury resulting from improper product use.