







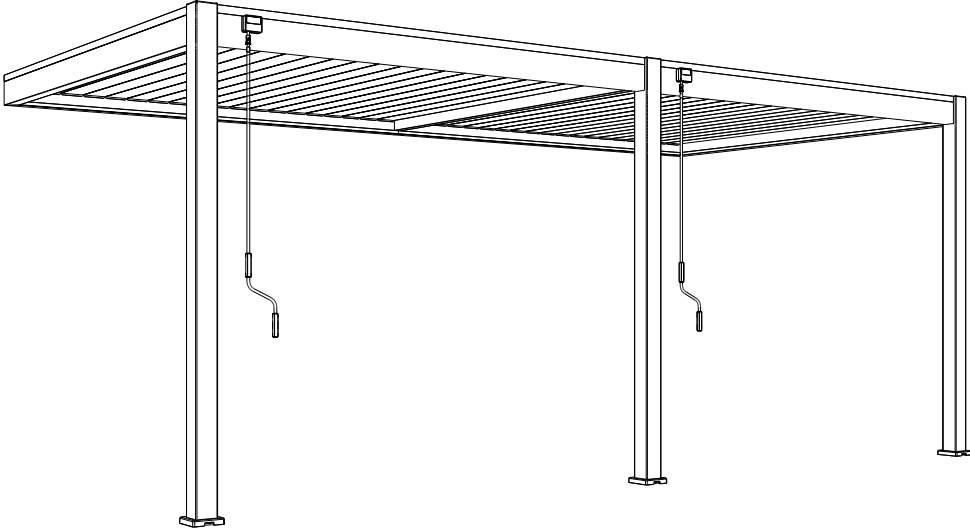










































Installation Guide for Pergola 3m x 6m



Carton	RET	QTY	REF	QTY	REF	QTY
1/6	AO	2	AO-1	1	IO	3
	JO	3	TO	12	XO-1	12
2/6	BO-1	2	BO-2	1	BO-3	1
	CO-1	1	CO-2	1	DO	2
	DO-1	1	DO-2	1	DO-3	1
	DO-4	1	EO	1	FO	2
	LO-2	1	LO-3	1	HO	1
	NO	2	OO	2	PO	2
	QO	18	QO-1	2	RO	12
	SO	76	TO-1	16	UO	74
	VO	38	XO	74	WO-1	18
	YO	1	ZO-1	1	ZO-2	1
	ZO-3	1	ZO-4	1	ZO-5	1
	ZO-6	1	ZO-7	1	ZO-8	1
3/6	GO	8	KO	2	LO	36
	LO-1	38	MO	74	WO	308
4/6	GO	10				
5/6	GO	10				
6/6	GO	10				

REF	PICTURE	QTY
A0		2PCS
A0-1		1PCS
B0-1		2PCS
B0-2		1PCS
B0-3		1PCS
CO-1		1PCS
CO-2		1PCS
DO		2PCS
DO-1		1PCS
DO-2		1PCS
DO-3		1PCS
DO-4		1PCS
EO		1PCS
FO		2PCS
GO		38PCS
HO		2PCS



REF	PICTURE	QYT
IO		3PCS
JO		3PCS
KO		2PCS
LO		36PCS
LO-1		38PCS
LO-2		2PCS
LO-3		1PCS
MO		74PCS
NO		2PCS
OO		2PCS
PO		2PCS
QO		12PCS
QO-1		2PCS
RO		12PCS
SO		76PCS
TO	 10×80	12PCS


REF	PICTURE	QYT
TO-1	 8×100	16PCS
UO	 lock nut	74PCS
VO		38PCS
WO	 4×16	308PCS
WO-1	 5×19	18PCS
XO	 6×40	74PCS
XO-1	 6×35	12PCS
YO	 6×45	6PCS
ZO-1	 4mm	1PCS
ZO-2	 4mm	1PCS
ZO-3	 6mm	1PCS
ZO-4	 6mm	1PCS
ZO-5	 10mm	1PCS
ZO-6	 T20	1PCS
ZO-7		1PCS
ZO-8		1PCS









ATTENTION!!!



Please open the louvers to vertical in winter and snowing weather to protect your pergola!



Tools Required for Installation


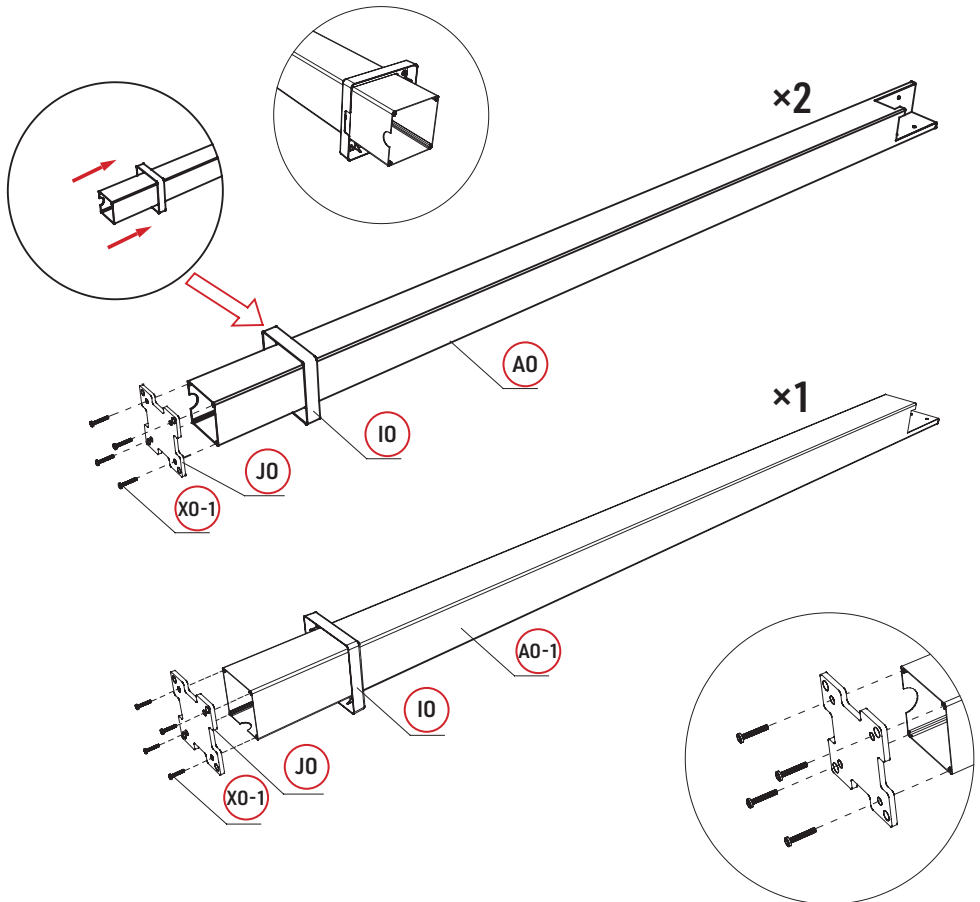





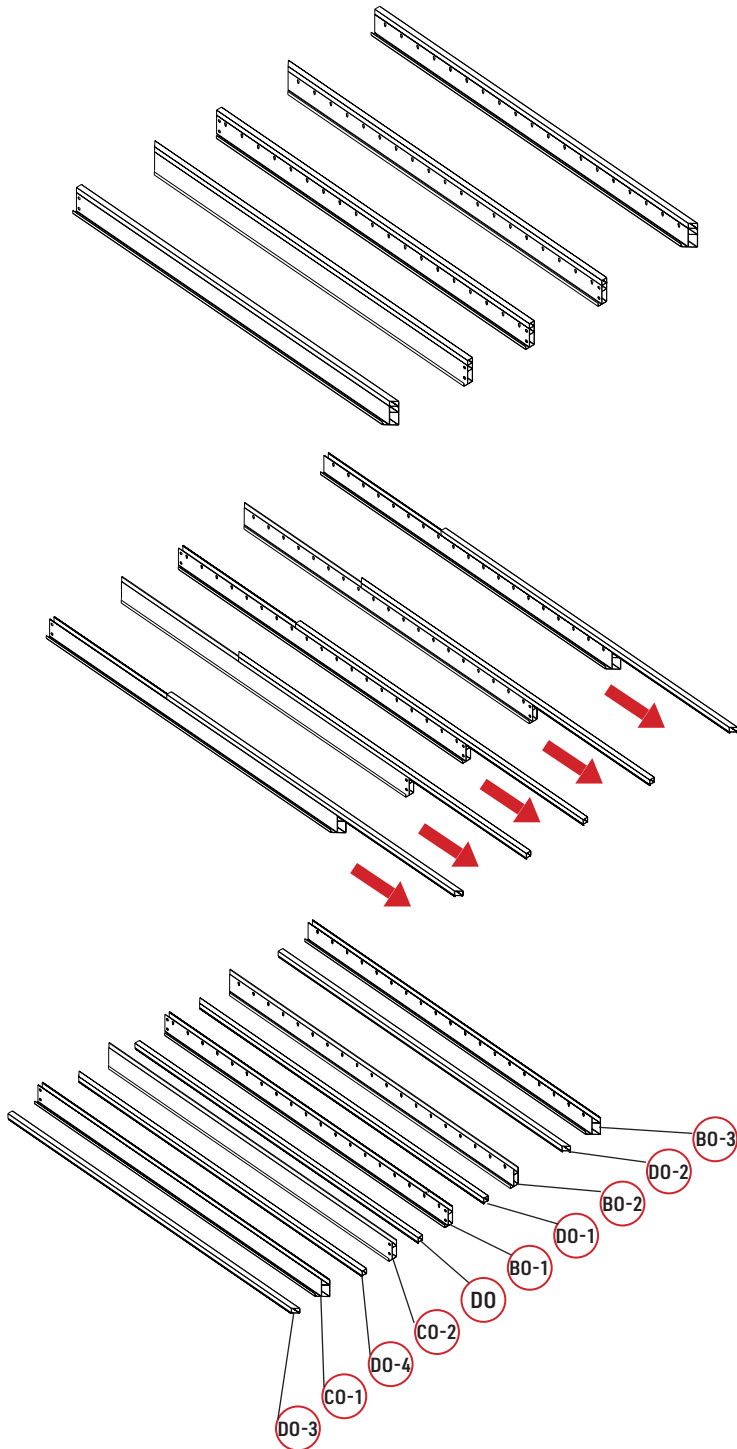


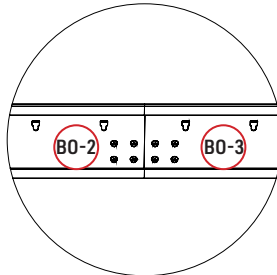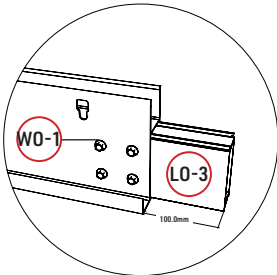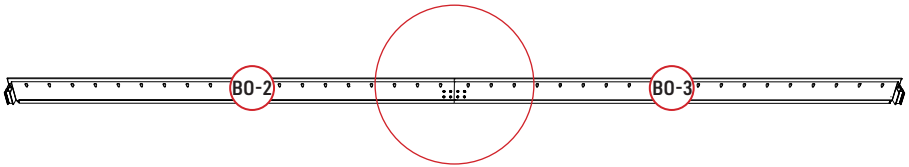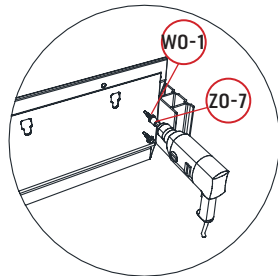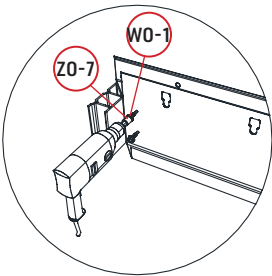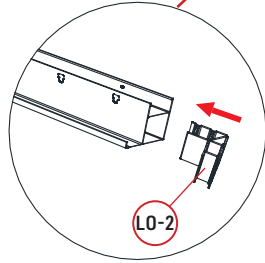
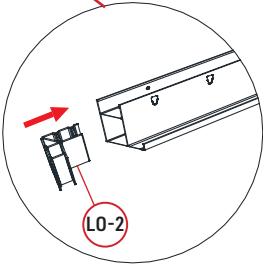
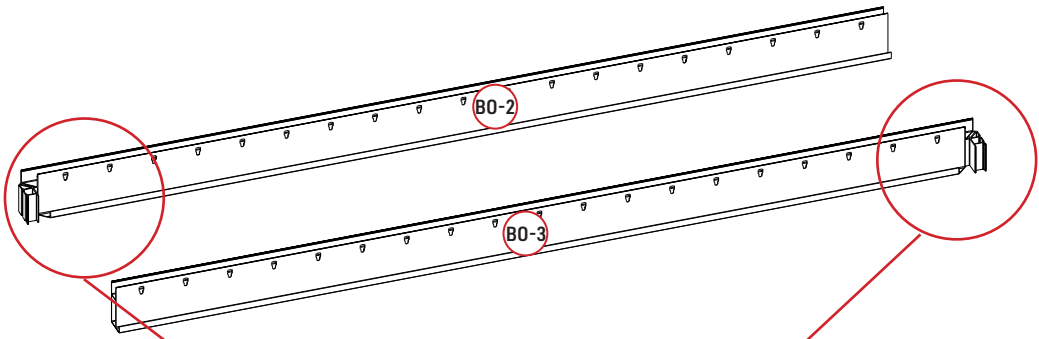



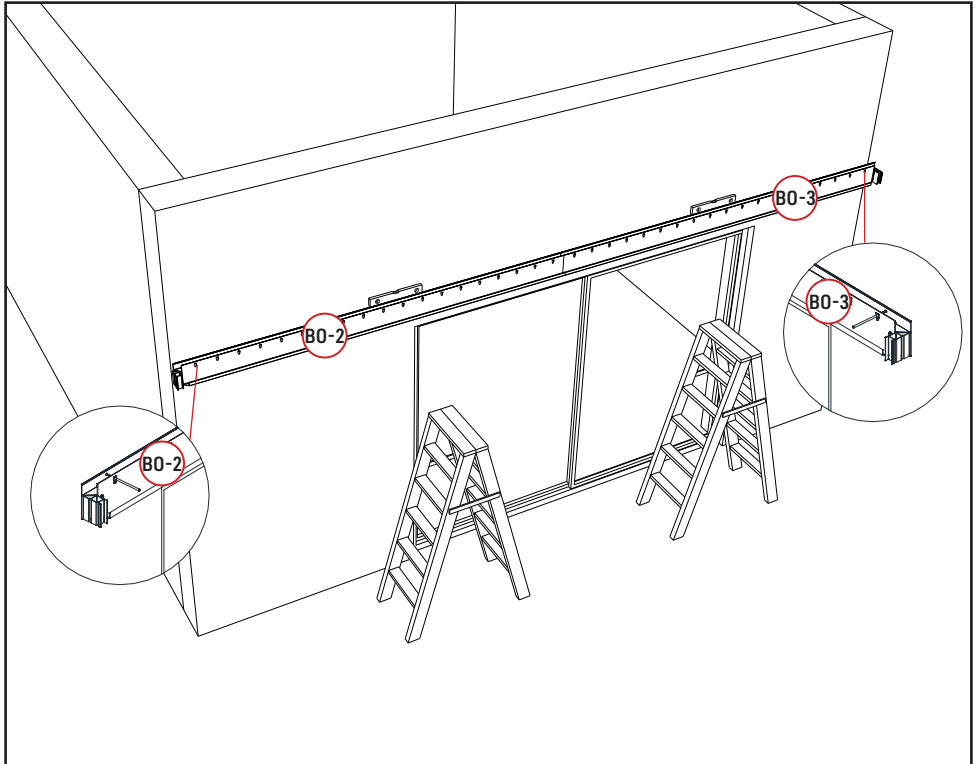
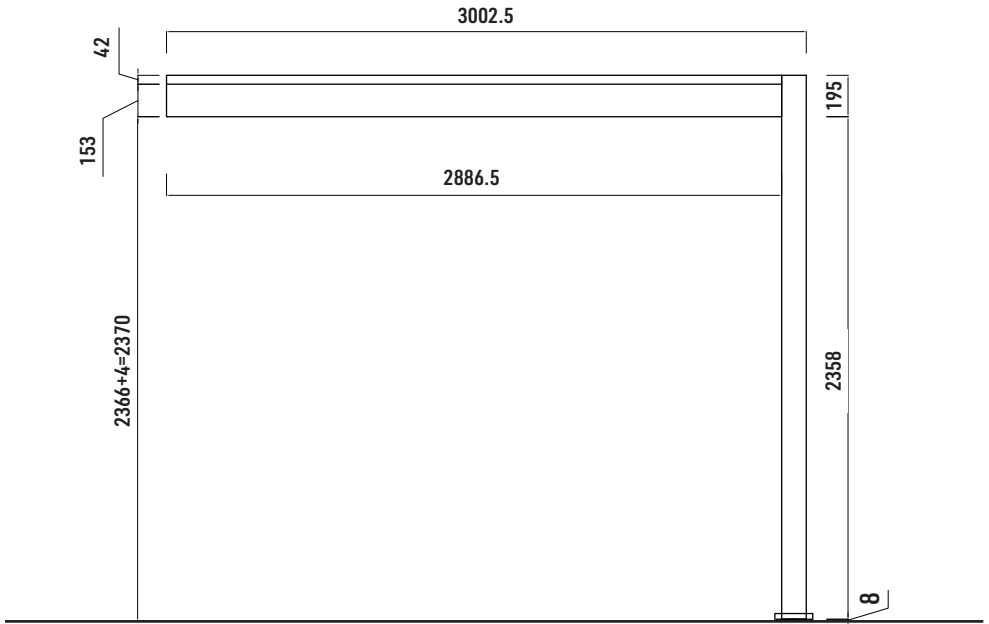



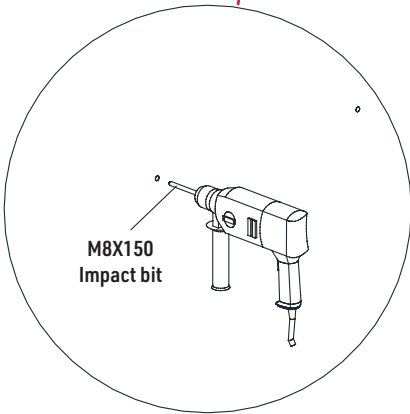
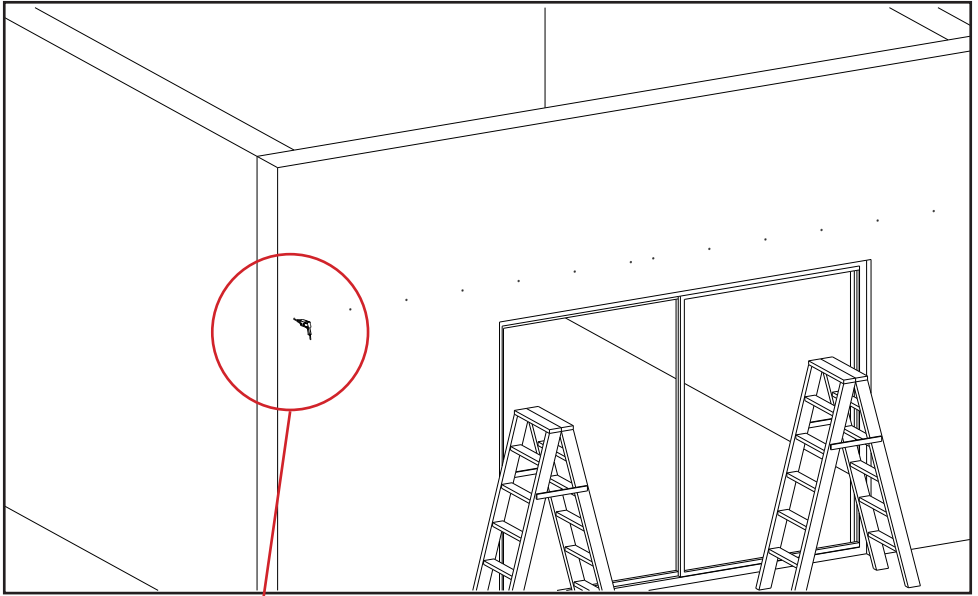


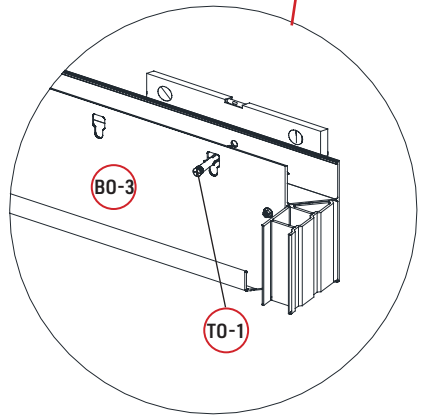
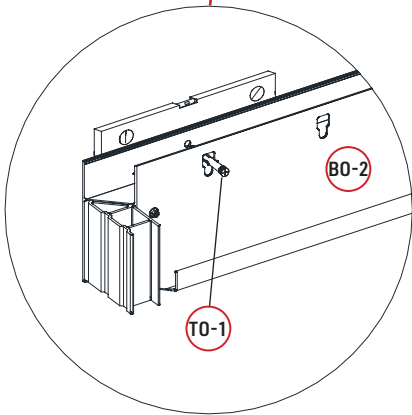
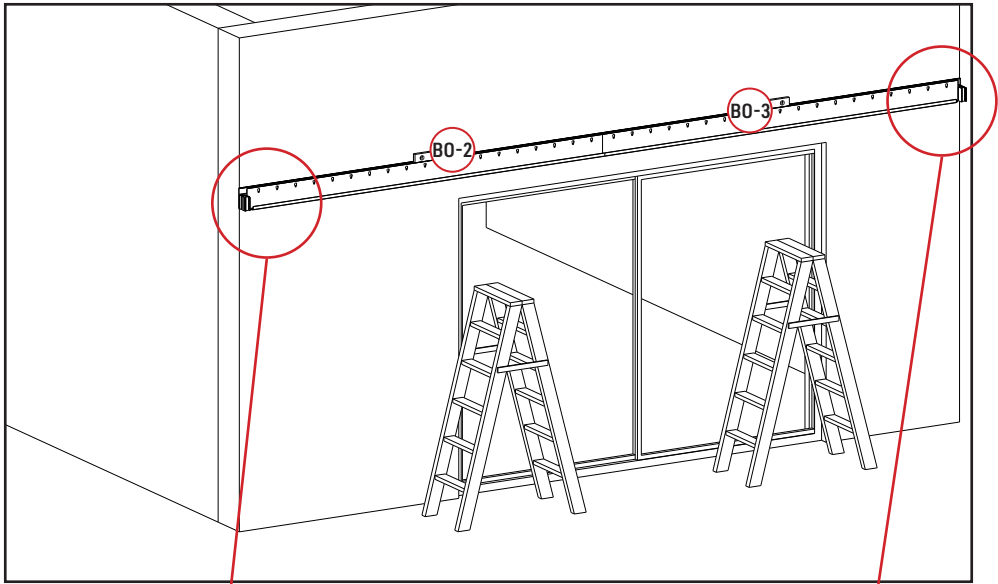





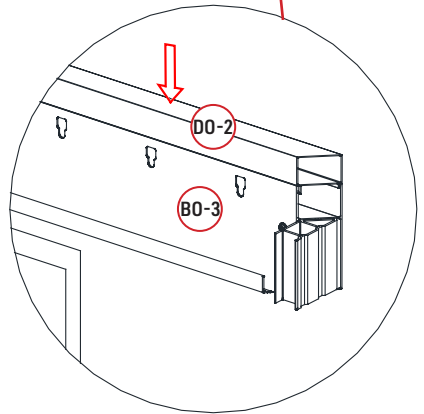
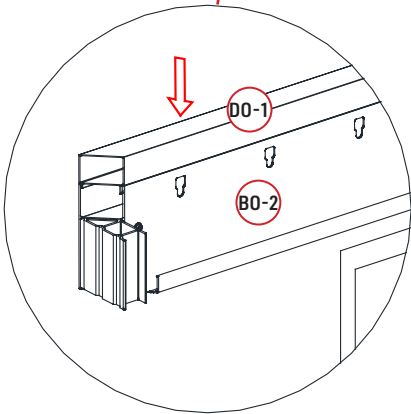
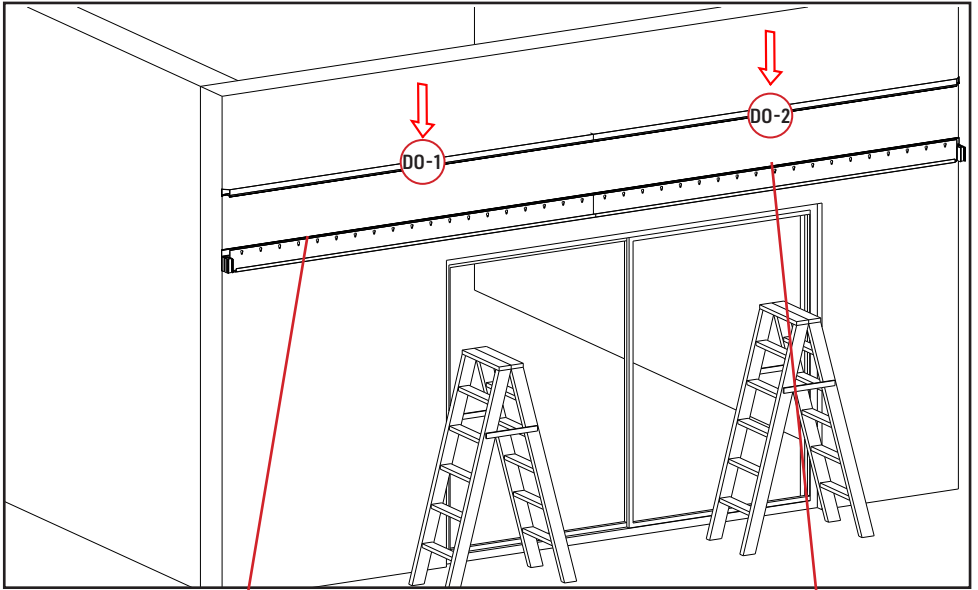


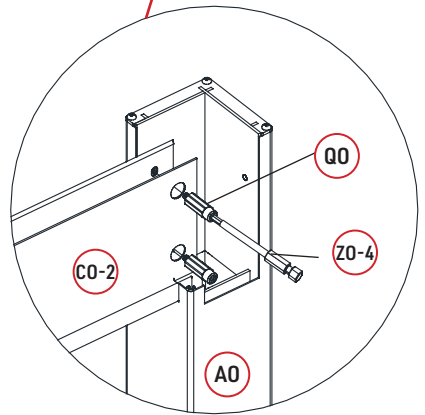
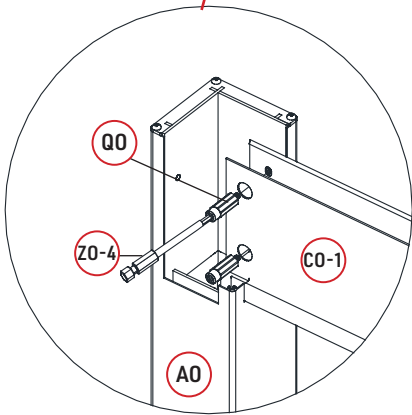
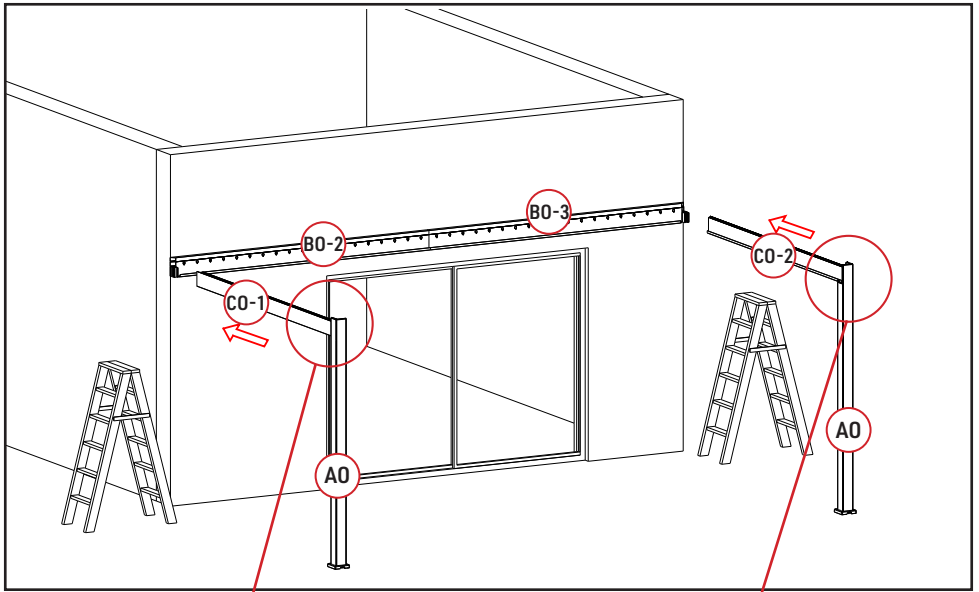


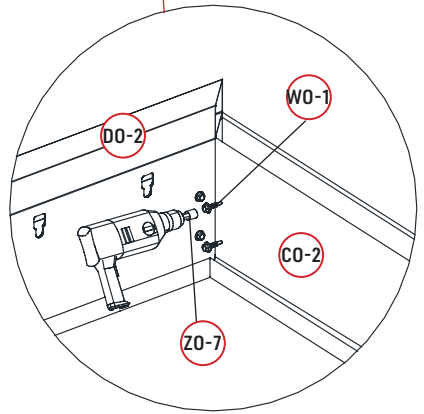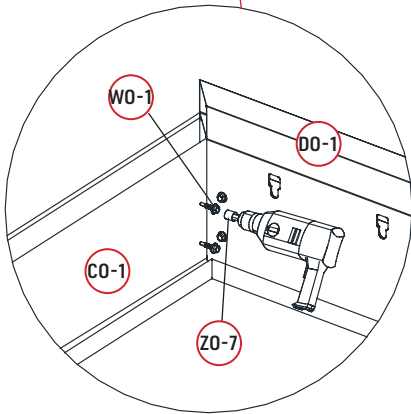
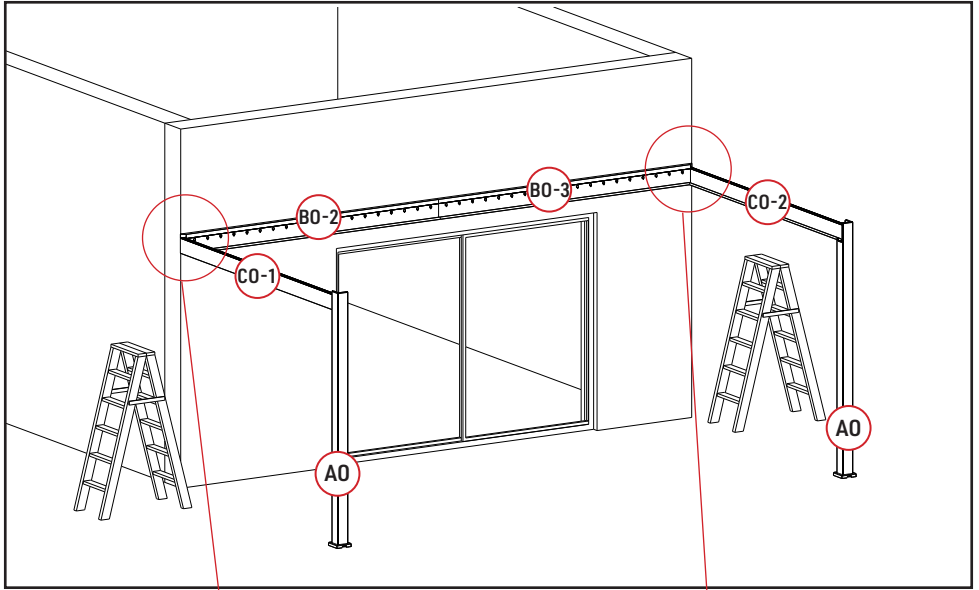


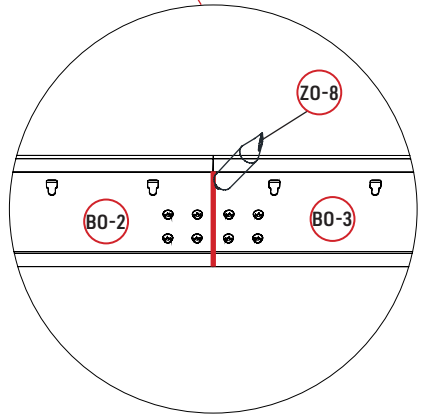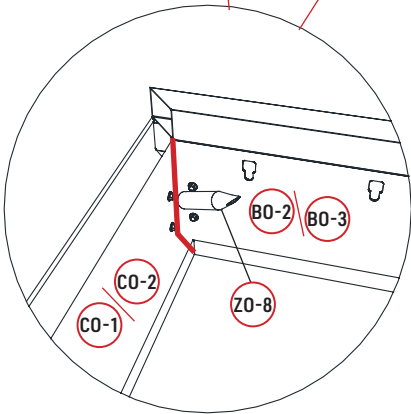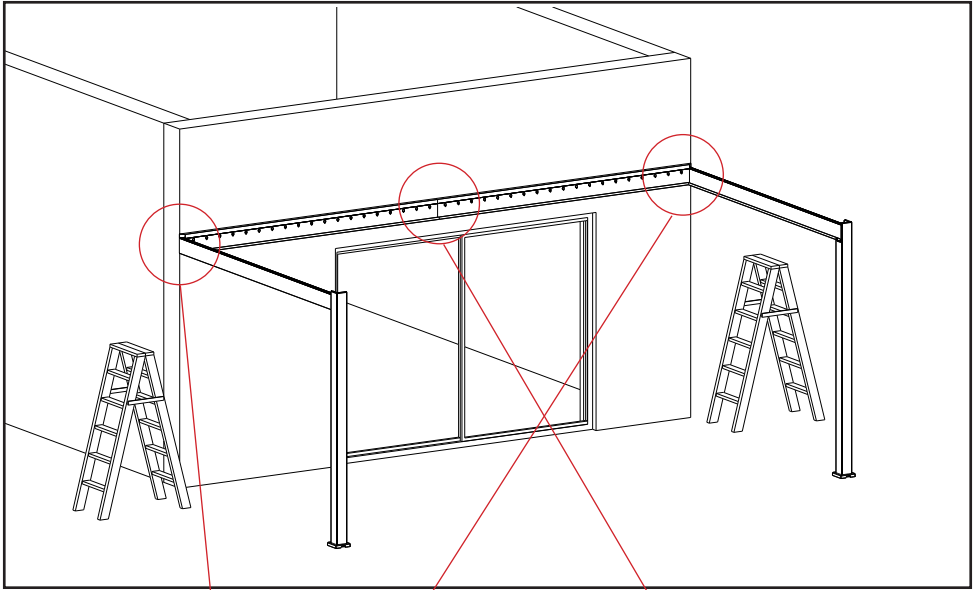

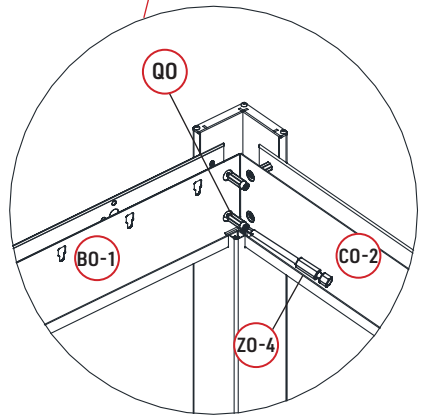
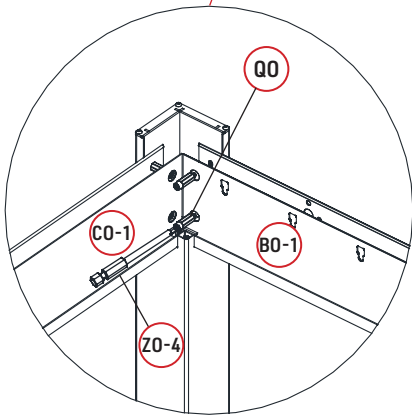
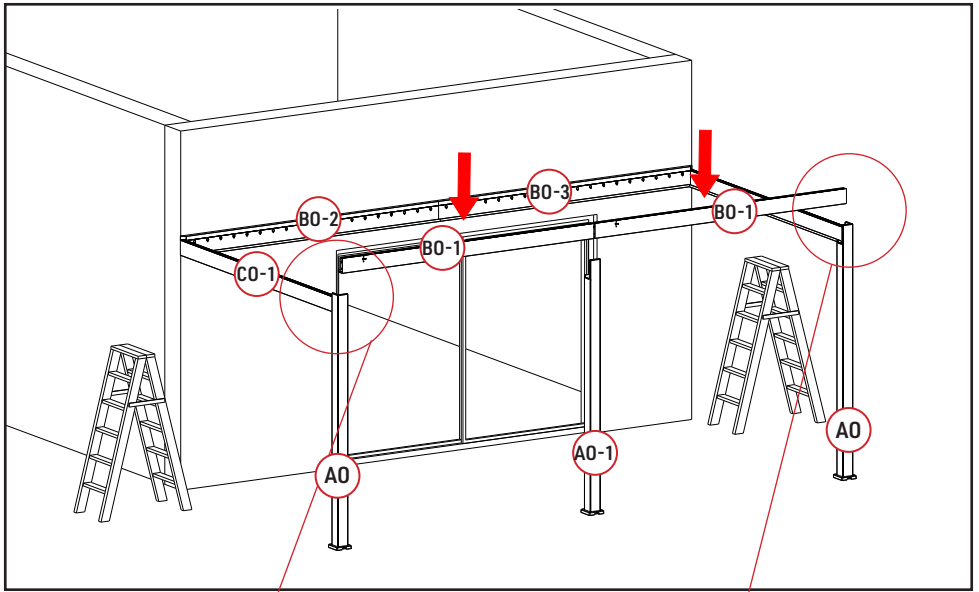


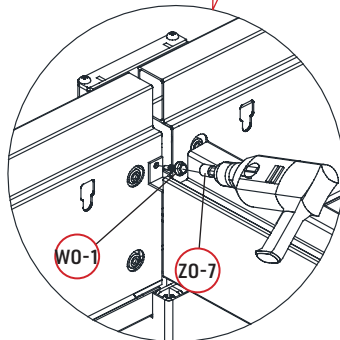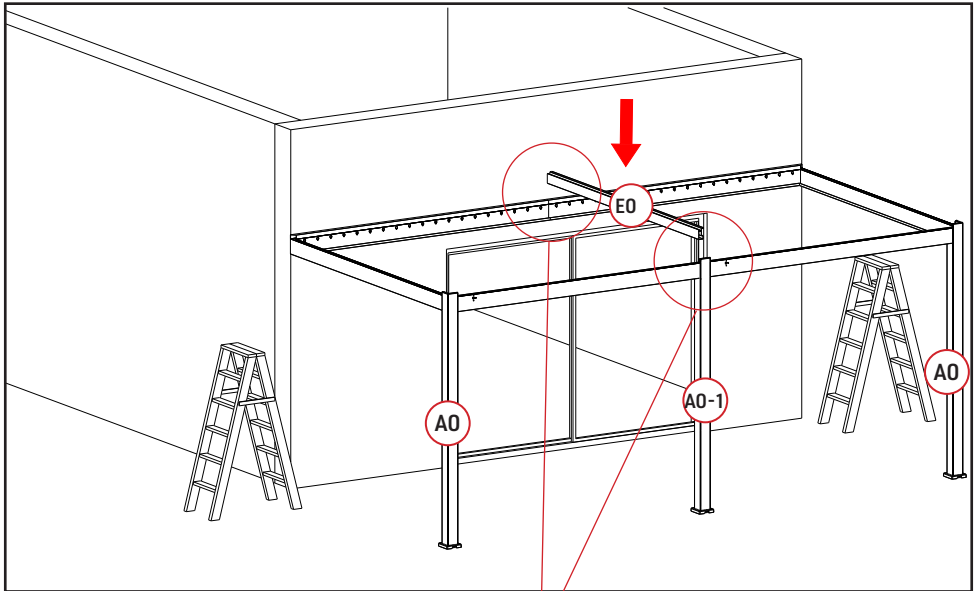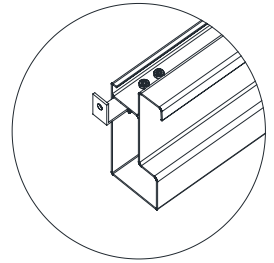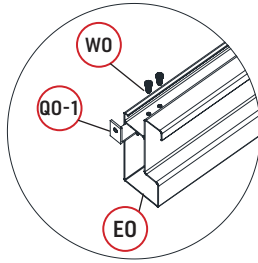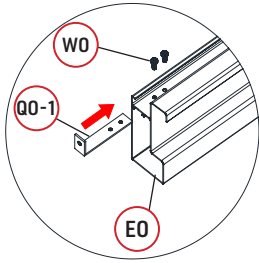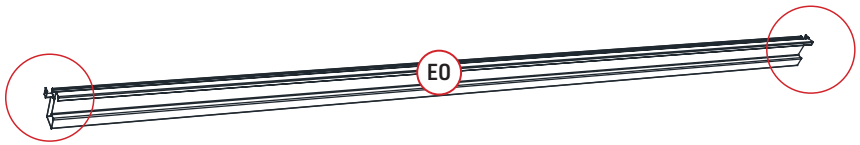

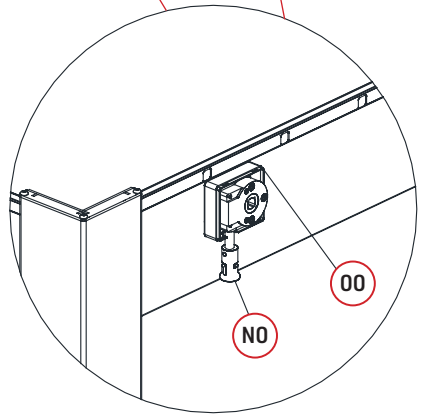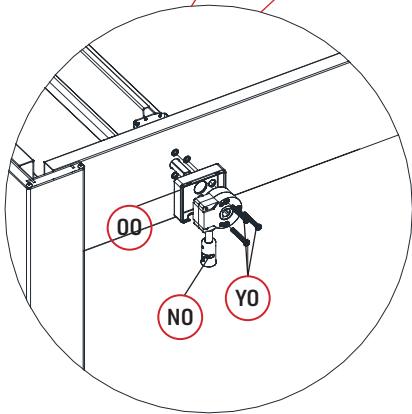
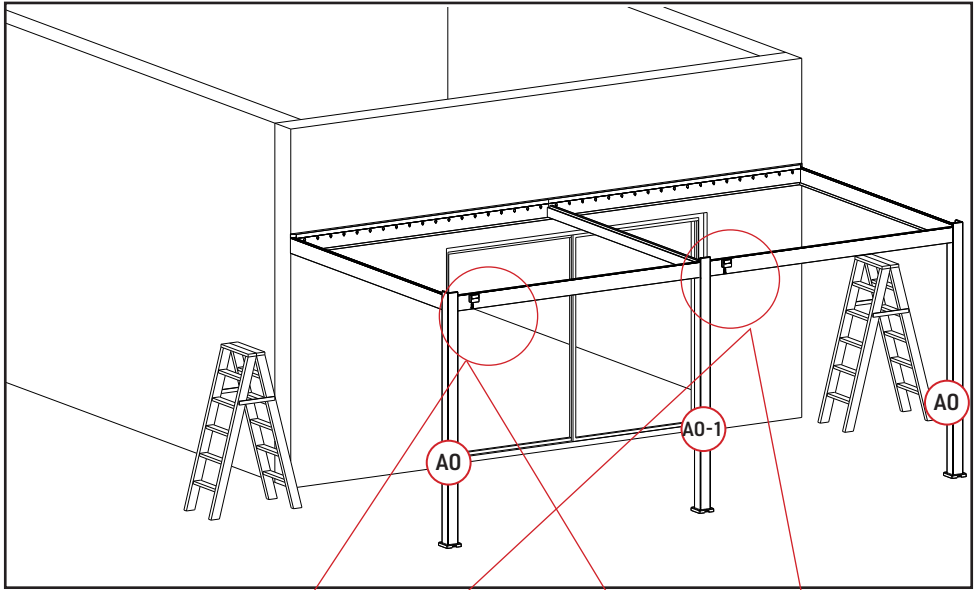


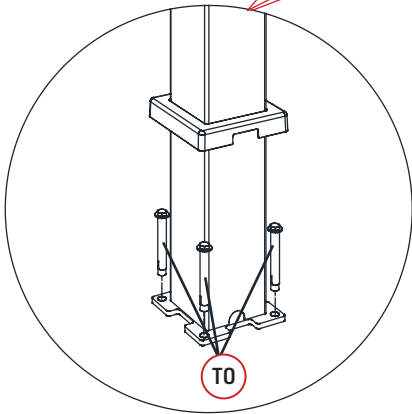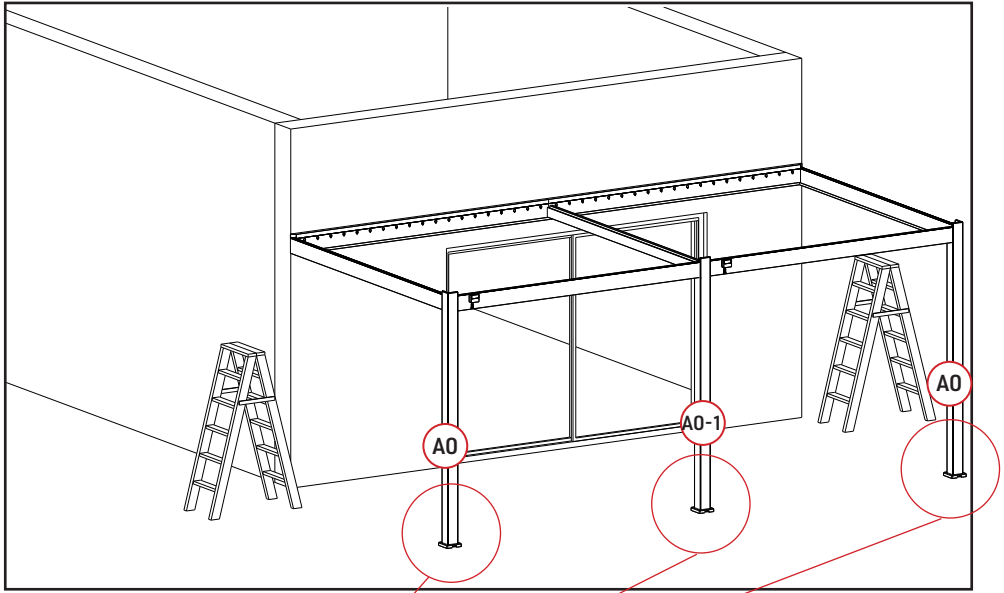

 **KO** ×2

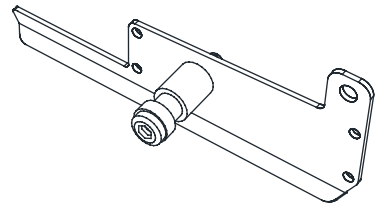
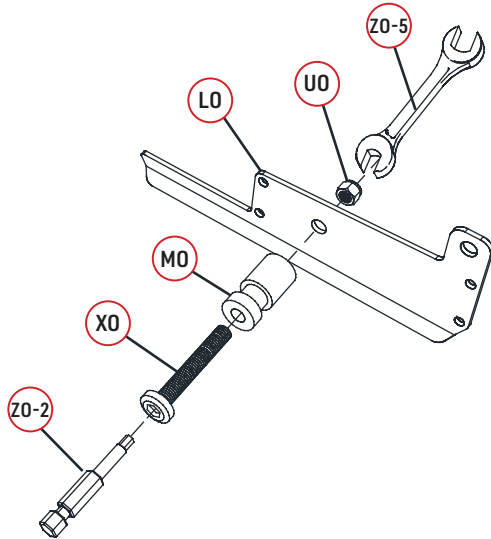
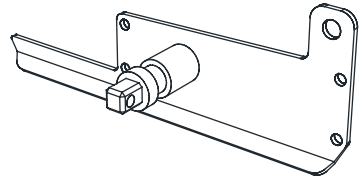


×36


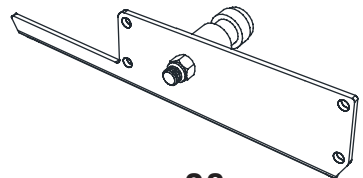
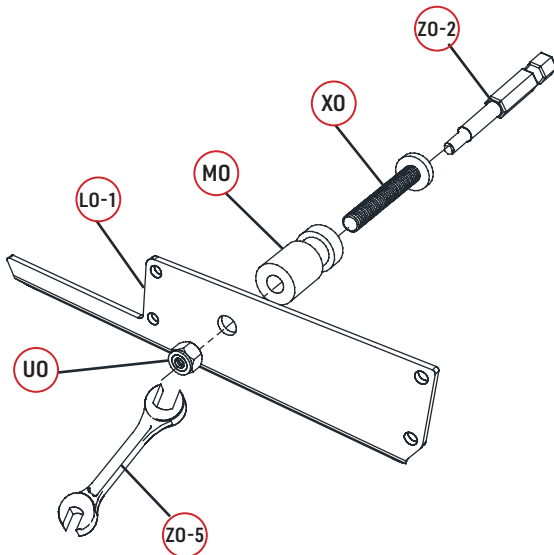





×38





×2

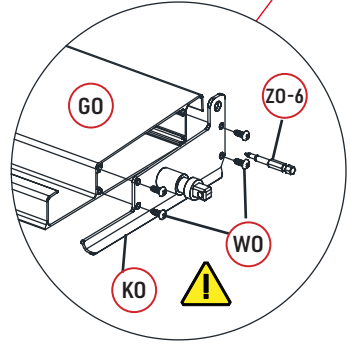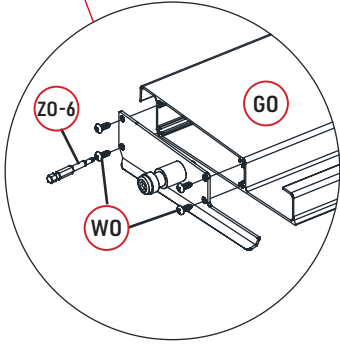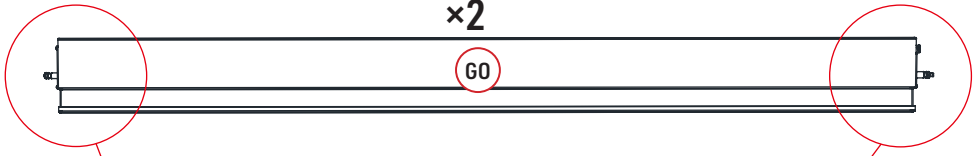


×36

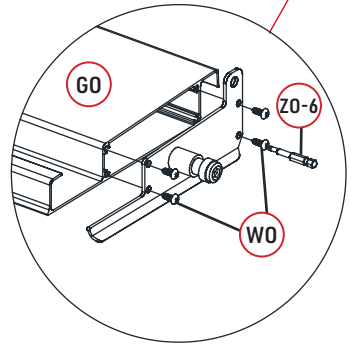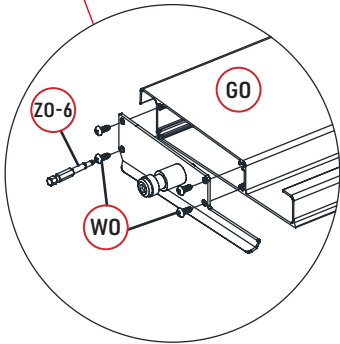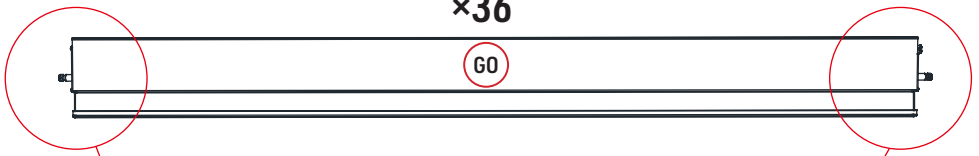

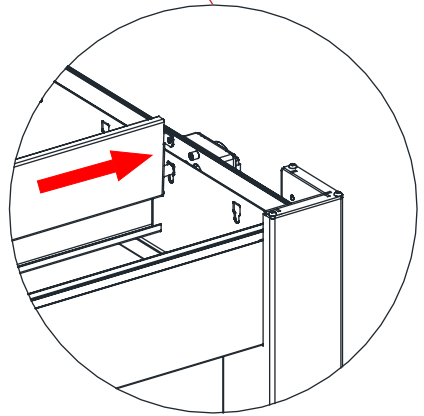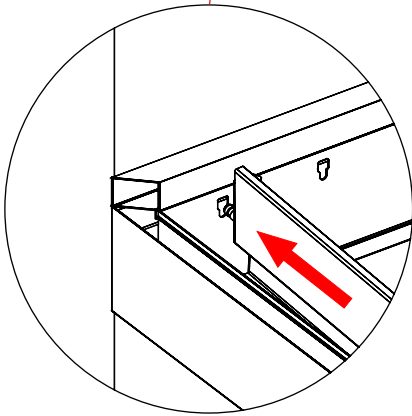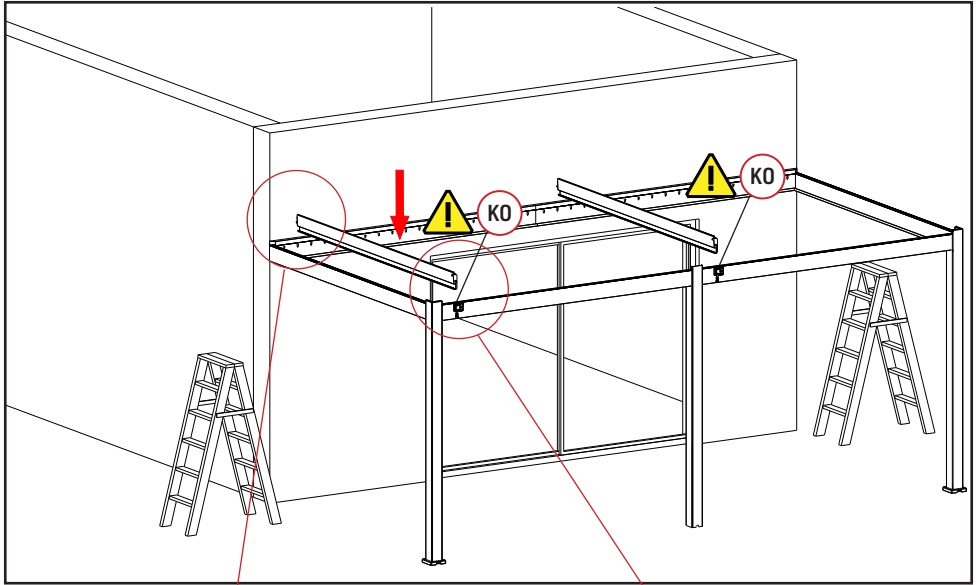

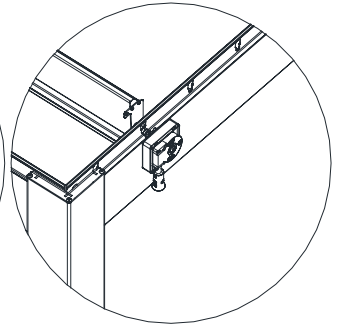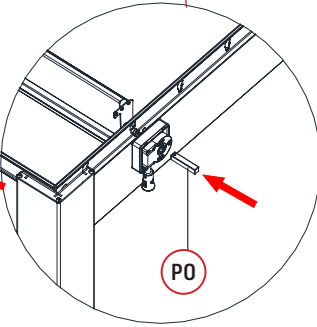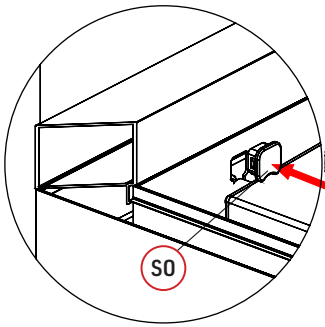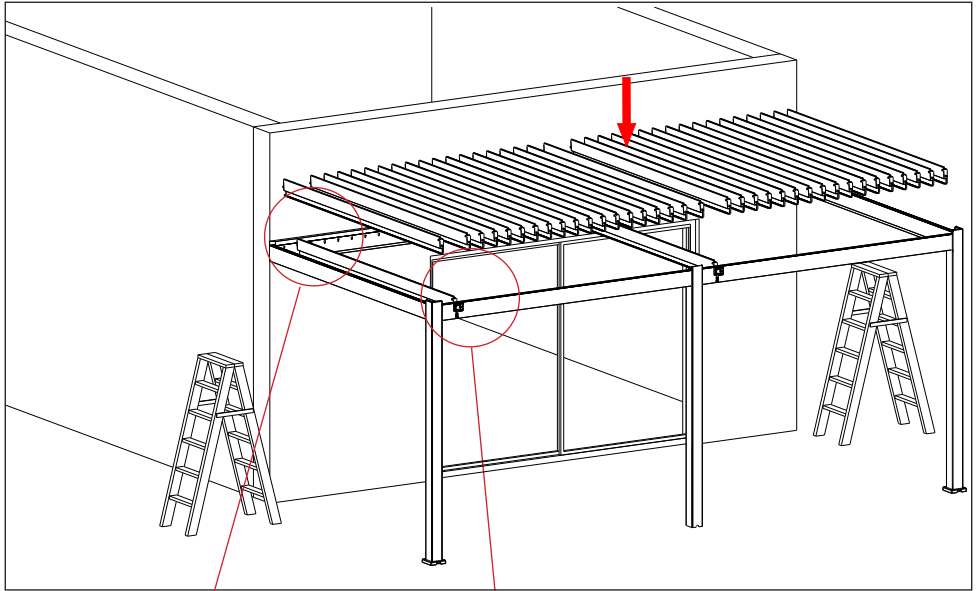

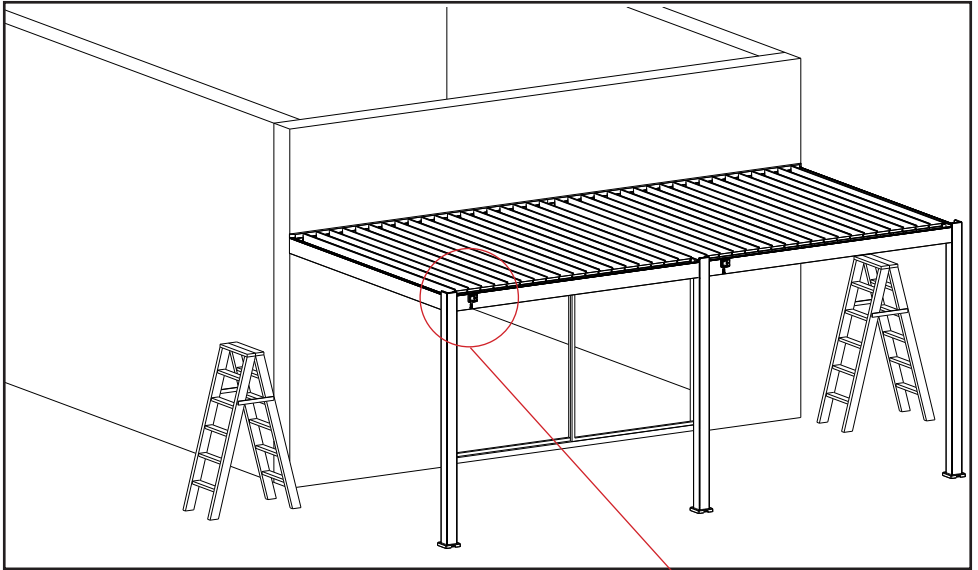

2MM

