
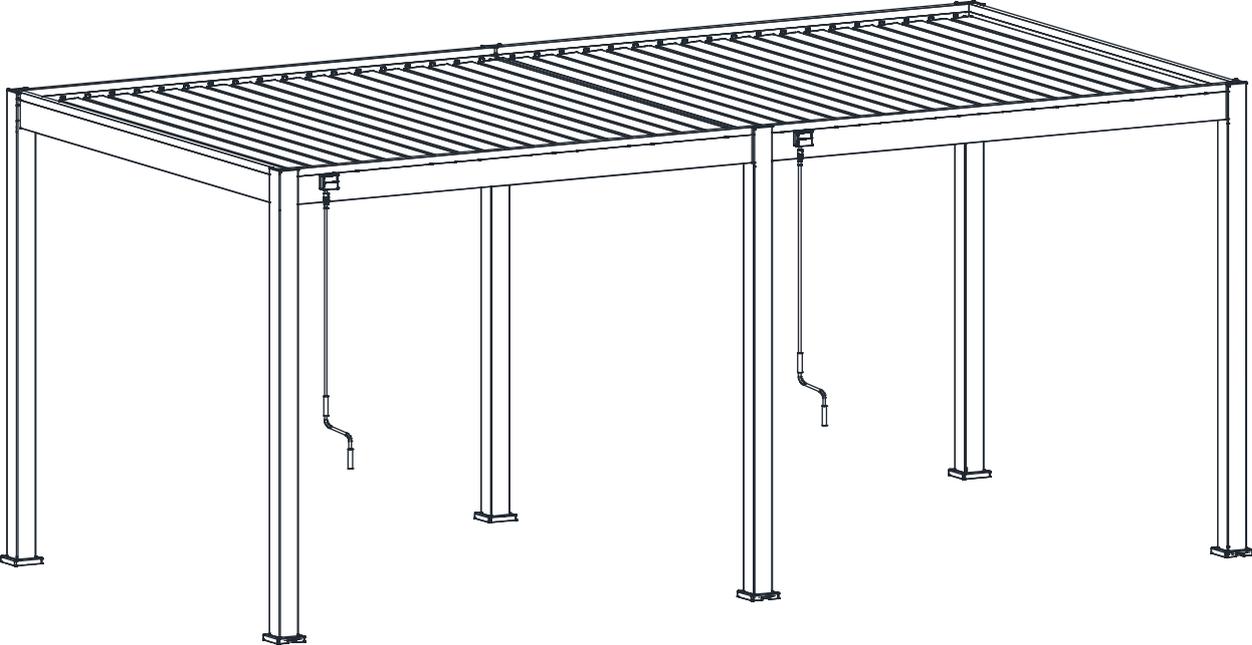

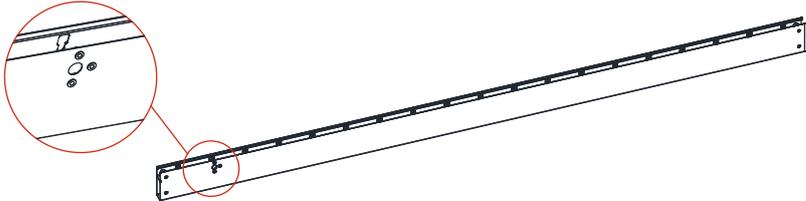
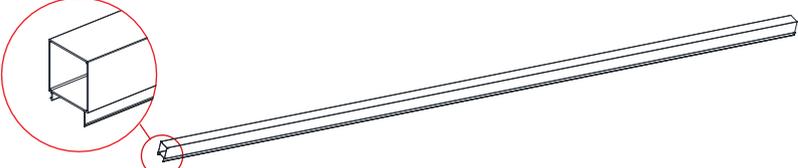
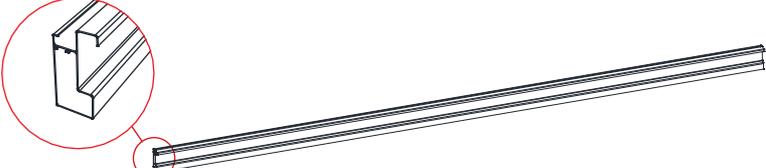





Installation Guide for Pergola 3m x 6m



Carton	RET	QTY		REF	QTY		REF	QTY
1/5	AO	4		AO-1	2		IO	6
	JO	6		TO	24		XO-1	24
2/5	BO-1	2		BO-2	2		CO	2
	DO	6		EO	1		FO	2
	HO	2		NO	2		OO	2
	PO	2		QO	24		QO-1	2
	RO	24		SO	76		UO	112
	VO	38		XO	74		YO	6
	ZO-1	1		ZO-2	1		ZO-3	1
	ZO-4	1		ZO-5	1		ZO-6	1
	ZO-7	1						
3/5	GO	12		KO	2		LO	36
	LO-1	38		MO	74		WO	308
	WO-1	2						
4/5	GO	13						
5/5	GO	13						

REF	PICTURE	QTY
A0		4PCS
A0-1		2PCS
B0-1		2PCS
B0-2		2PCS
C0		2PCS
D0		6PCS
E0		1PCS
F0		2PCS
G0		38PCS
H0		2PCS



REF	PICTURE	QTY
IO		6PCS
JO		6PCS
KO		2PCS
LO		36PCS
LO-1		38PCS
MO		74PCS
NO		2PCS
OO		2PCS
PO		2PCS
QO		24PCS
QO-1		2PCS
RO		24PCS
SO		76PCS
TO	 8X80	24PCS



REF	PICTURE	QTY
UO		112PCS
VO		38PCS
WO	 4X16	308PCS
WO-1	 5X19	2PCS
XO	 6X40	74PCS
XO-1	 6X35	24PCS
YO	 6X45	6PCS
ZO-1	 4mm	1PCS
ZO-2	 4mm	1PCS
ZO-3	 6mm	1PCS
ZO-4	 6mm	1PCS
ZO-5	 10mm	1PCS
ZO-6	 T20	1PCS
ZO-7		1PCS






ATTENTION!!!


Please open the louvers to vertical in winter and snowing weather to protect your pergola!




Tools Required for Installation



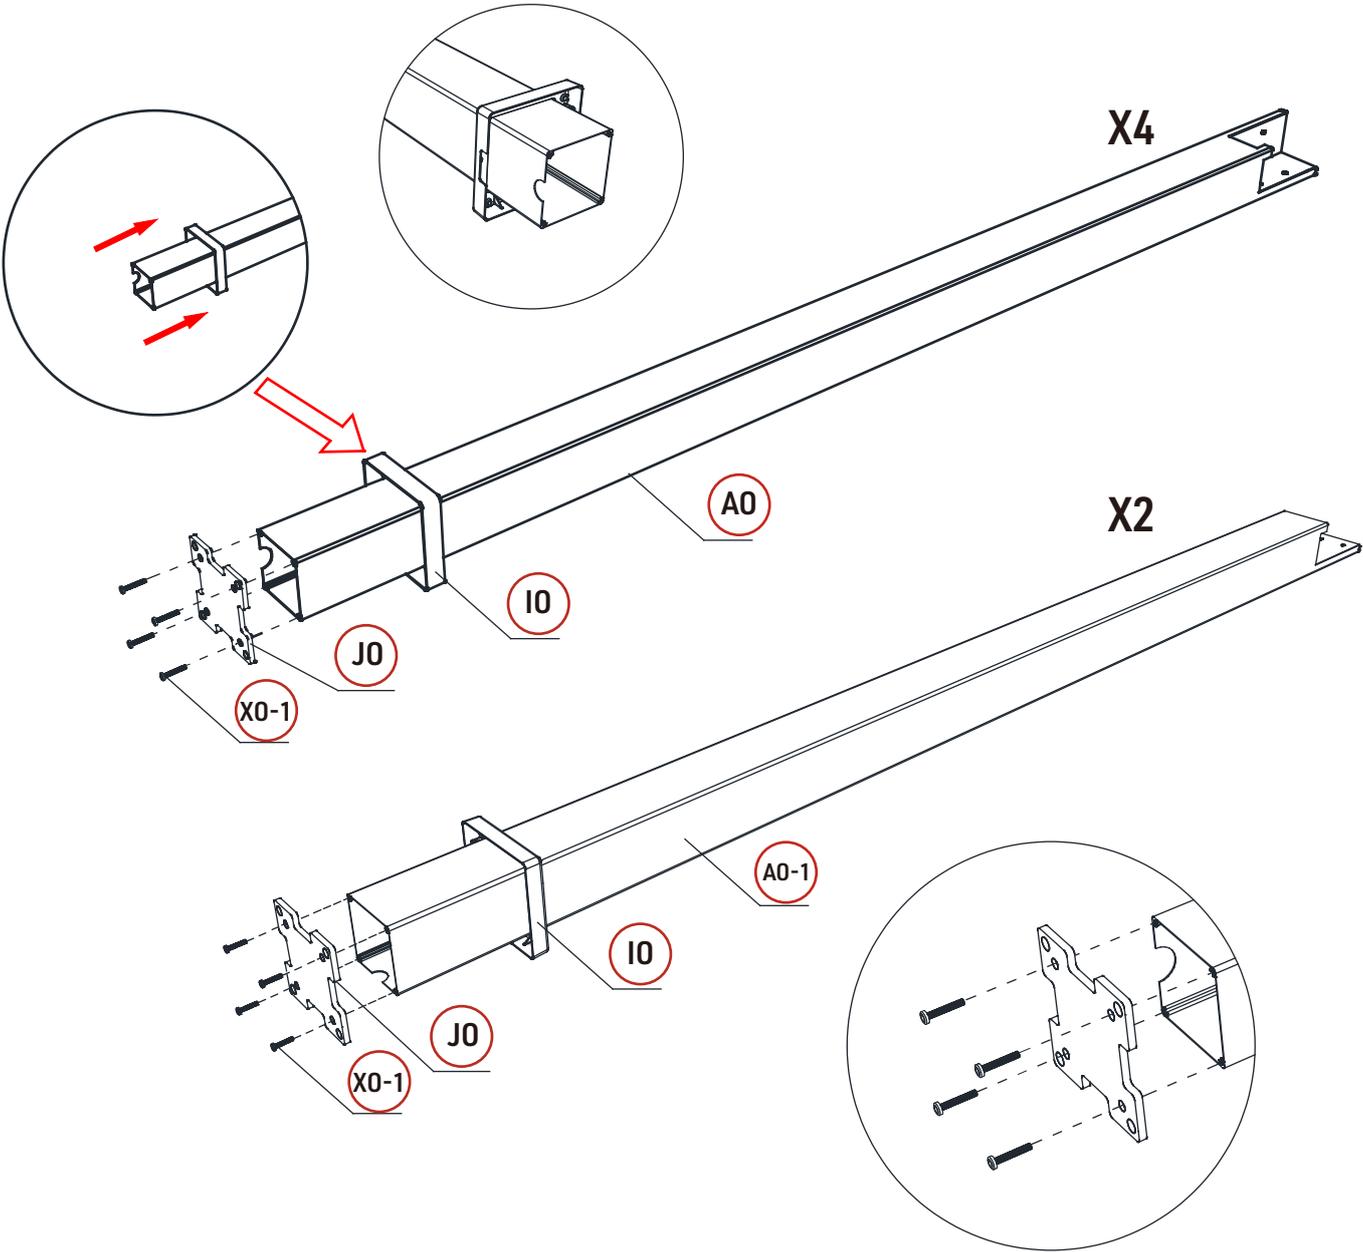
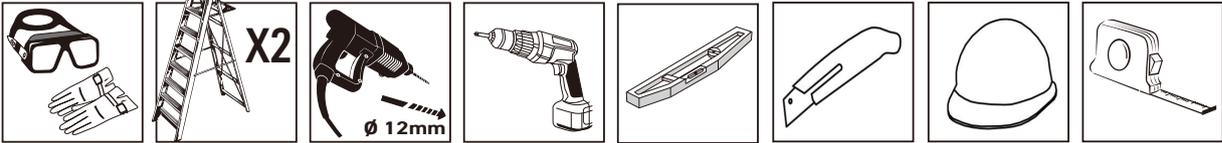


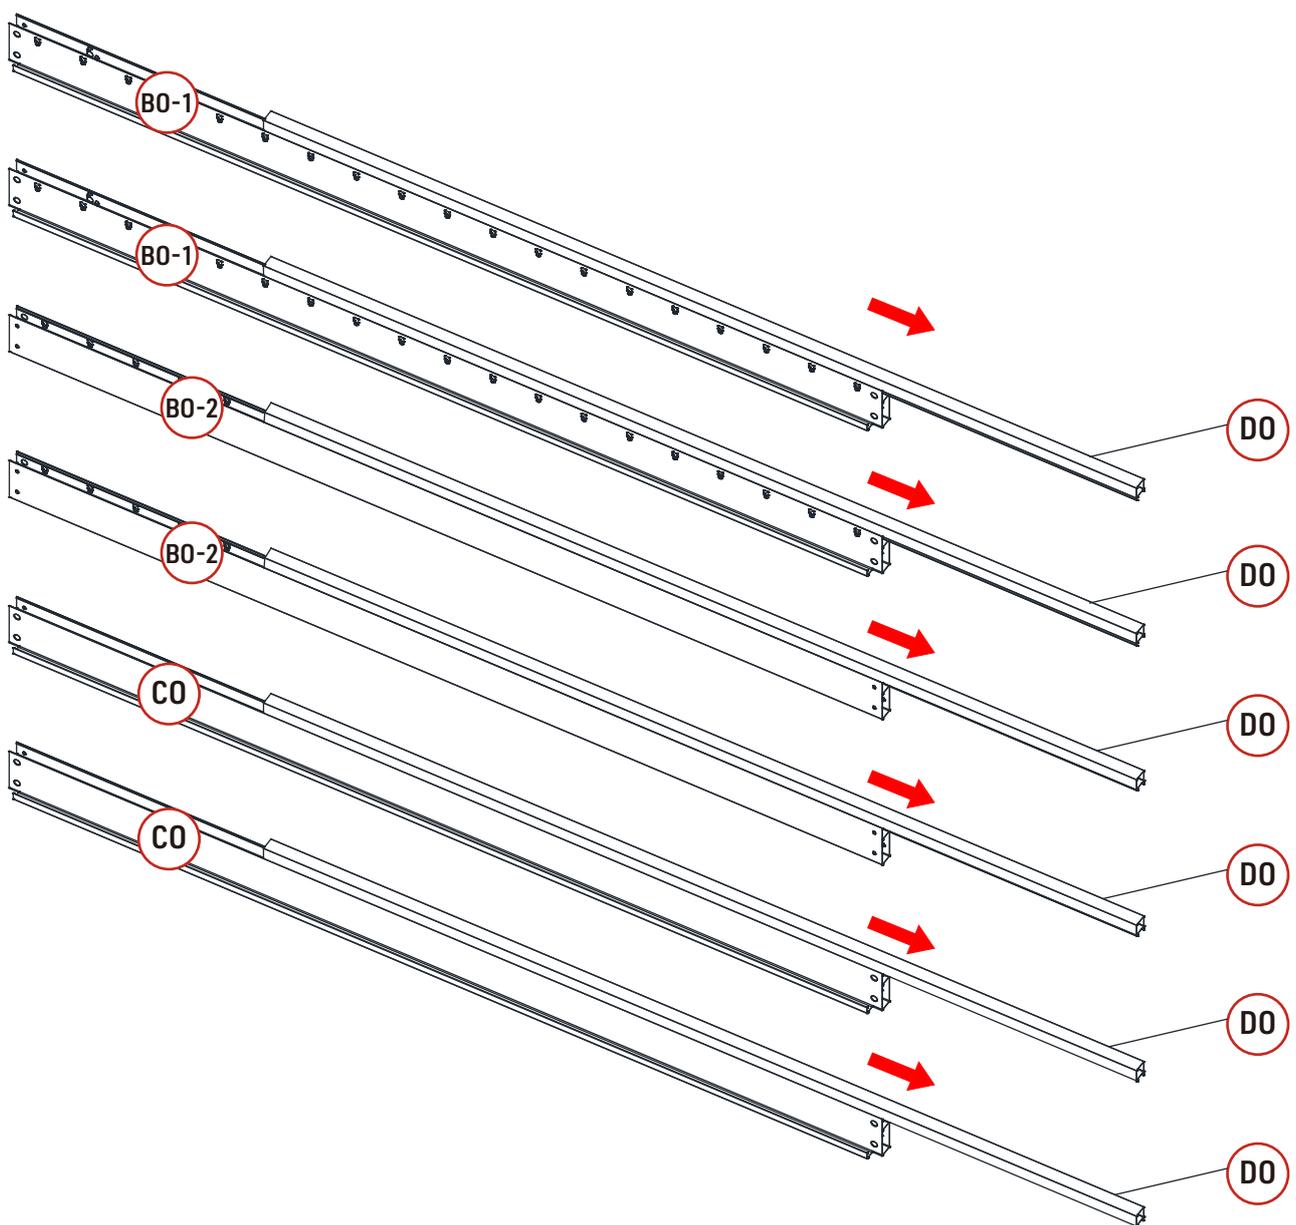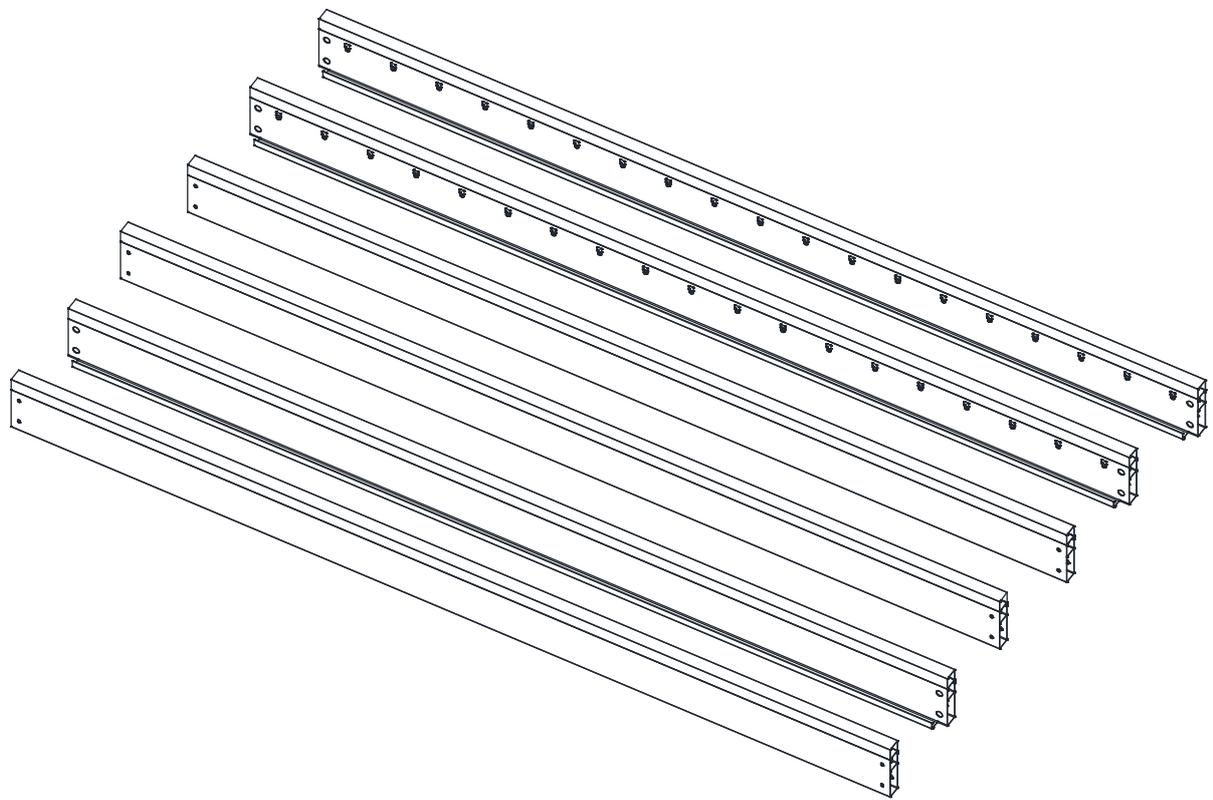

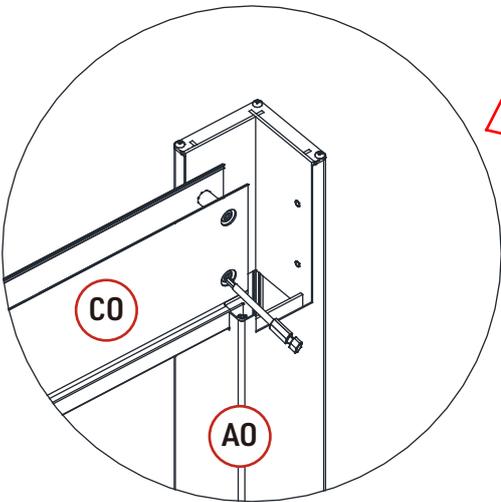
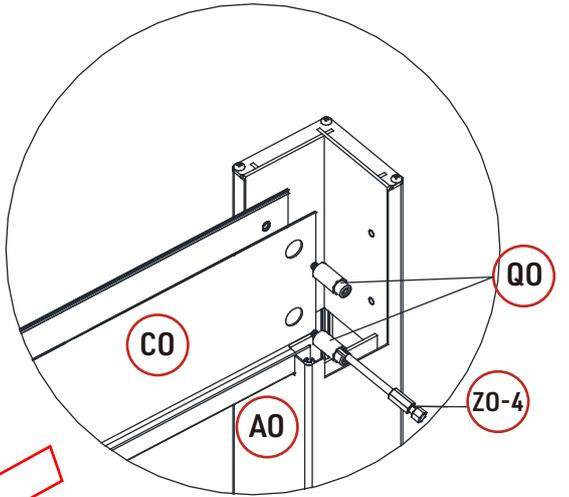
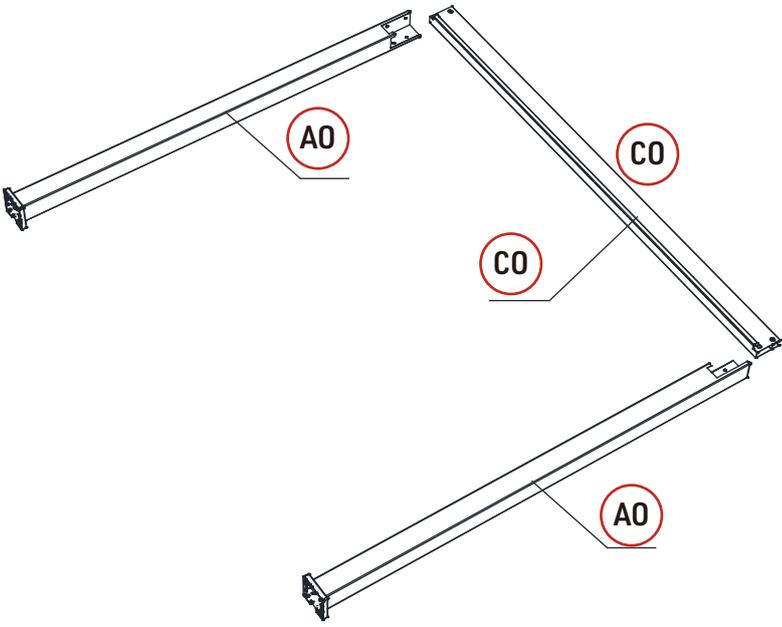
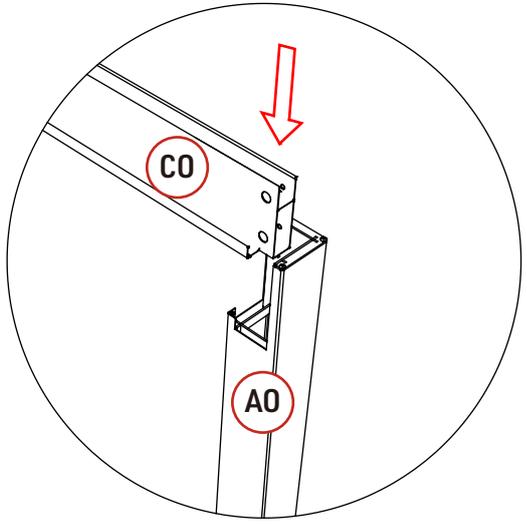
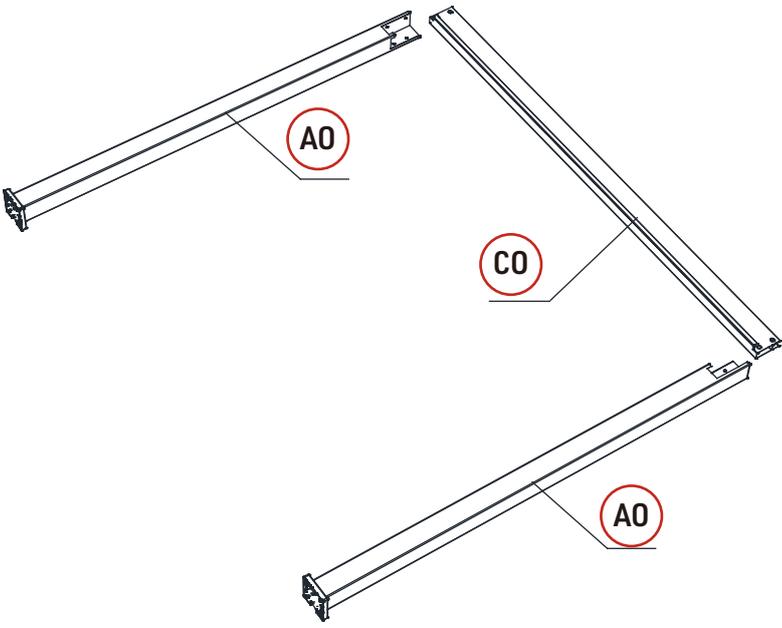


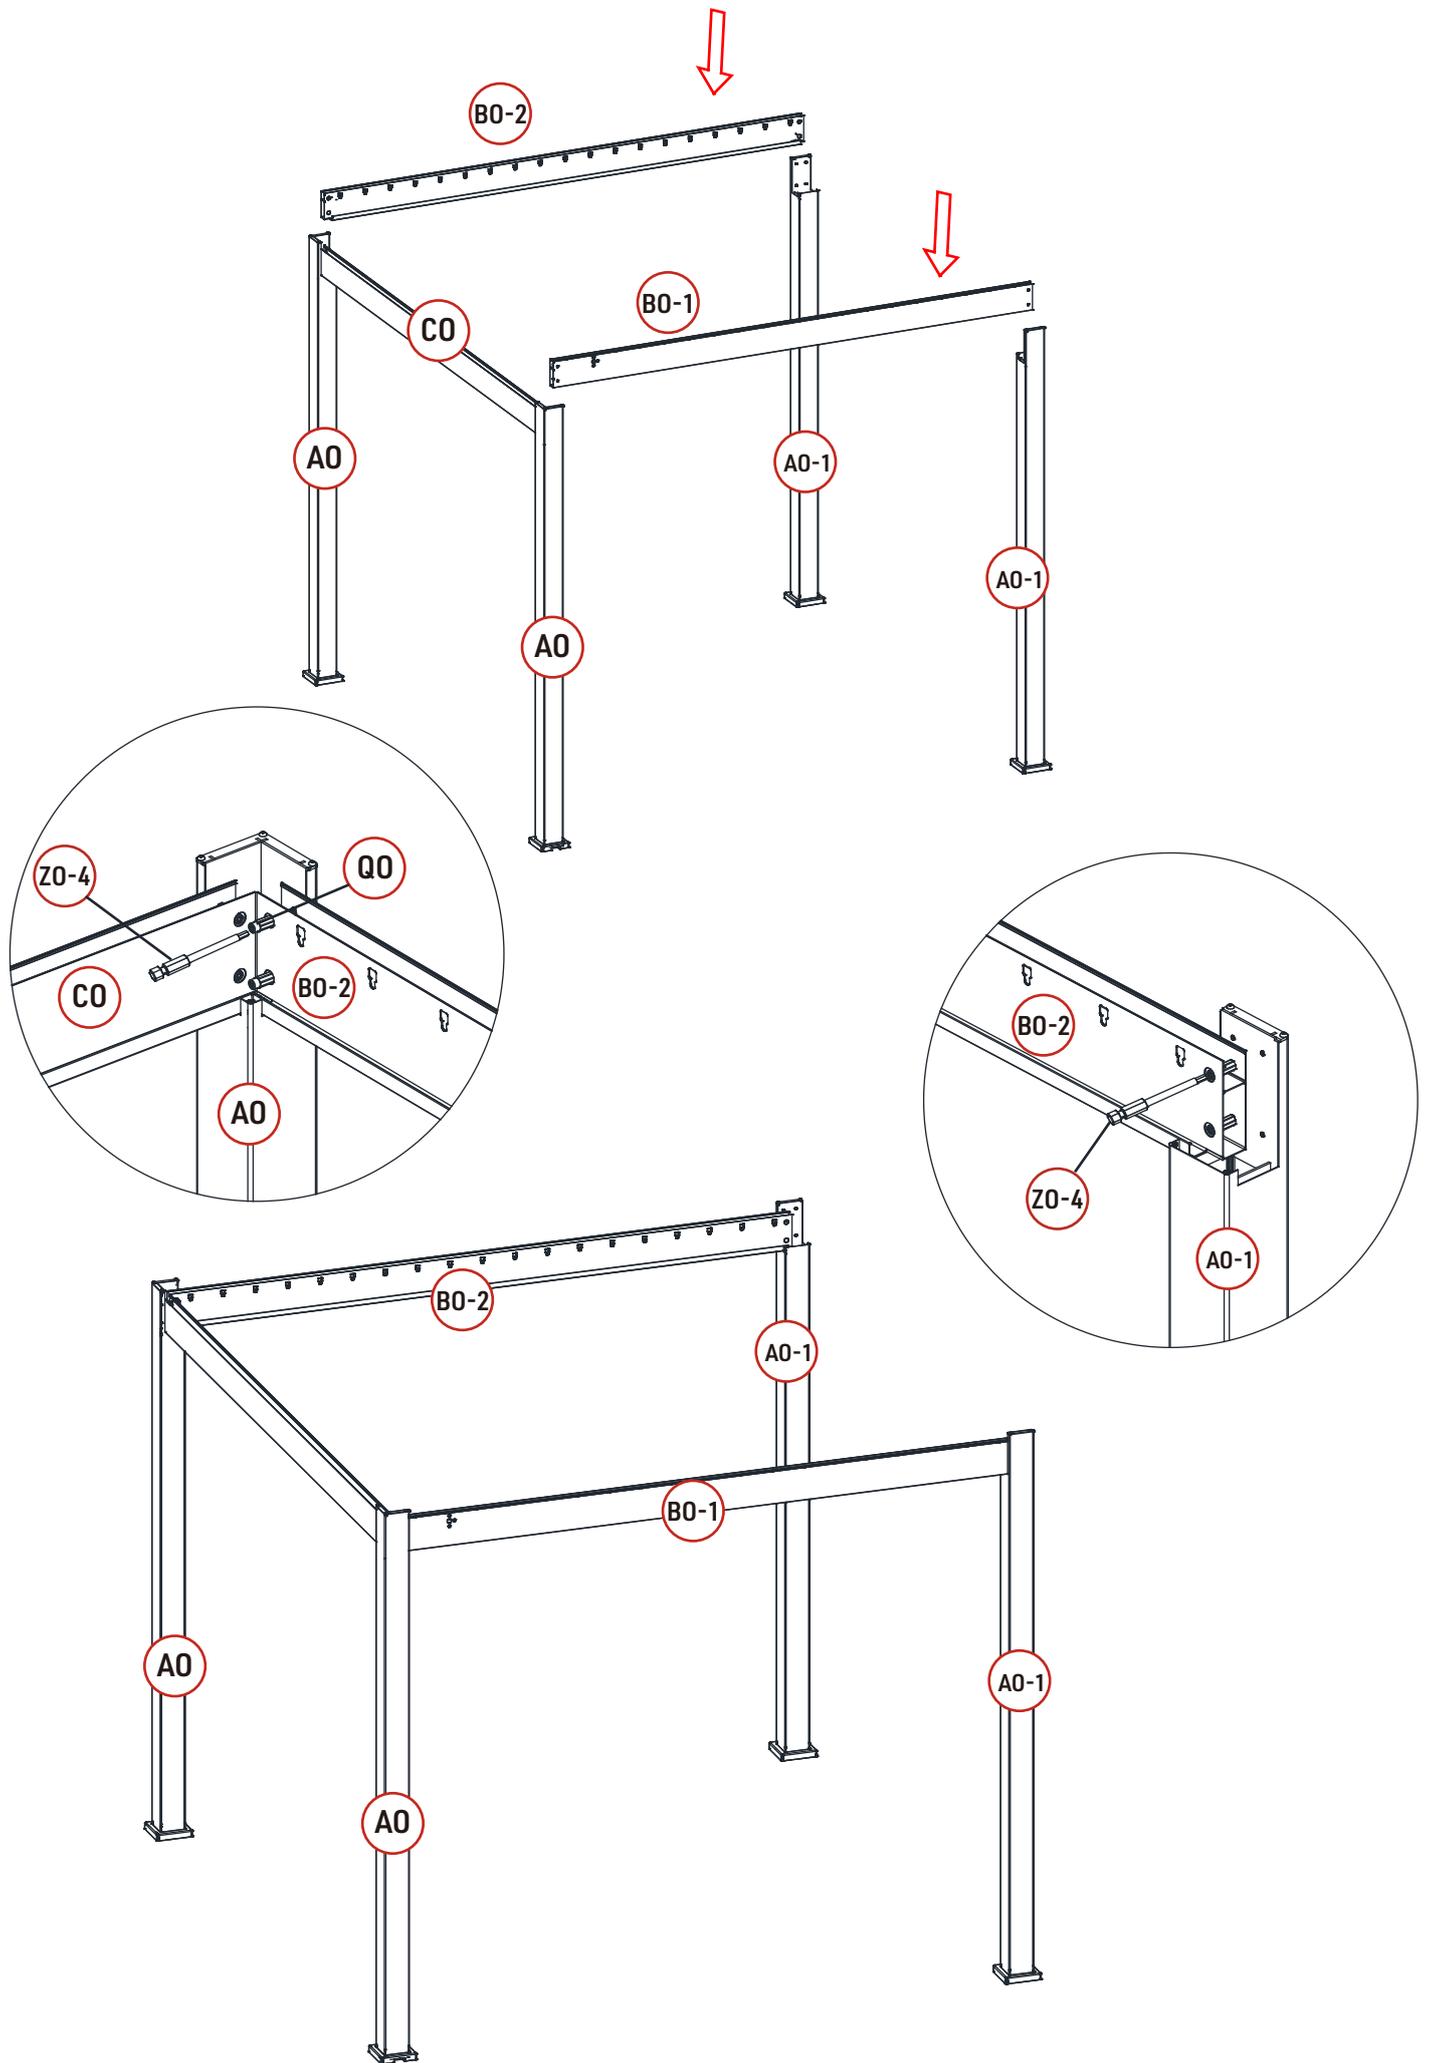

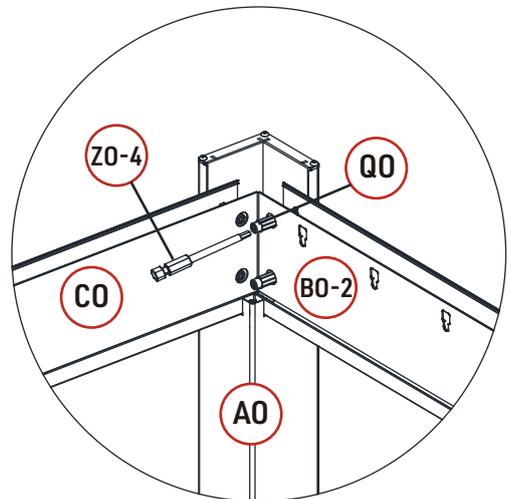
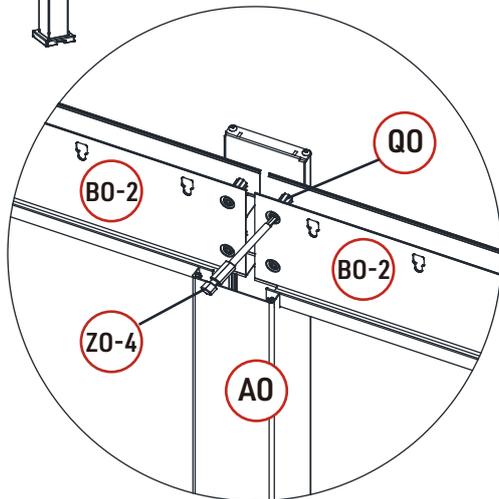
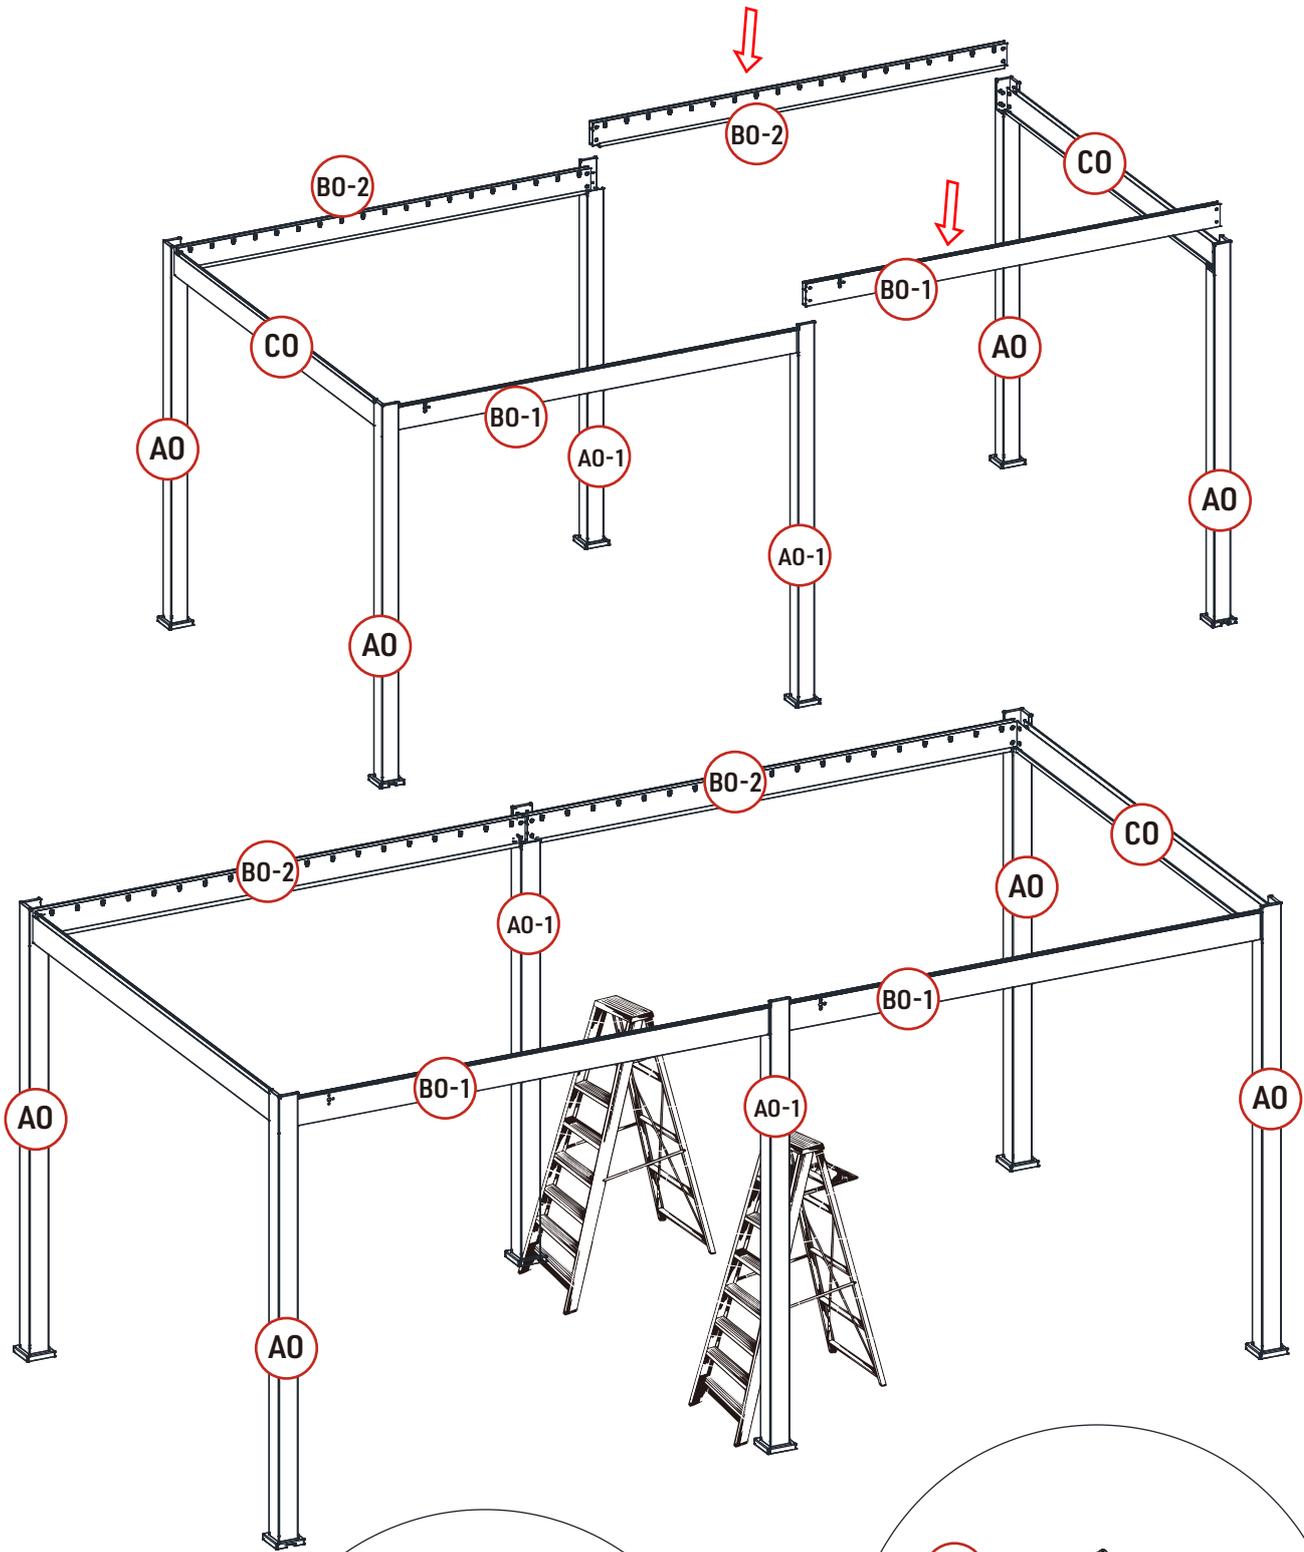


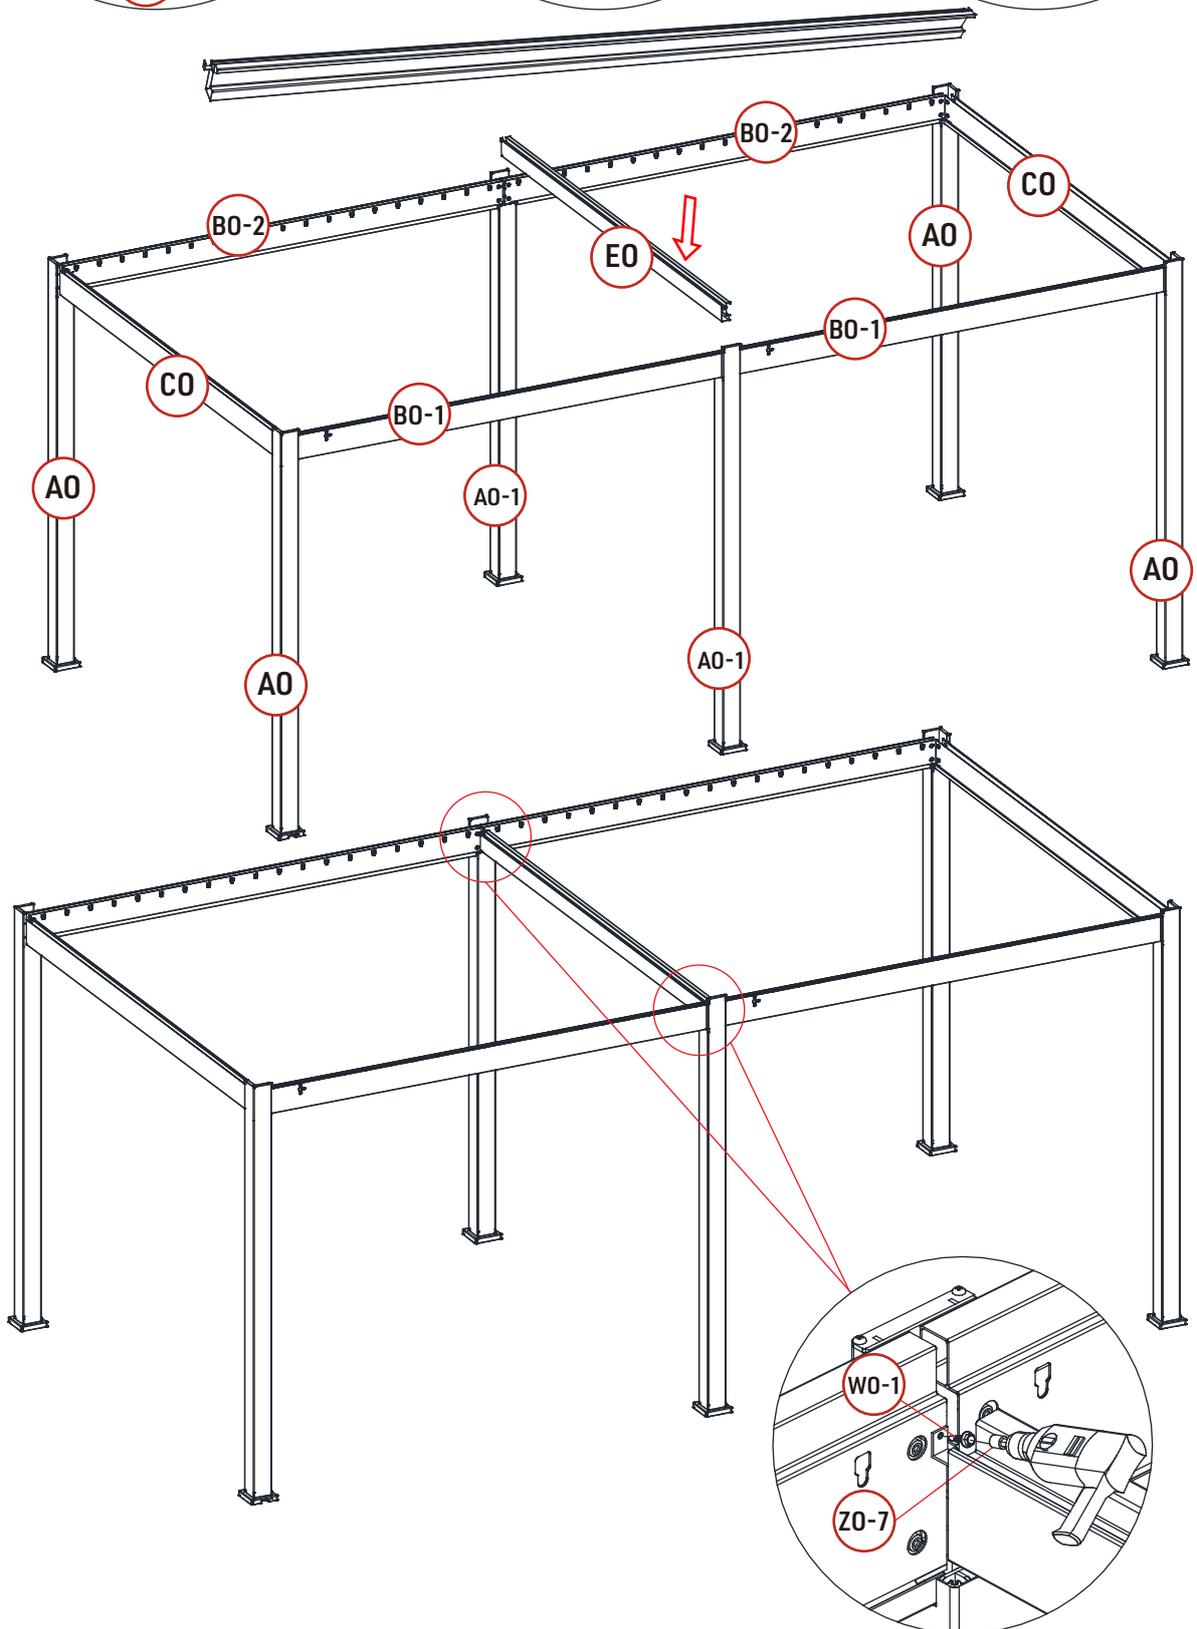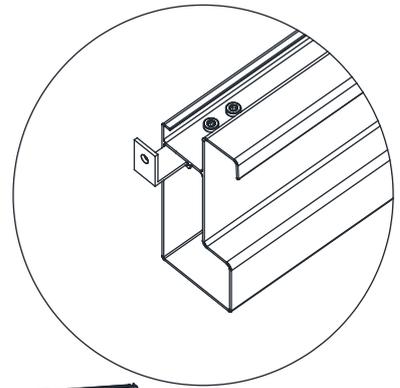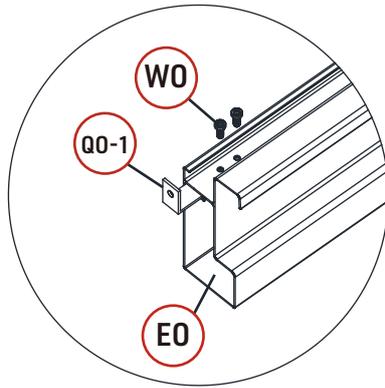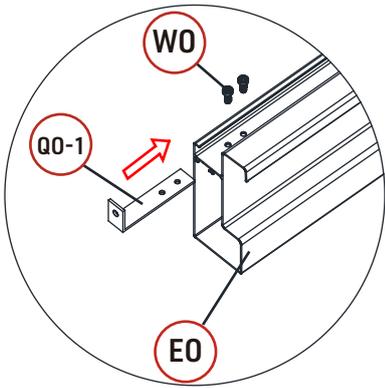

  **X1**

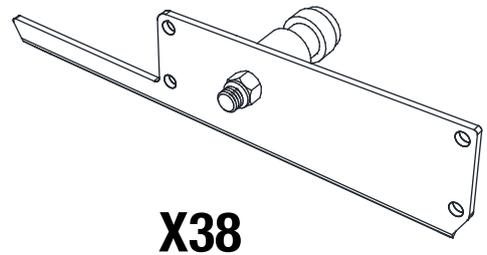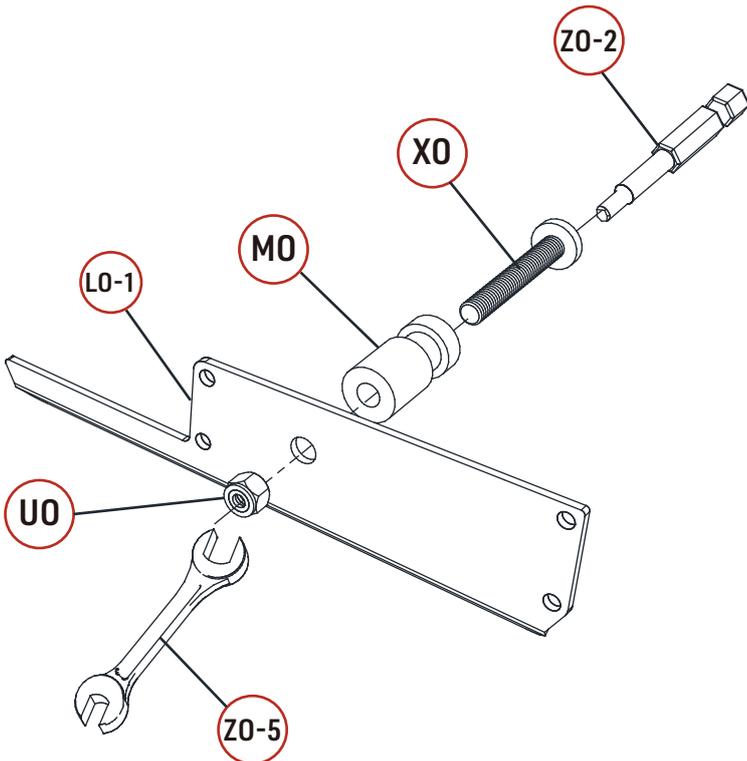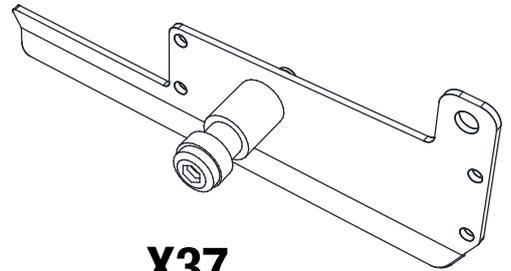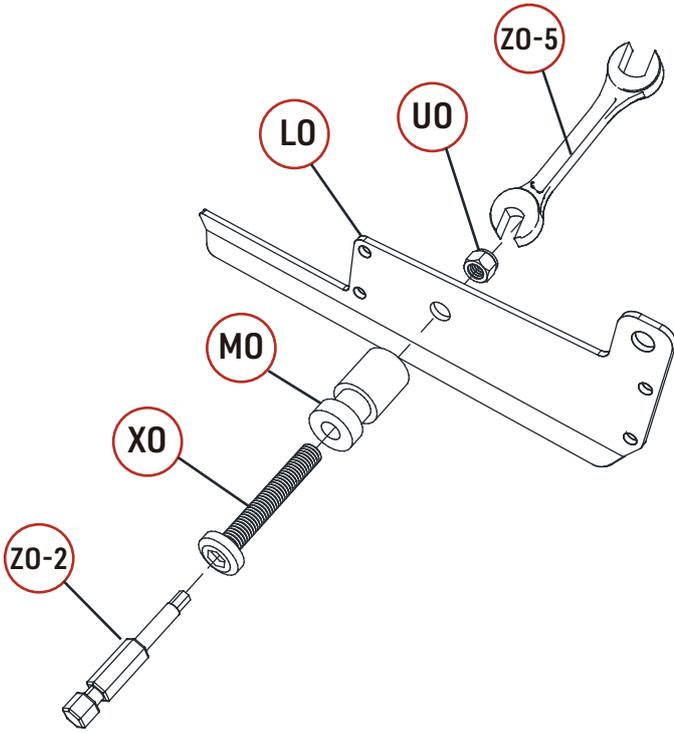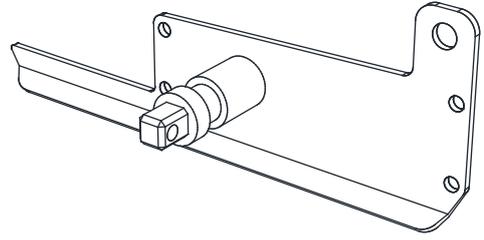

X2

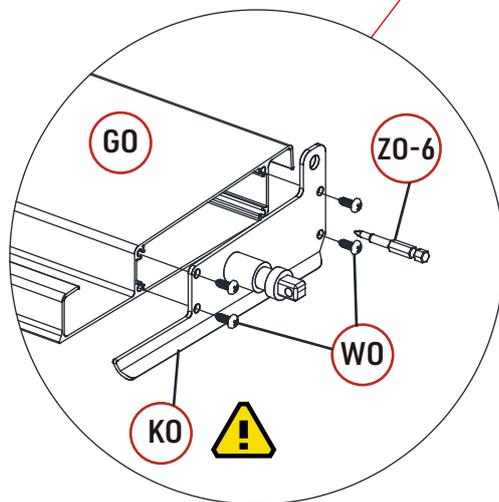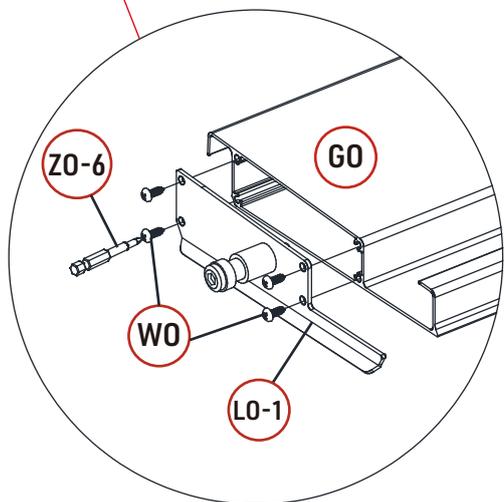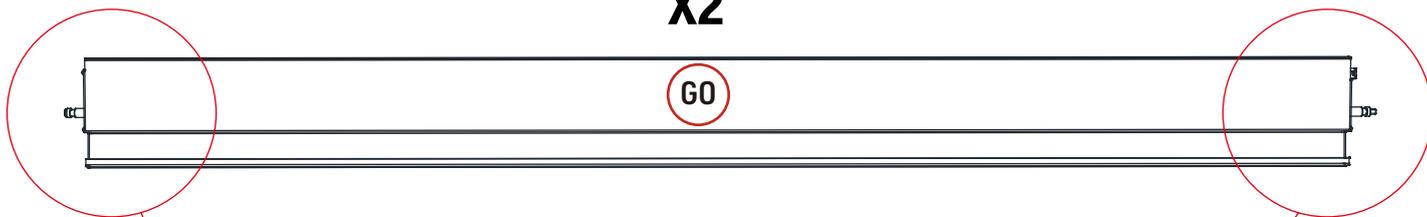

X36

