



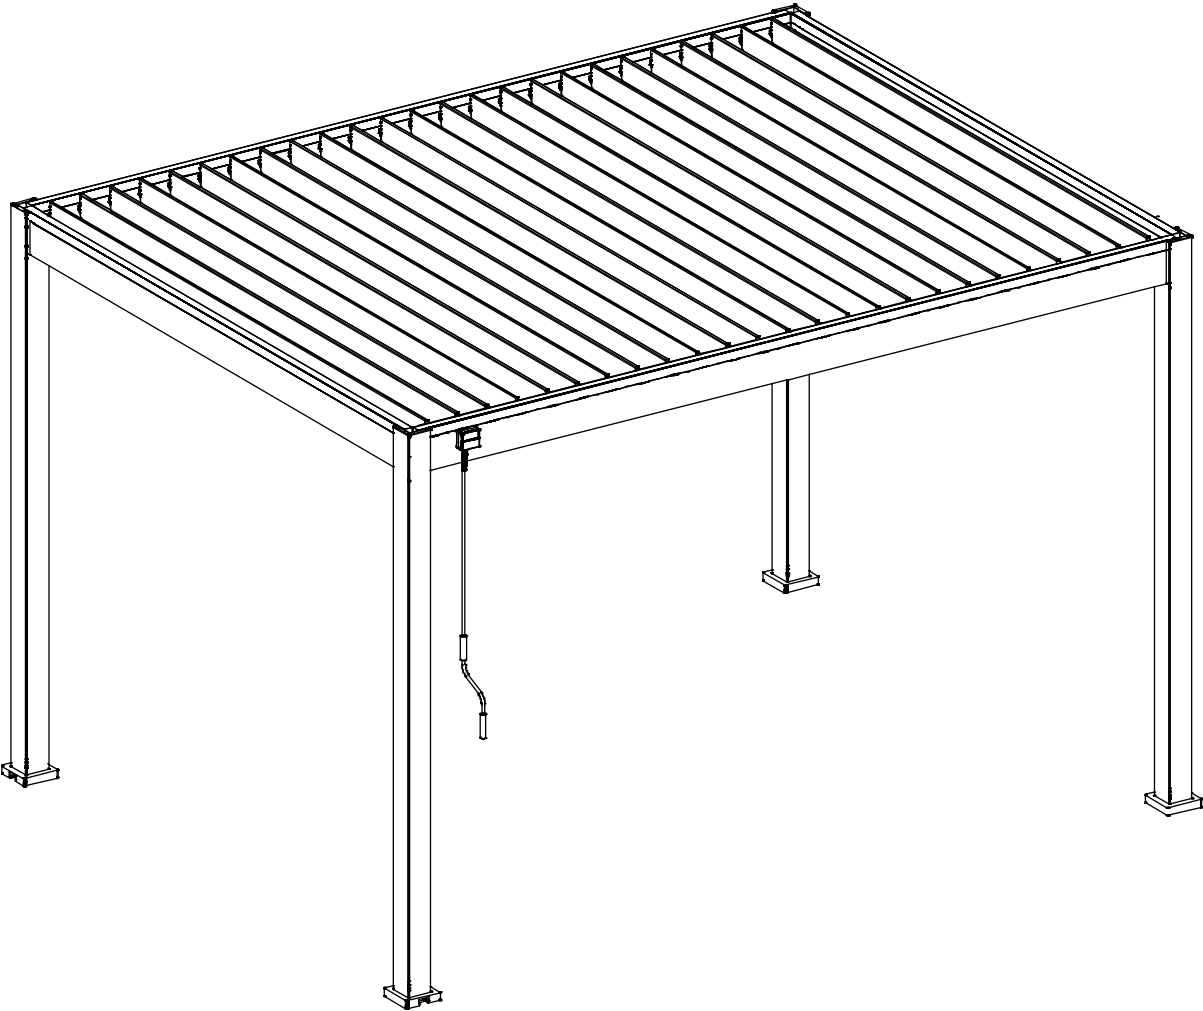

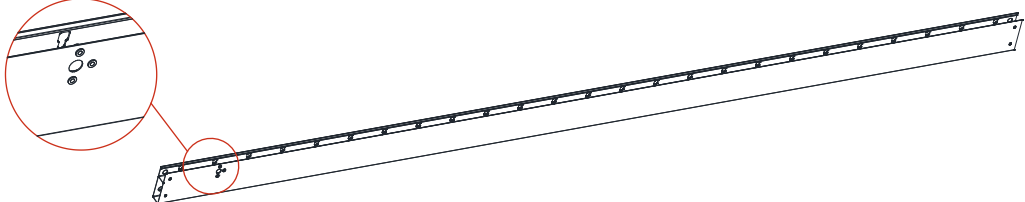
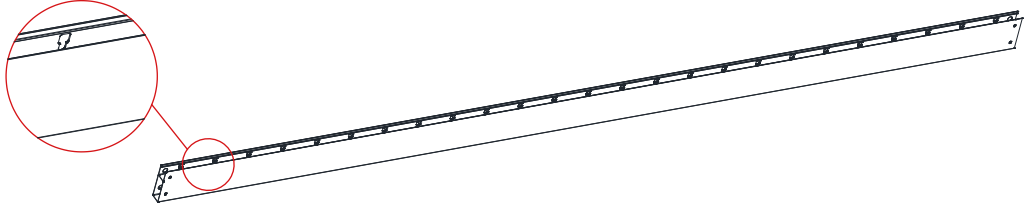











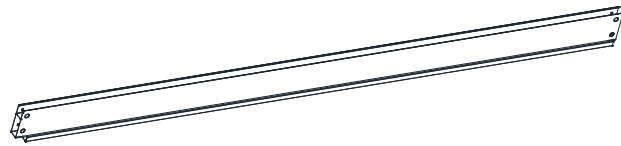


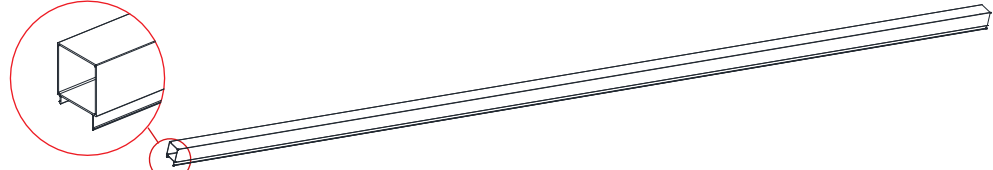

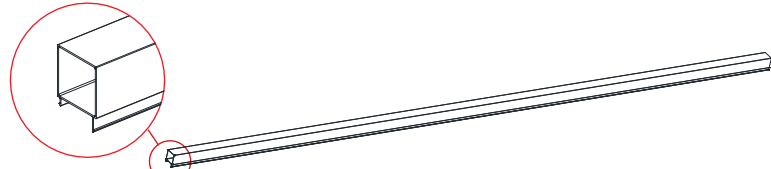

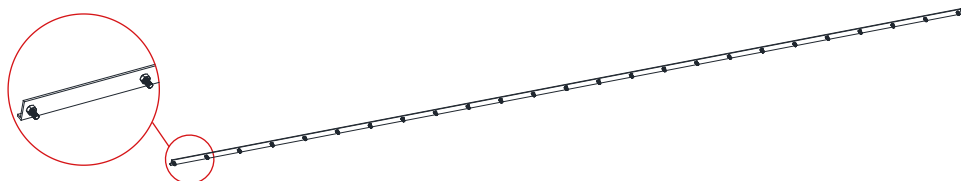










# Installation Guide for Pergola 4m x 3m



Carton	RET	QTY		REF	QTY		REF	QTY
1/4	(A0)	4		(I0)	4		(J0)	4
	(T0)	16		(X0-1)	16			
2/4	(B0-1)	1		(B0-2)	1		(C0)	2
	(D0)	2		(E0)	2		(F0)	1
	(H0)	1		(N0)	1		(O0)	1
	(P0)	1		(Q0)	16		(R0)	16
	(S0)	50		(U0)	74		(V0)	25
	(X0)	49		(Y0)	3		(Z0-1)	1
	(Z0-2)	1		(Z0-3)	1		(Z0-4)	1
	(Z0-5)	1		(Z0-6)	1			
3/4	(G0)	12		(K0)	1		(L0)	24
	(L0-1)	25		(M0)	49		(W0)	200
4/4	(G0)	13						

REF	PICTURE	QTY
AO		4PCS
BO-1		1PCS
BO-2		1PCS
CO		2PCS
DO		2PCS
EO		2PCS
FO		1PCS
GO		25PCS
HO		1PCS



REF	PICTURE	QTY
IO		4PCS
JO		4PCS
KO		1PCS
LO		24PCS
LO-1		25PCS
MO		49PCS
NO		1PCS
OO		1PCS
PO		1PCS
QO		16PCS
RO		16PCS
SO		50PCS


REF	PICTURE	QTY
TO	 8X80	16PCS
UO		74PCS
VO		25PCS
WO	 4X16	200PCS
XO	 6X40	49PCS
XO-1	 6X35	16PCS
YO	 6X45	3PCS
ZO-1	 4mm	1PCS
ZO-2	 4mm	1PCS
ZO-3	 6mm	1PCS
ZO-4	 6mm	1PCS
ZO-5	 10mm	1PCS
ZO-6	 T20	1PCS


# ATTENTION!!!


Please open the louvers to vertical in winter and snowing weather to protect your pergola!

## Tools Required for Installation


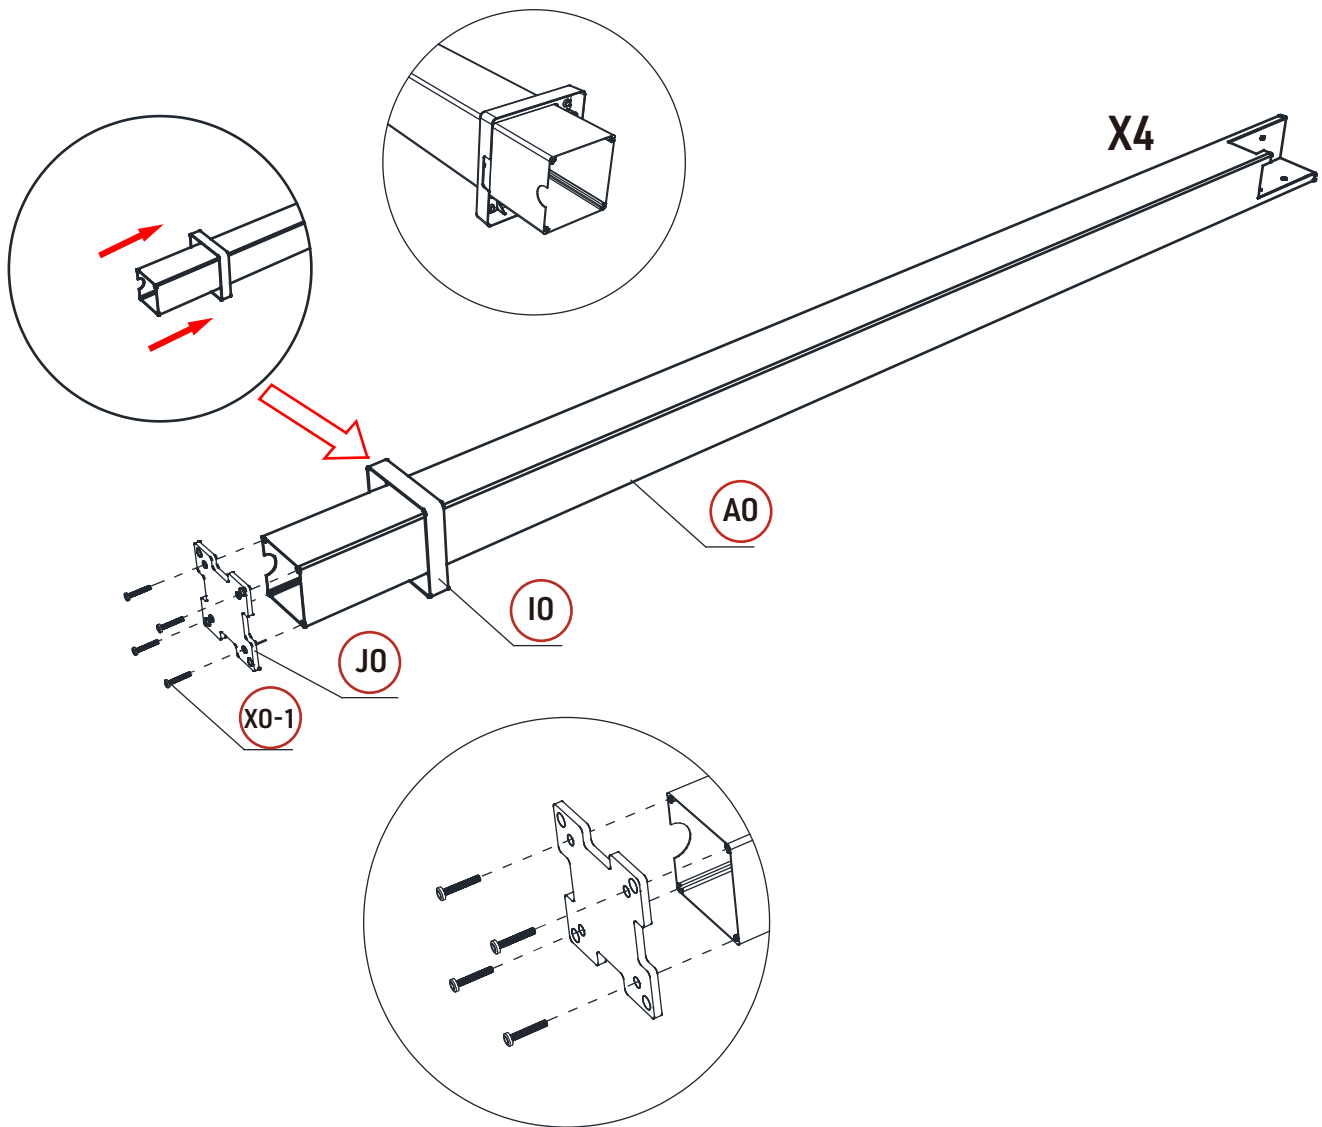
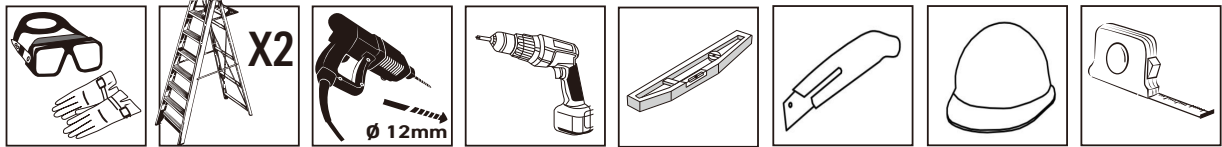




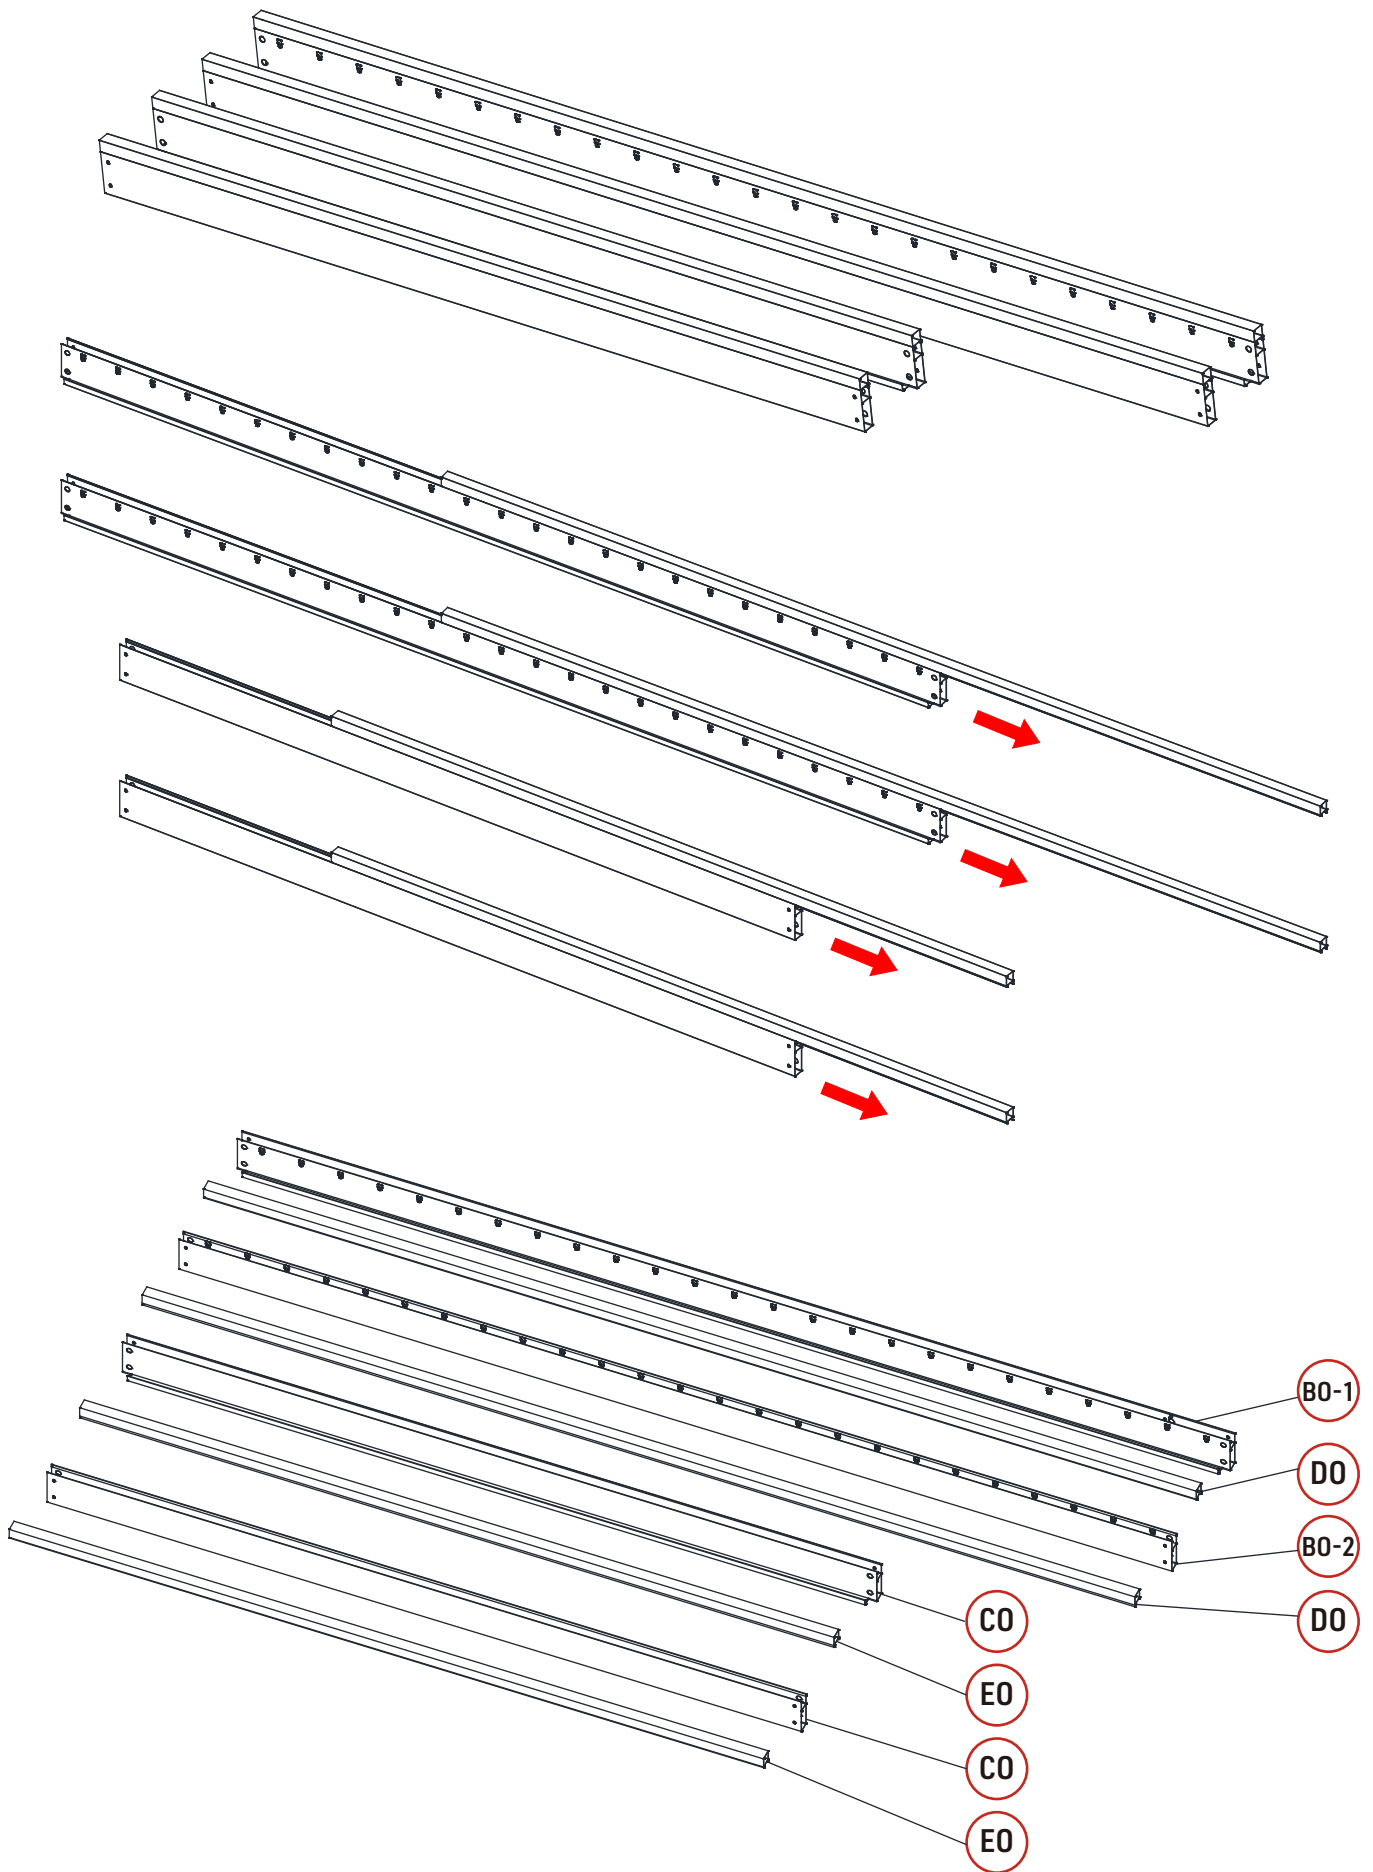


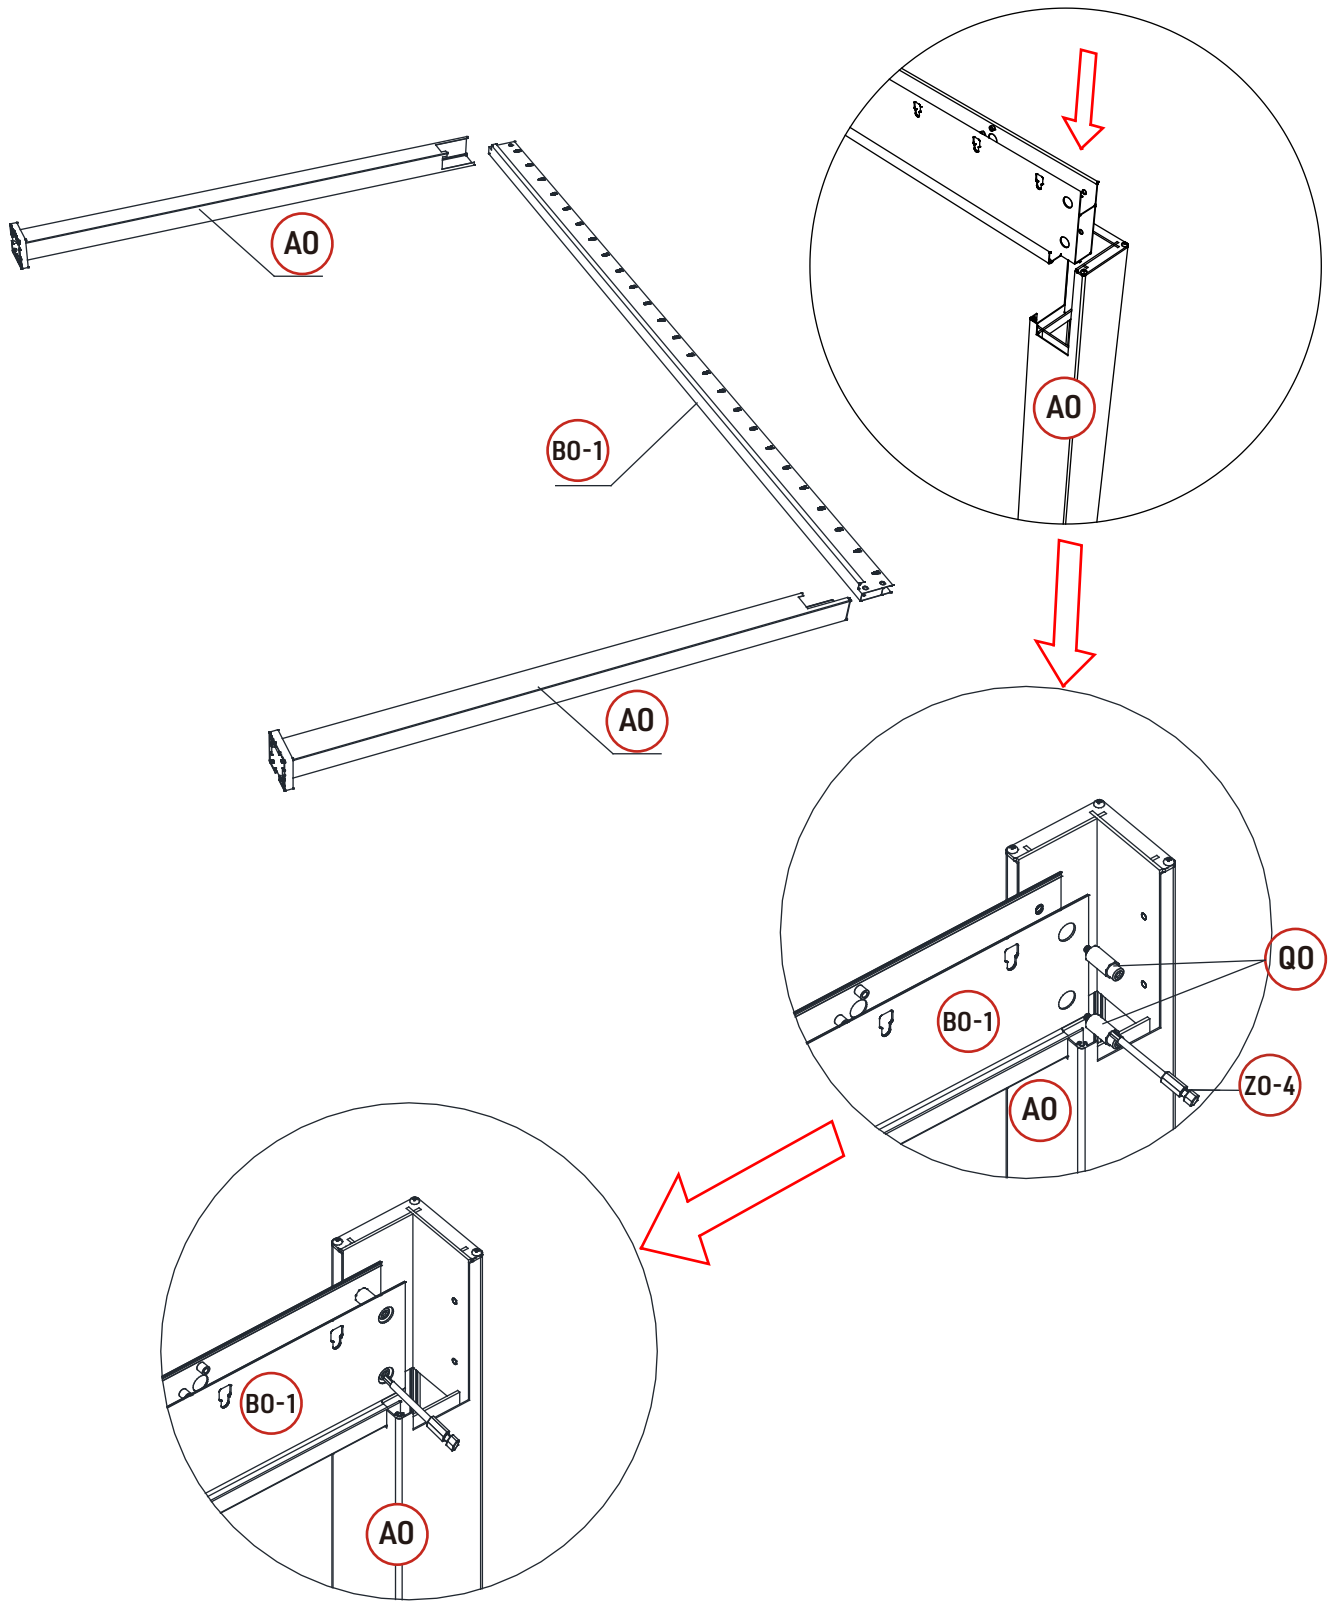



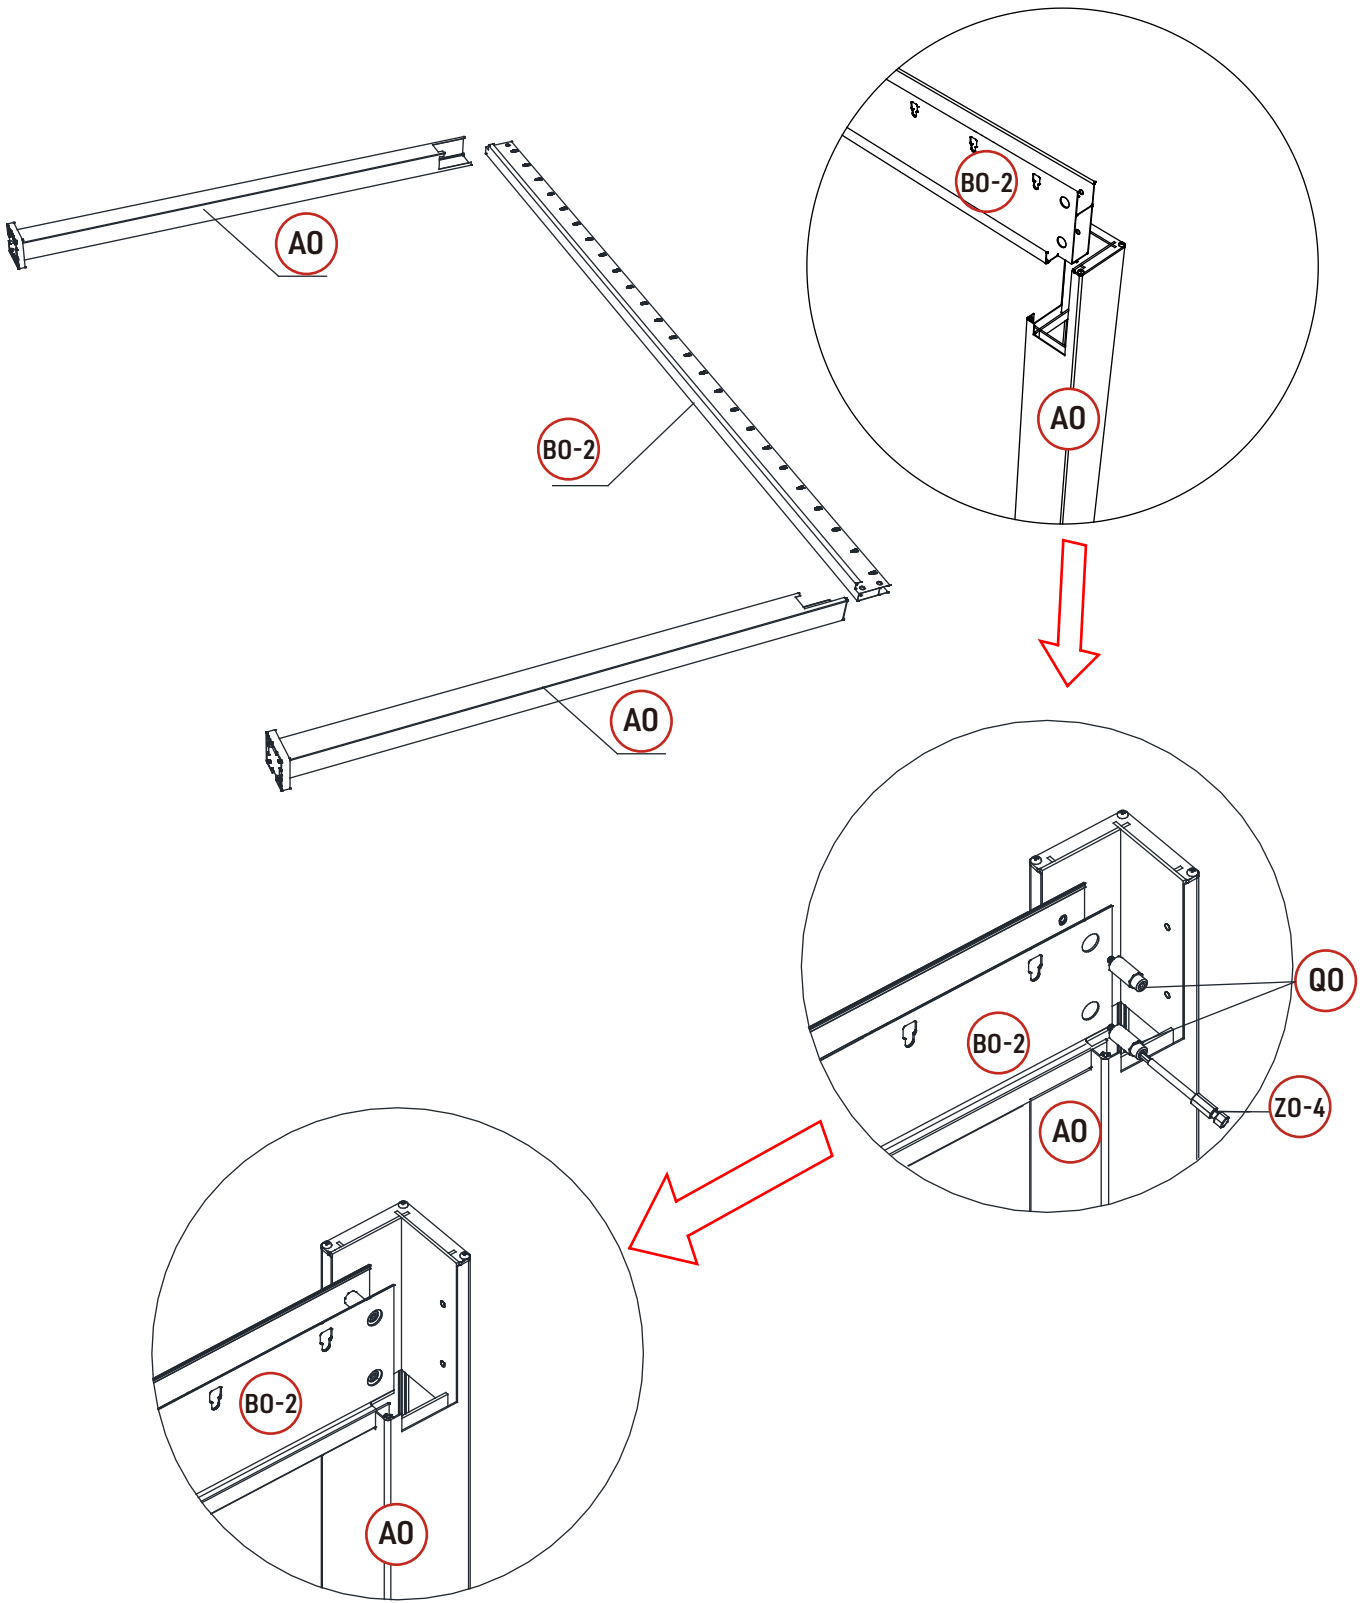




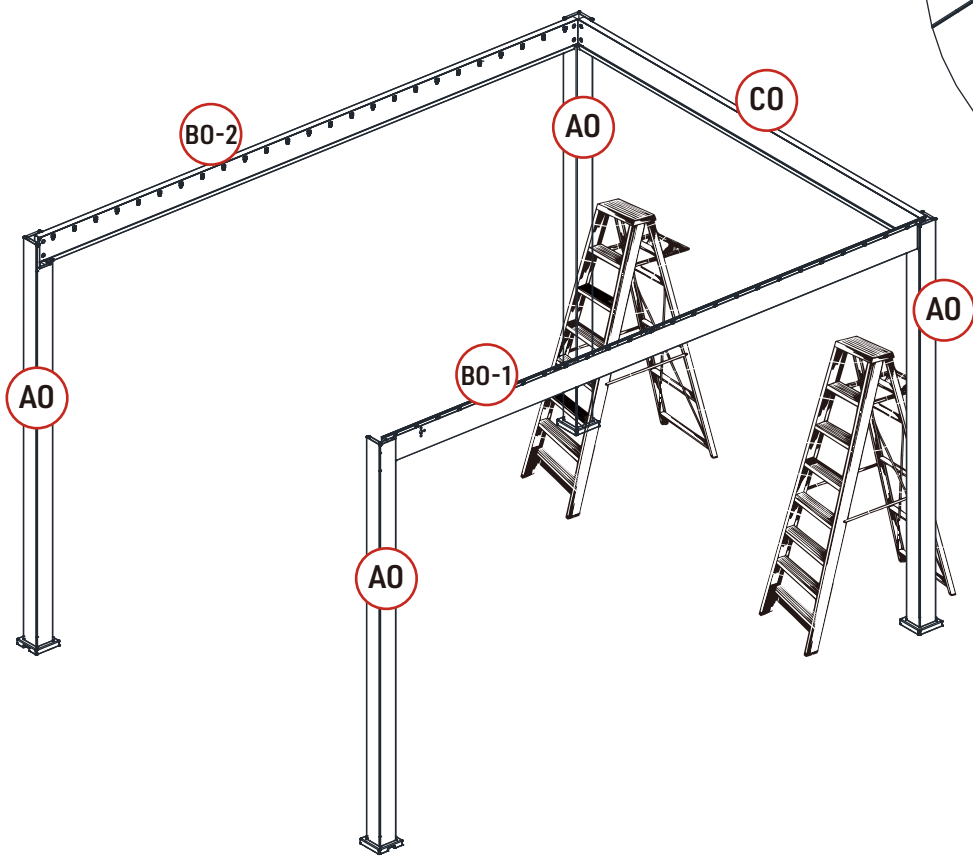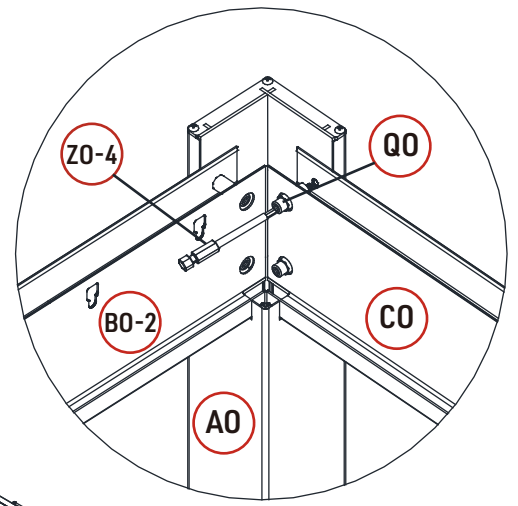
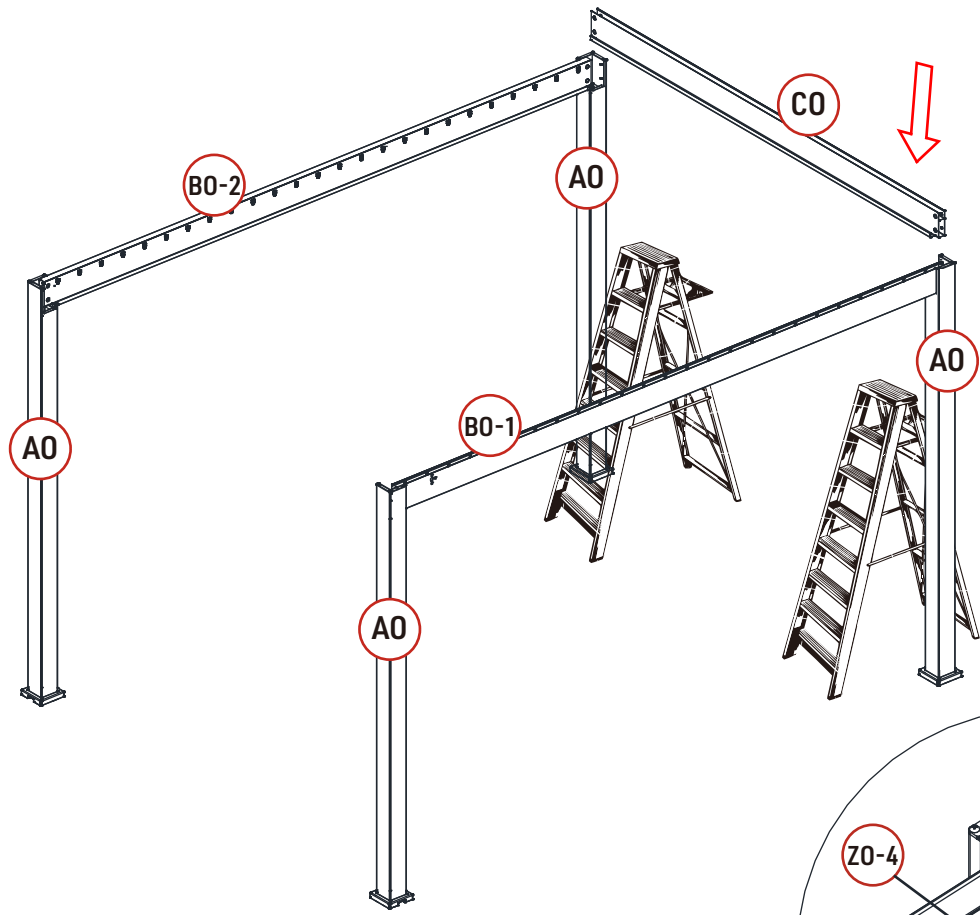


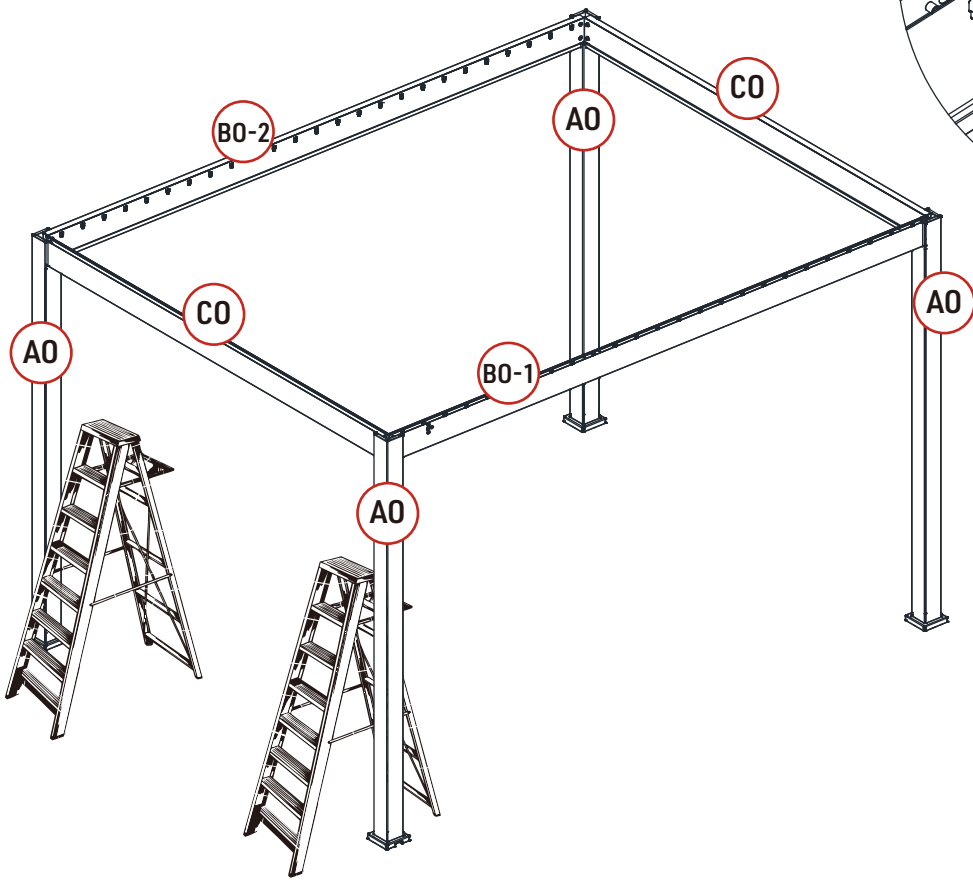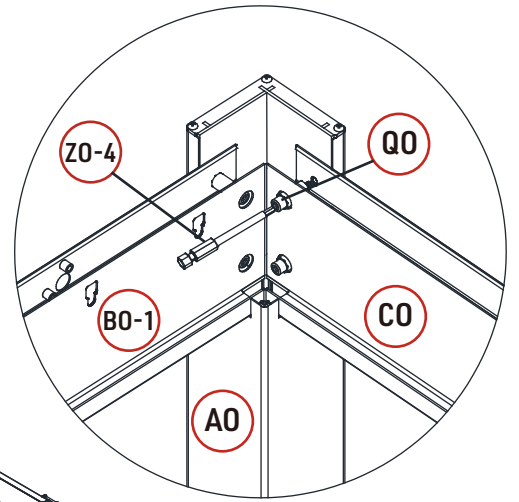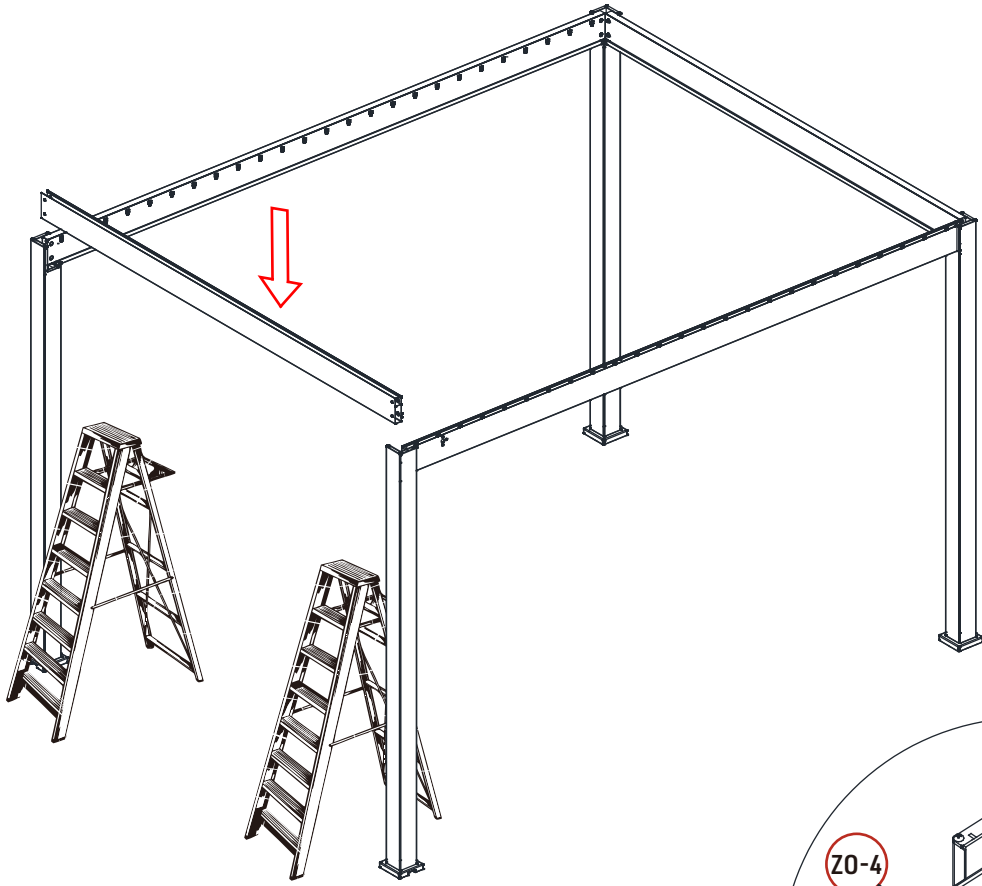

  **X1**

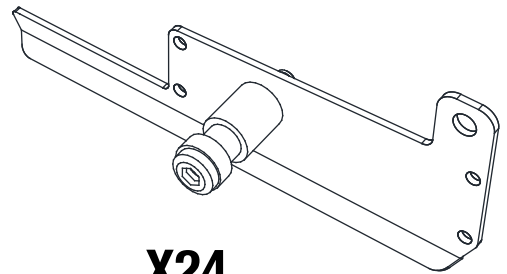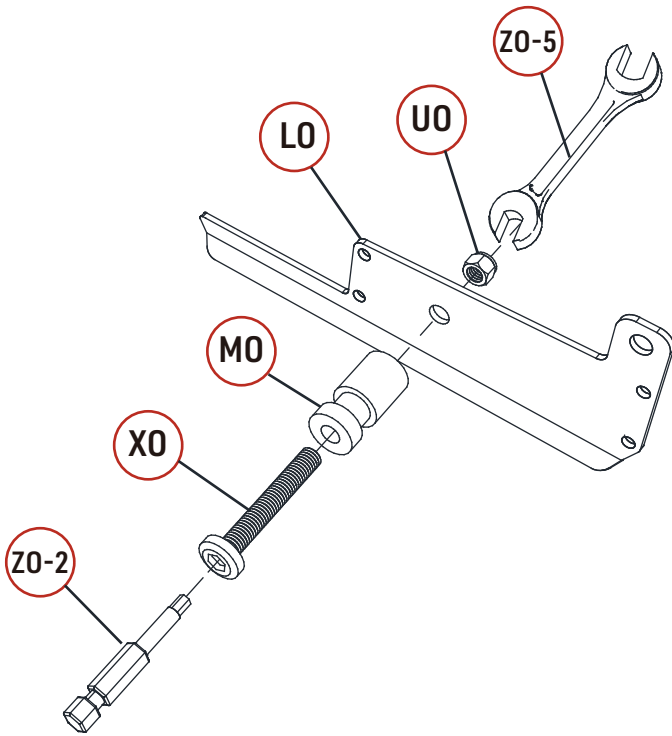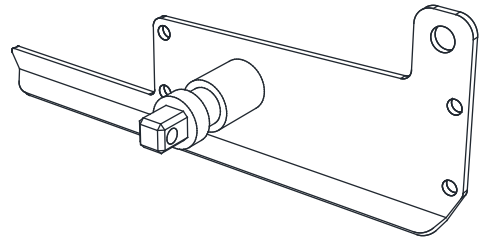


**X24**

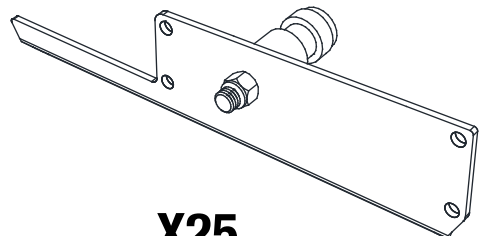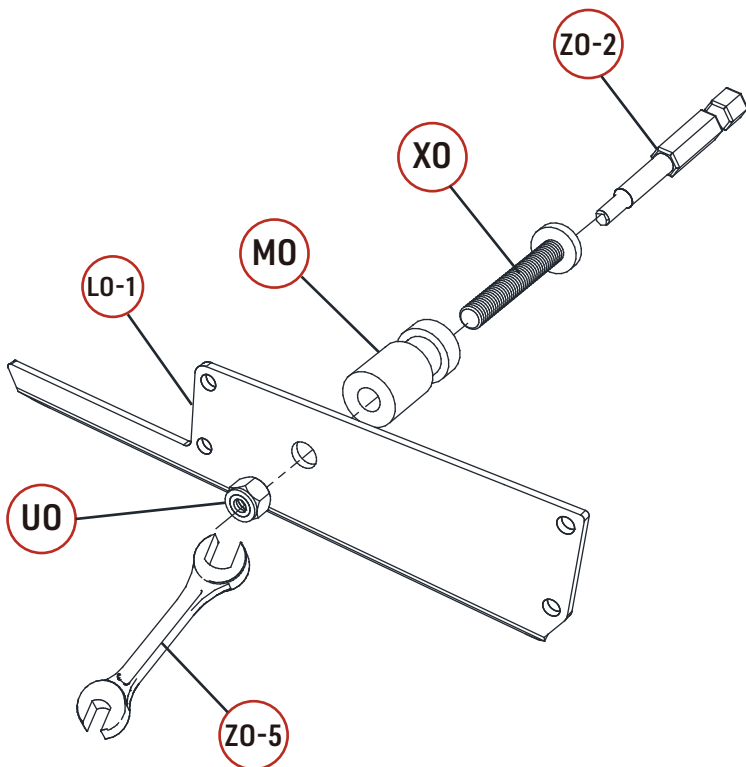

**X25**

# X1

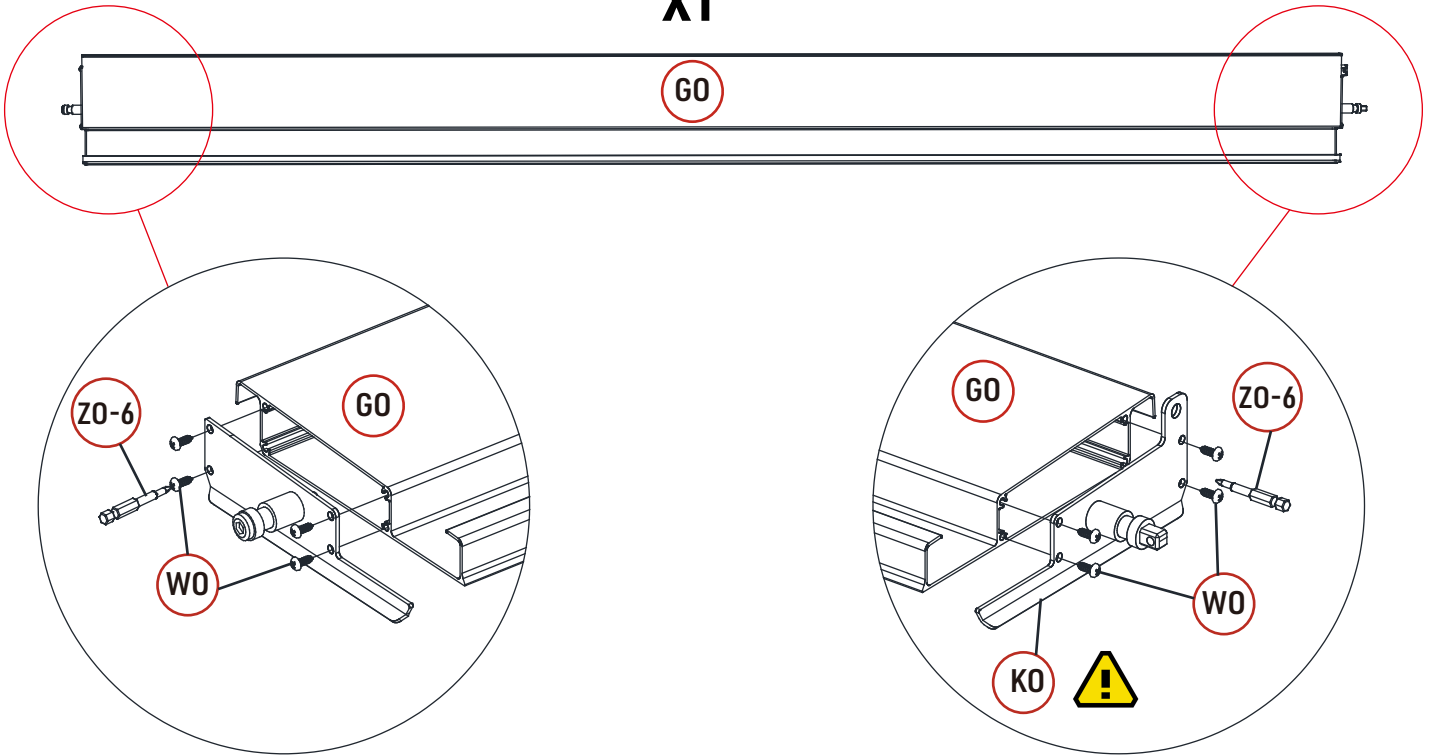

# X24

